

ECONTROLLY KHDT875-CE

ECONTROLLY KHDT875-CE Replacement Remote Control User Manual

Compatible with KONKA Box TV Models KHDT875-CE and KSDT863-M

1. INTRODUCTION

This manual provides detailed instructions for the ECONTROLLY KHDT875-CE Replacement Remote Control. This remote is specifically designed to be compatible with KONKA Box TV models KHDT875-CE and KSDT863-M, offering a direct replacement solution without the need for complex programming.

2. PRODUCT OVERVIEW

The ECONTROLLY KHDT875-CE remote control is constructed from durable ABS material, ensuring resilience against everyday use. It features soft silicone buttons for comfortable and flexible operation. The remote is engineered for a fast response time of 0.5 seconds and operates effectively within a range of 8 to 10 meters (26-33 feet).





Figure 1: Front view of the ECONTROLLY KHDT875-CE replacement remote control. This image displays the full layout of the remote's buttons, including power, number pad, navigation, volume, channel, and media control buttons.



18 cm / 7.09 in



Figure 2: Side view of the ECONTROLLY KHDT875-CE replacement remote control, illustrating its dimensions. The image shows the remote's length as 18 cm (7.09 inches) and width as 5 cm (1.97 inches).

3. SETUP

The ECONTROLLY KHDT875-CE remote control requires no programming or complex setup procedures. Simply install the appropriate batteries, and it will be ready for use.

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two new alkaline batteries (typically AAA, though not explicitly stated, refer to the compartment markings if present) according to the polarity indicators (+ and -) inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote control is ready to operate your compatible KONKA Box TV.

4. OPERATING INSTRUCTIONS

To operate your KONKA Box TV, point the remote control directly at the TV's infrared receiver. Ensure there are no obstructions between the remote and the TV.

4.1 Button Functions

- **ENC (Power):** Turns the TV on or off.
- **FAV (Favorite):** Accesses favorite channels or content.
- **MUDO (Mute):** Mutes or unmutes the TV audio.
- **Number Buttons (0-9):** Directly selects channels or inputs numerical data.
- **TV/RADIO:** Switches between TV and Radio modes.
- **VOL (Volume) +/-:** Adjusts the volume level.
- **PAG (Page) +/-:** Navigates through pages or channels.
- **MENU:** Opens the main menu of the TV.
- **GUIA (Guide):** Displays the electronic program guide (EPG).
- **INFO:** Shows information about the current program or content.
- **SALIR (Exit):** Exits from menus or current functions.
- **Directional Pad (Up, Down, Left, Right) & OK:** Navigates through menus and confirms selections.
- **F1, F2, F3, F4 (Colored Buttons):** Function buttons, their specific use may vary depending on the TV's interface or application.
- **APLIC (Applications):** Accesses smart TV applications.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Record):** Controls media playback.
- **AUDIO:** Selects audio tracks or modes.
- **SUB (Subtitles):** Toggles subtitles on or off.
- **RELOJ (Clock):** Displays or sets the clock/timer functions.
- **SERV (Services):** Accesses additional services or settings.

5. MAINTENANCE

5.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace all batteries at the same time with new ones of the same type. Do not mix old and new batteries, or different types of batteries.

5.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid using abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface or buttons.

5.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly inserted with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there is a clear line of sight between the remote control and the TV's infrared receiver.
 - Verify that the remote is pointed directly at the TV.
- **Limited operating range:**
 - Replace batteries if they are low.
 - Remove any obstructions between the remote and the TV.
 - Ensure you are within the specified operating range of 8-10 meters (26-33 feet).

7. SPECIFICATIONS

Feature	Specification
Model Number	KHDT875-CE
Brand	ECONTROLLY
Compatible TV Models	KONKA Box TV KHDT875-CE, KSDT863-M
Material	ABS
Button Material	Soft Silicone
Response Time	0.5 seconds
Operating Range	8-10 meters (26-33 feet)
Product Dimensions	5 x 1 x 0.25 inches (12.7 x 2.54 x 0.64 cm)
Item Weight	2.3 ounces (65.2 grams)
Power Source	Batteries (not included)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase

or contact the seller directly. The manufacturer, ECONTROLLY, can also be contacted for product-specific inquiries.

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DF2XHVFJ>

More documents and user manuals: <https://manuals.plus/>