

[manuals.plus](#) /› [ECONTROLLY](#) /› [ECONTROLLY RC-1097 Replacement Remote Control User Manual for DENON AV Receivers D-M37, DM37, RCD-M37](#)

## ECONTROLLY RC-1097

# ECONTROLLY RC-1097 Replacement Remote Control User Manual

For DENON AV Receiver Models D-M37, DM37, RCD-M37

## INTRODUCTION

---

Thank you for choosing the ECONTROLLY RC-1097 Replacement Remote Control. This remote is specifically designed to be compatible with DENON AV Receiver models D-M37, DM37, and RCD-M37, offering a direct replacement for your original remote without the need for complex programming.

This manual provides essential information on how to set up, operate, and maintain your new remote control to ensure optimal performance and longevity.



Image: Comparison of the ECONTROLLY RC-1097 replacement remote (left) and an original DENON remote (right). The replacement remote is designed to function identically.

## SETUP

The ECONTROLLY RC-1097 remote control requires no programming or complex setup. Simply install two new AAA alkaline batteries, and it will be ready for use with your compatible DENON AV Receiver.

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and lift it off.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

**Note:** Always use new alkaline batteries for best performance. Do not mix old and new batteries, or different types of batteries.

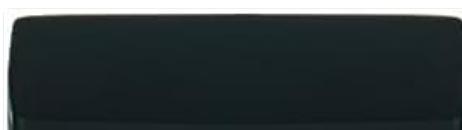




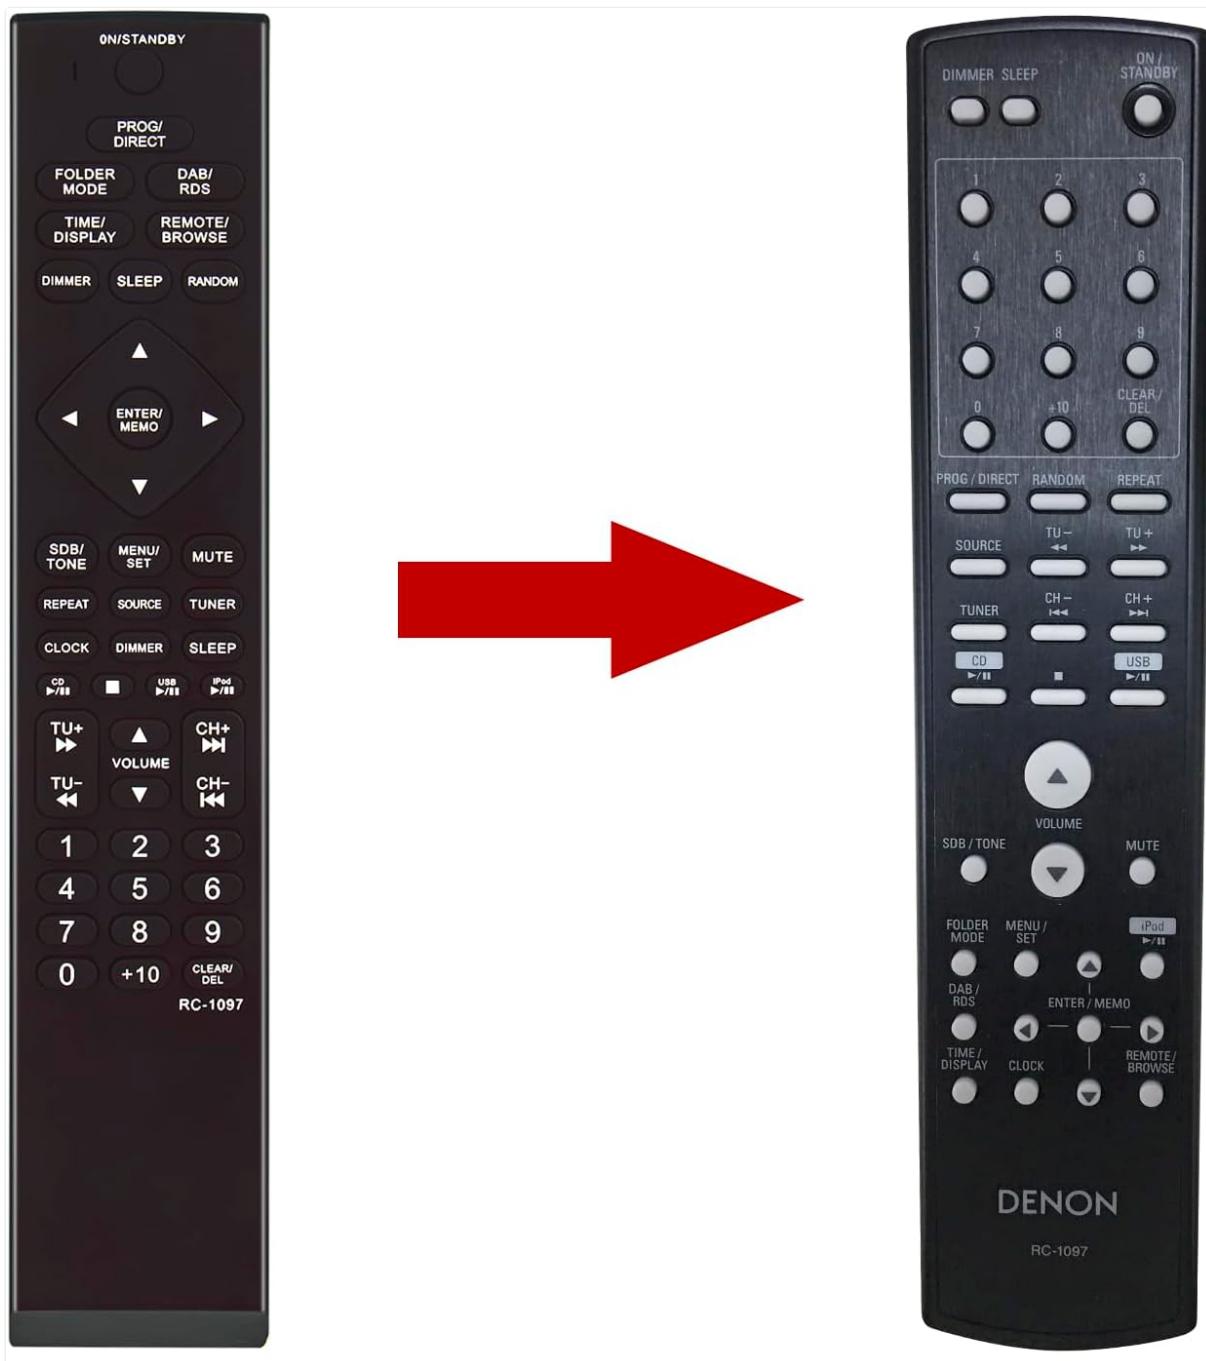


Image: The back of the RC-1097 remote control with the battery compartment open, illustrating the correct orientation for inserting two AAA batteries.

## OPERATING INSTRUCTIONS

The RC-1097 remote control provides full functionality for your DENON AV Receiver, mirroring the layout and functions of the original remote. Point the remote directly at your AV Receiver for optimal signal transmission.

### Key Functions Overview



Replace

Original

Image: Front view of the ECONTROLLY RC-1097 remote control, displaying all buttons for various functions.

- **ON/STANDBY:** Powers the AV Receiver on or off.
- **SOURCE:** Selects the input source (e.g., CD, TUNER, USB).
- **VOLUME (+/-):** Adjusts the master volume level.
- **MUTE:** Toggles audio mute on or off.
- **Navigation Buttons (Up, Down, Left, Right, ENTER/MEMO):** Used for menu navigation and selection.
- **Number Pad (0-9, +10):** Direct input for track numbers, radio presets, or other numerical selections.
- **Playback Controls (Play, Pause, Stop, Skip, Fast Forward, Rewind):** Controls media playback for compatible sources.
- **TUNER:** Accesses the tuner function.
- **CLOCK:** Displays or sets the clock.
- **DIMMER:** Adjusts display brightness.
- **SLEEP:** Sets the sleep timer.
- **FOLDER MODE / DAB/RDS / REMOTE/BROWSE / TIME/DISPLAY:** Specific function buttons depending on the AV Receiver's capabilities and current mode.

For detailed information on specific functions, please refer to your DENON AV Receiver's original user manual.

## MAINTENANCE

---

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface and buttons.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries simultaneously with new AAA alkaline batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the remote. Store in a cool, dry place away from direct sunlight.
- **Avoid Damage:** Do not drop the remote control, expose it to extreme temperatures, or immerse it in water.

## TROUBLESHOOTING

---

If you encounter issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
  - Check if the batteries are inserted correctly with the correct polarity (+/-).
  - Replace the batteries with fresh AAA alkaline batteries.
  - Ensure there are no obstructions between the remote control and the AV Receiver's infrared sensor.
  - Make sure you are within the effective operating range (approximately 8-10 meters or 26-33 feet) and pointing the remote directly at the receiver.
- **Specific Buttons Not Working:**
  - This is rare for a direct replacement remote. Ensure the AV Receiver is powered on and in the correct mode for the button's function (e.g., selecting 'CD' source before using playback

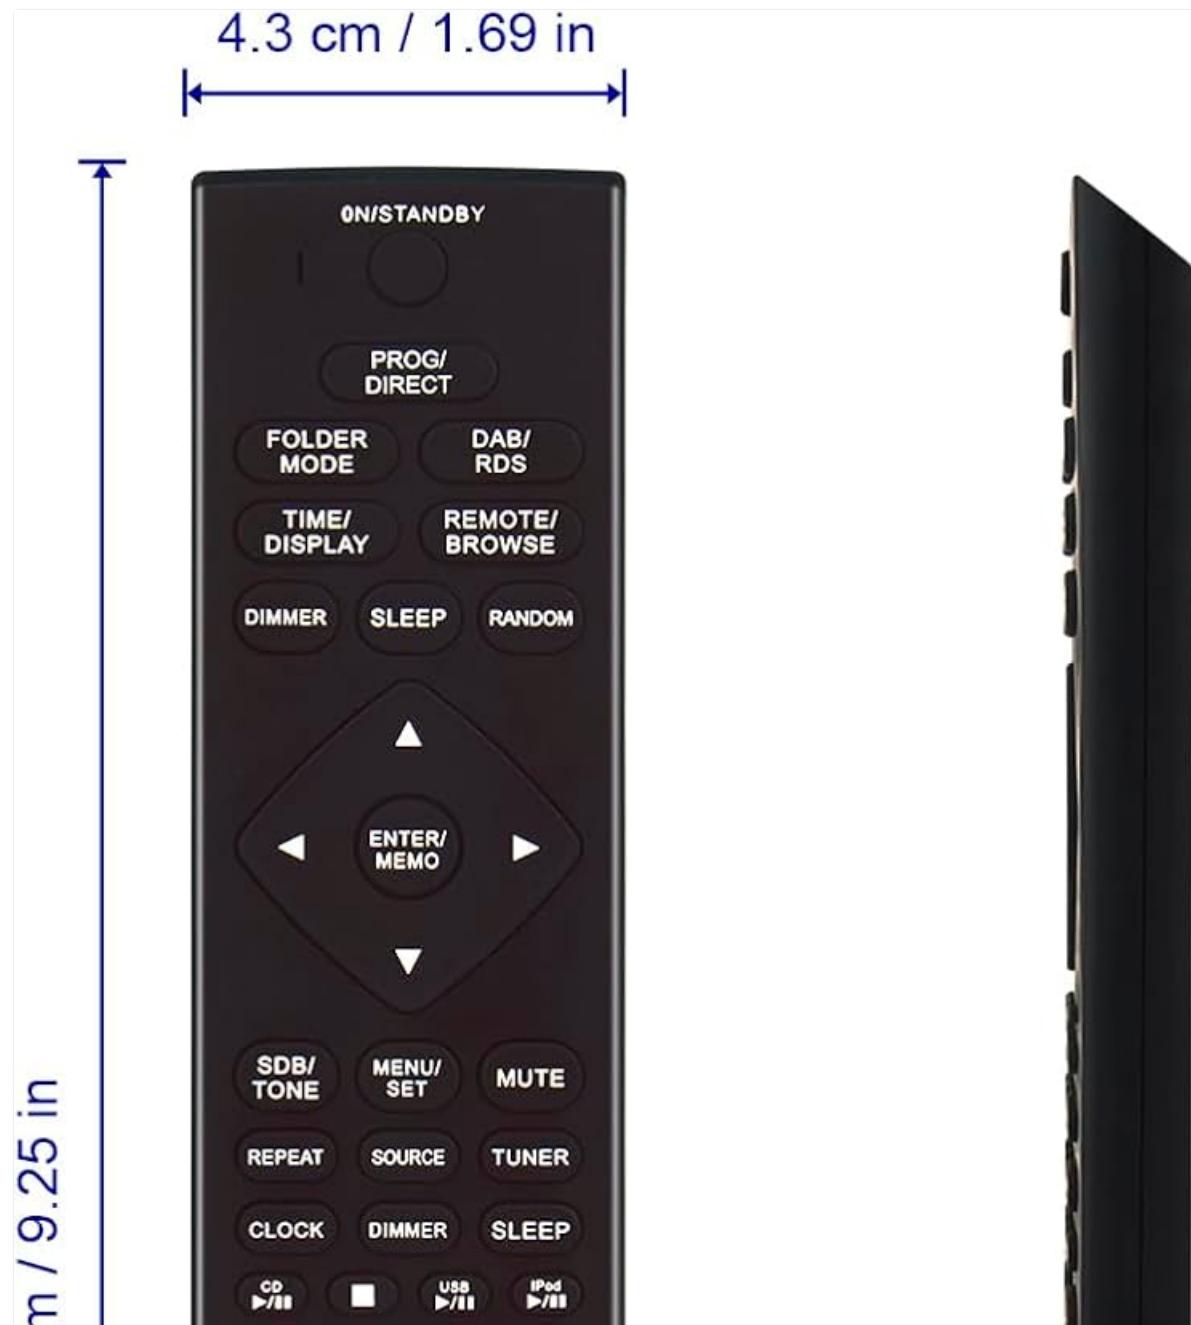
controls).

- If the issue persists after checking batteries and line of sight, the remote may be faulty.

If these steps do not resolve the issue, please contact ECONTROLLY customer support for further assistance.

## SPECIFICATIONS

- **Model:** RC-1097
- **Compatibility:** DENON AV Receiver models D-M37, DM37, RCD-M37
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Operating Distance:** Approximately 8-10 meters (26-33 feet)
- **Response Time:** Less than 0.5 seconds
- **Material:** ABS Environmental Protection Material
- **Color:** Black
- **Dimensions:** Approximately 5 x 1 x 0.25 inches (12.7 x 2.54 x 0.64 cm)
- **Item Weight:** Approximately 2.3 ounces (65 grams)



23.5 CI



Image: Side view of the RC-1097 remote control with approximate dimensions shown.

## **WARRANTY AND SUPPORT**

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the ECONTROLLY customer service directly. Details are typically available on the product packaging or the seller's website.

When contacting support, please have your product model (RC-1097) and purchase details ready.