

Manuals.plus /

› Effireli /

› Effireli GCBLTV02ADBBT Infrared Remote Control User Manual

Effireli YK-GCBLTV02ADBBT

Effireli GCBLTV02ADBBT Infrared Remote Control User Manual

Model: YK-GCBLTV02ADBBT | Brand: Effireli

1. INTRODUCTION

This manual provides instructions for the setup and operation of your Effireli GCBLTV02ADBBT Infrared Remote Control. This remote is designed as a replacement for various Kogan, Chiq, and Changhong HD LED TV models. It requires no programming or setup; simply insert batteries and begin operation.

Note: This is an infrared remote control and does not support voice functions.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Rear view of the remote control with the battery cover removed, illustrating the battery insertion process.

3. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for immediate use. Point the remote directly at your television's infrared receiver.



3.1 Basic Functions

- **Power (Red Button):** Turns the TV on or off.
- **Number Pad (0-9):** Directly input channel numbers.
- **Volume Up/Down (+/-):** Adjusts the audio volume.
- **Channel Up/Down (P[^]/P^v):** Changes TV channels sequentially.
- **Mute (Speaker Icon):** Mutes or unmutes the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Back (Arrow Icon):** Returns to the previous screen or menu.
- **Home (House Icon):** Accesses the TV's main home screen or smart TV interface.

3.2 Special Functions

- **Netflix, YouTube, Prime Video, Google Play:** Dedicated buttons for direct access to these streaming applications.
- **INFO:** Displays information about the current program or input.
- **EPG:** Accesses the Electronic Program Guide.
- **Settings (Gear Icon):** Opens the TV's settings menu.
- **USB:** Switches to USB input or accesses media from a connected USB device.
- **SUBT:** Toggles subtitles on or off.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward, Previous, Next):** Controls media playback.

4. COMPATIBILITY

The Effireli GCBLTV02ADBBT Infrared Remote Control is compatible with a wide range of Kogan, Chiq, and Changhong HD LED TV models. Some of the compatible models include, but are not limited to:

- Kogan Series 9: RF9220, XT9310, XU9250, XU9220, XU9210, RH9210, XT9510, XR9510, XT9610
- Kogan KALED Series: KALED40RF9310STA, KALED40RF9320STA, KALED58XU9230STA, KALED50XU9220STD, KAQLED55XQ9610STA, KALED24RH9310STA, KALED32RH9310STA, KALED43XT9610STA
- Chiq Models: U50H7A, L32H7S, L40H7S, U58H7S, U55H7A, U43H7A, U58H7A, U50G7H, U65G5L, U65QM8V, U55QM8V, U65G7P, U58G7P, U55G7P
- Changhong Models: L40K5, L40G7P, L24K3, L32K5, ATV40FHDG

If your specific TV model is not listed above or if your original remote control appears significantly different, please refer to the product listing or contact the seller to confirm compatibility before use.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Confirm the remote is pointed directly at the TV.
- **Specific buttons not working:**

- Check for any physical damage to the button.
- Ensure the remote is compatible with your specific TV model, as some advanced functions may vary between TV brands/models.

6. SPECIFICATIONS

Feature	Detail
Model Number	YK-GCBLTV02ADBBT
Connectivity Technology	Infrared
Special Feature	No Programming Required
Max Number of Supported Devices	1 (Television)
Item Weight	2.47 ounces
Package Dimensions	8.27 x 1.77 x 0.59 inches

7. WARRANTY AND SUPPORT

This product comes with a **30-day money-back guarantee** and a **12-month warranty** covering manufacturing defects. Returns and exchanges are accepted within the warranty period.

For further assistance, troubleshooting, or warranty claims, please contact the seller directly through your purchase platform. Provide your model number (YK-GCBLTV02ADBBT) and a detailed description of the issue for prompt support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DF2Z3KQL>

More documents and user manuals: <https://manuals.plus/>