

Effireli YK-eo

Effireli YK-eo Infrared Replacement Remote Control User Manual

Model: YK-eo | Brand: Effireli

INTRODUCTION

This manual provides instructions for the Effireli YK-eo Infrared Replacement Remote Control. This remote is designed to be a direct replacement for specific EKO TV models, offering immediate functionality without complex setup.

Compatible EKO TV Models:

- K240HSG
- K320HSG
- K58USG
- K400FSG
- K43FSG11

Note: If your EKO TV model is not listed, or if your original remote differs significantly in appearance, please verify compatibility before use.

SETUP AND FIRST USE

The Effireli YK-eo remote control is designed for immediate use with compatible EKO TV models. No programming or pairing is required.

1. **Install Batteries:** Open the battery compartment cover on the back of the remote control. Insert two AAA batteries (not included), ensuring correct polarity (+ and -). Close the battery compartment cover securely.
2. **Point and Operate:** Point the remote control directly at your EKO TV. The remote should function immediately for basic operations such as power, volume, and channel selection.



Image 1: Front view of the Effireli YK-eo Infrared Replacement Remote Control, showing all buttons.

OPERATING INSTRUCTIONS

This section outlines the primary functions of the remote control buttons.



Image 2: Multiple views of the Effireli YK-eo remote control, including front, side, and back.

- **Power Button (Red):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.

- **Volume Up/Down (VOL +/-):** Adjusts the TV's volume level.
- **Channel Up/Down (P +/-):** Changes the TV channel sequentially.
- **Mute:** Silences the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Back/Return:** Returns to the previous screen or menu.
- **Home:** Accesses the TV's main menu or smart TV interface.
- **Input/Source:** Selects the input source (e.g., HDMI 1, AV).
- **Netflix, YouTube, Prime Video, Google Play Buttons:** Direct access to these streaming applications (functionality depends on TV model and internet connection).
- **MTS, SUBTITLE, TTX, AD, USB:** These buttons provide access to specific TV functions such as Multi-channel Television Sound, subtitles, teletext, audio description, and USB media playback. Their availability and function depend on the specific EKO TV model.

MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your remote control, follow these guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

TROUBLESHOOTING

If you experience issues with your Effireli YK-eo remote control, refer to the following common solutions:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote has limited range or intermittent response.	Weak batteries; obstruction between remote and TV; remote sensor on TV is blocked.	Replace batteries. Ensure a clear line of sight to the TV's infrared sensor. Remove any obstructions.
Specific buttons not working.	Button malfunction; TV model incompatibility for advanced features.	Clean around the button. Verify your TV model is fully compatible with all remote functions.
Remote does not control the TV at all.	Incompatible TV model.	Confirm your EKO TV model is listed in the "Compatible Models" section. If not, this remote may not be suitable.

SPECIFICATIONS

- **Model:** YK-eo
- **Brand:** Effireli

- **Type:** Infrared Replacement Remote Control
- **Compatible Devices:** EKO Televisions
- **Compatible EKO TV Models:** K240HSG, K320HSG, K58USG, K400FSG, K43FSG11
- **Special Feature:** No Programming Required
- **Color:** Black
- **Power Source:** 2 x AAA Batteries (not included)
- **Item Weight:** 3.17 ounces (approx. 90 grams)
- **Package Dimensions:** 9.65 x 1.97 x 0.59 inches (approx. 24.5 x 5 x 1.5 cm)

WARRANTY AND SUPPORT

This Effireli remote control comes with a **12-month warranty** covering manufacturing defects from the date of purchase. Additionally, a **30-day money-back guarantee** is offered. Returns and exchanges are accepted within the warranty period for eligible issues. For support or warranty claims, please contact your retailer or the manufacturer directly with your purchase details.

© 2024 Effireli. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question