

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Effireli](#) /

› Effireli QT1D Replacement Remote Control User Manual for Soniq TVs

Effireli YK-QT1D

Effireli QT1D Replacement Remote Control User Manual

For Soniq TV Models

INTRODUCTION

This manual provides instructions for the Effireli QT1D replacement remote control, designed for various Soniq TV models. This remote control requires no programming or setup; it is ready for use upon battery installation. Please refer to this guide for proper operation, maintenance, and troubleshooting.



Figure 1: Effireli QT1D Replacement Remote Control

SETUP

Battery Installation

To prepare your remote control for use, follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



OPERATING INSTRUCTIONS

The Effireli QT1D remote control is designed for intuitive operation. Simply point the remote towards your Soniq TV and press the desired function button.

Button Layout and Functions



Figure 3: Remote Control Button Layout

Key Button Functions

Button	Function
POWER	Turns the TV on or off.
MUTE	Mutes or unmutes the TV audio.
DVD	Switches to DVD input (if applicable).
P.MODE / S.MODE	Picture Mode / Sound Mode selection.
SUBTITLE / I-II/AUDIO / INFO	Subtitle control, audio language selection, and information display.
0-9 (Number Buttons)	Direct channel selection.
FAV	Accesses favorite channels.
SLEEP	Sets the sleep timer.
PAUSE	Pauses playback.
ASPECT	Adjusts the screen aspect ratio.
MENU	Opens the TV's main menu.
SOURCE	Selects input source (HDMI, AV, etc.).
Navigation (Up, Down, Left, Right, OK)	Navigates through menus and confirms selections.
EXIT	Exits the current menu or function.
EPG	Displays the Electronic Program Guide.
VOL +/-	Adjusts the volume level.
CH ^/v	Changes channels up or down.
SETUP	Accesses setup options.
REC / CANCEL	Records content or cancels current action.
PLAY/PAUSE, STOP, REWIND, FAST FORWARD (Media Controls)	Controls media playback.
USB/SD	Switches to USB/SD input.

COMPATIBLE MODELS

This Effireli QT1D replacement remote control is compatible with a wide range of Soniq TV models. Please verify your TV model number against the list below to ensure compatibility:

- QT166, QT155S, QT155
- E24Z15B, E23Z13A-AU, E23Z15A-AU, E24Z15B-AU
- E32V15B-AU, E32V15D-AU, E32V16B-AU, E32V17A-AU, E32V17B-AU
- E32W13A-AU, E32W13B-AU, E32W13D-AU

- E40V14A-AU, E40V14B-AU, E40V16A-AU
- E40W13A-AU, E40W13C-AU
- E42V14A-AU, E43V15B-AU, E43V15C-AU, E43V15D-AU
- E48W13A-AU, L32V12B-AU
- E24HZ17B-AU, E32HV18A-AU, E42FV16A-AU, E48FH16A-AU, E55FV16A-AU
- S55UV16A-AU, S55UV16B-AU, S65UX16A-AU
- E24Z15B-AU REVA, E43V15C-AU REV.B, E32HV18A-AU REV.A
- QSL460XTV2, QSL422XT, QSL402XTV2, QSL323CT1, QSL322TV2, QSL322T
- GAR1, QT185
- S55V16A-AU, S55V14B-AU, E48W73A-AU, E55S12A, 51E12A
- L47V12A-AL, P51E12A, L47V12A, L42D11A
- S65UX16A-AU REV.A

Note: If your specific Soniq TV model number is not listed above, or if your original remote control appears significantly different, please contact customer support to confirm compatibility before use.

MAINTENANCE

Proper care will extend the life of your remote control:

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage. Store in a cool, dry place.
- **Avoid Exposure:** Do not expose the remote control to direct sunlight, extreme temperatures, high humidity, or water.

TROUBLESHOOTING

If you encounter issues with your remote control, try the following solutions:

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Check if there is a clear line of sight between the remote and the TV's infrared sensor. Remove any obstructions.
 - Ensure you are within the effective range of the TV's IR receiver.
- **Specific Buttons Not Working:**
 - Clean the remote control, especially around the non-functioning buttons, to remove any dirt or debris that might be obstructing them.
 - If only certain buttons are unresponsive after trying new batteries, the remote may be faulty.
- **TV Not Responding to Any Remote:**
 - Check if the TV itself is powered on and functioning correctly.
 - Try using the physical buttons on the TV to confirm it is operational.
 - Unplug the TV from the power outlet for a few minutes, then plug it back in to reset it.

If these steps do not resolve the issue, please refer to the Warranty and Support section for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	YK-QT1D
Brand	Effireli
Connectivity Technology	Infrared (IR)
Compatible Devices	Television (Soniq)
Max Number of Supported Devices	1
Special Feature	No Programming Required
Item Weight	2.82 ounces
Package Dimensions	9.21 x 3.15 x 1.46 inches

WARRANTY AND SUPPORT

Your Effireli QT1D replacement remote control comes with the following assurances:

- **Money-Back Guarantee:** A 30-day money-back guarantee is provided from the date of purchase.
- **Warranty:** A 12-month warranty covers manufacturing defects. Returns and exchanges are accepted within this warranty period.

For warranty claims, technical support, or to confirm compatibility for unlisted models, please contact the seller directly. Contact information is typically available through your purchase platform or seller profile.

© 2024 Effireli. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DF3249N7>

More documents and user manuals: <https://manuals.plus/>