

[Manuals.plus](#) /

> [ORFOFE](#) /

> ORFOFE Plastic Trash Can Lid Latch Replacement (Model: 9FX110020EMQJ) - Instruction Manual

ORFOFE 9FX110020EMQJ

ORFOFE Plastic Trash Can Lid Latch Replacement

MODEL: 9FX110020EMQJ - INSTRUCTION MANUAL

1. Introduction

This manual provides instructions for the installation, operation, and maintenance of the ORFOFE Plastic Trash Can Lid Latch Replacement. This product is designed to replace worn or broken latches on outdoor plastic trash cans, specifically those with a capacity of 120 liters, ensuring the lid remains securely closed.

Package Contents:

- 4 x Plastic Trash Can Lid Latches



This image displays the four plastic trash can lid latches included in the package, highlighting their design.

2. Product Overview

The ORFOFE Plastic Trash Can Lid Latch is a durable and versatile replacement component for outdoor garbage and recycling bins. Constructed from robust plastic, it is designed to withstand outdoor conditions and provide a secure closure for trash can lids.

Key Features:

- **Material:** High-quality plastic for durability.
- **Compatibility:** Suitable for most 120L outdoor plastic trash cans.
- **Installation:** Designed for tool-free, user-friendly installation.
- **Function:** Enhances lid stability, preventing accidental opening, especially in windy conditions.

unique design



Suitable for garbage bins with a capacity of 120L and strong versatility.

A detailed view of one plastic trash can lid latch, showing its structure and material.




This image illustrates the versatility of the latch, suitable for different types and colors of 120L outdoor plastic trash cans.

3. Setup and Installation

The ORFOFE Plastic Trash Can Lid Latch is designed for straightforward, tool-free installation. Follow these steps to replace your trash can lid latches:

1. **Identify Latch Location:** Locate the existing hinge or latch points on your trash can lid and the corresponding slots on the trash can body.
2. **Remove Old Latches (if applicable):** If old latches are present, carefully remove them.
3. **Align New Latch:** Take one new plastic latch. Align its base with the designated slot on the trash can body and the upper part with the lid's hinge point.
4. **Insert and Secure:** Gently but firmly press the latch into place. Ensure it snaps securely into both the trash can body and the lid, creating a stable connection.
5. **Test Functionality:** Open and close the trash can lid several times to confirm that the new latch is properly installed and provides a secure closure.
6. **Repeat:** Install the remaining latches as needed for your trash can.

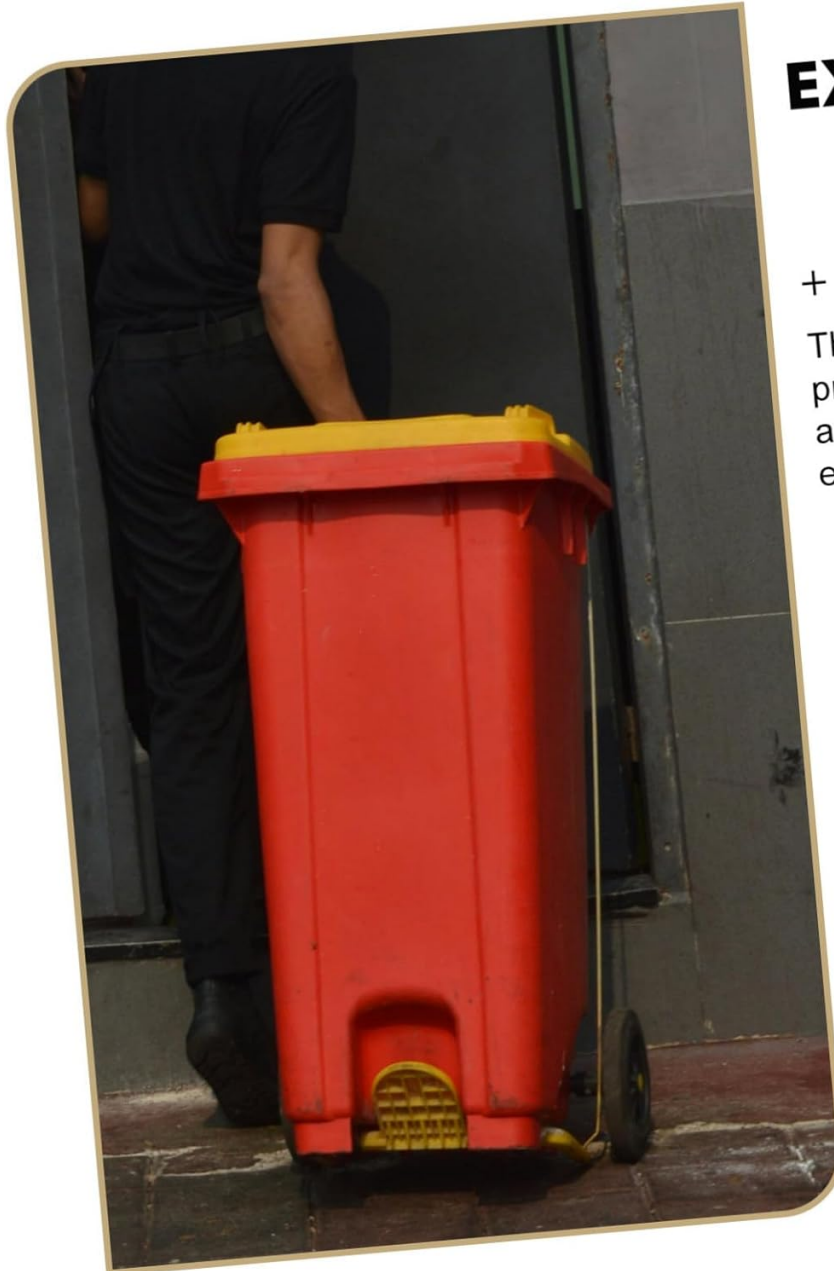

EXQUISITE

+

The workmanship of this product is perfect, and you will have a good experience in using it.



This image emphasizes the simple and practical design of the latch, making installation straightforward.

4. Operating Instructions

Once the latches are installed, operating your trash can lid is simple:

- **Opening the Lid:** Lift the trash can lid as you normally would. The latches are designed to allow for smooth opening and closing.
- **Closing the Lid:** Lower the lid until it rests firmly on the trash can body. Ensure the latches engage properly to secure the lid. A slight push may be necessary to ensure a tight seal.

5. Maintenance

To ensure the longevity and optimal performance of your ORFOFE Plastic Trash Can Lid Latches, follow these simple maintenance guidelines:

- **Cleaning:** Periodically wipe the latches with a damp cloth to remove dirt, dust, or debris. Avoid using harsh chemicals that may degrade the plastic.
- **Inspection:** Regularly inspect the latches for any signs of wear, cracks, or damage. If a latch appears

compromised, replace it promptly to maintain lid security.

- **Environmental Factors:** While designed for outdoor use, extreme temperatures or prolonged exposure to direct sunlight can affect plastic over time. Consider positioning your trash can in a shaded area if possible.

6. Troubleshooting

If you encounter any issues with your ORFOFE Plastic Trash Can Lid Latches, refer to the following troubleshooting tips:

- **Lid Not Closing Securely:**
 - Ensure the latches are fully inserted into both the lid and the trash can body.
 - Check for any obstructions preventing the lid from seating properly.
 - Verify that the latches are correctly aligned with the hinge points.
- **Latch Appears Loose or Detached:**
 - Re-seat the latch by pressing it firmly into its designated slots.
 - Inspect the latch and the trash can's hinge points for any damage that might prevent a secure fit. If damaged, replacement may be necessary.
- **Difficulty Opening/Closing:**
 - Ensure the latches are not jammed or obstructed.
 - Clean any dirt or debris from around the latch mechanism.

7. Specifications

Feature	Detail
Brand	ORFOFE
Model Number	9FX110020EMQJ
Material	Plastic
Color	Black
Item Weight	1.6 ounces (per 4 latches)
Product Dimensions	3.54 x 1.3 x 1.3 inches (9.00 x 3.30 x 3.30 cm)
Compatibility	Suitable for 120L outdoor plastic trash cans
Included Components	Pin

8. Warranty and Support

For any questions, concerns, or support regarding your ORFOFE Plastic Trash Can Lid Latch Replacement, please contact the manufacturer directly. While specific warranty details are not provided in this manual, the manufacturer is committed to customer satisfaction.

You can typically find contact information for ORFOFE through their official website or the retailer from whom the product was purchased.

ORFOFE Plastic Trash Can Lid Latch Replacement - Instruction Manual

Model: 9FX110020EMQJ