

Singer M1150

SINGER M1150 Lightweight & Portable Sewing Machine User Manual

Model: M1150

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your SINGER M1150 Lightweight & Portable Sewing Machine. Please read this manual thoroughly before using your machine to ensure proper function and to maximize its lifespan. The SINGER M1150 is designed for ease of use, offering 45 stitch applications, an LED light, and a 4-step buttonhole feature, making it suitable for various sewing projects from mending to crafting.

SAFETY INFORMATION

Always follow basic safety precautions when using an electrical appliance to reduce the risk of burns, fire, electric shock, or injury to persons.

- Do not leave the machine unattended when plugged in.
- Unplug from the outlet before cleaning, removing covers, or when not in use.
- Use this appliance only for its intended use as described in this manual.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Keep fingers away from all moving parts. Special care is required around the sewing machine needle.
- Always use the proper needle plate. The wrong plate can cause the needle to break.
- Do not pull or push fabric while stitching. This may deflect the needle causing it to break.
- Turn the sewing machine off when making any adjustments in the needle area, such as threading the needle, changing the needle, threading the bobbin, or changing the presser foot.

INCLUDED ACCESSORIES

Your SINGER M1150 sewing machine comes with the following essential accessories:

Included In Box



Image: The SINGER M1150 sewing machine with its included accessories, such as bobbins, needles, screwdriver, seam ripper/brush, all-purpose foot, buttonhole foot, and zipper foot, displayed neatly in front of it.

- All-Purpose Foot
- Buttonhole Foot
- Zipper Foot
- Seam Ripper/Brush
- Screwdriver
- Bobbins
- Needles (Pack of Needles)

SETUP

1. Unpacking and Placement

Carefully remove the sewing machine from its packaging. Place the machine on a stable, flat surface, ensuring there is enough space for your sewing projects. Connect the power cord to the machine and then to a suitable electrical outlet.

2. Threading the Machine

The SINGER M1150 features easy-to-follow threading guides to simplify the process. Follow the numbered path indicated on the machine for correct upper thread tension and needle threading.



Image: A close-up view of the SINGER M1150 sewing machine highlighting the easy-to-follow threading guides, indicated by numbers and arrows on the machine's body, ensuring correct thread path.

3. Winding and Inserting the Bobbin

The machine is equipped with a convenient top drop-in bobbin system. Follow the instructions for winding the bobbin evenly and then insert it into the bobbin case, ensuring the thread is correctly routed through the tension spring.



Image: A detailed view of the SINGER M1150 sewing machine's needle plate area, clearly showing the transparent cover over the top drop-in bobbin, indicating its easy accessibility.

OPERATING INSTRUCTIONS

1. Stitch Selection

Your SINGER M1150 offers 16 built-in stitches and 45 stitch applications. To select a stitch, simply turn the stitch selector dial located on the front of the machine. The machine features preset stitch length and width, eliminating guesswork and ensuring consistent results.



Easy Stitch Selection



45 Stitch Applications



Preset Stitch Length & Width



Image: A composite image illustrating key features of the SINGER M1150: the easy stitch selection dial, a visual representation of 45 stitch applications, and the preset stitch length and width settings for simplified operation.

2. 4-Step Buttonhole

Create perfect buttonholes with the integrated 4-step buttonhole feature. Follow the markings on the stitch selector dial and the buttonhole foot to complete each step accurately, resulting in professional-looking buttonholes.

3. Free Arm Sewing

To sew tubular items like cuffs, sleeves, or pant hems, remove the accessory storage compartment to reveal the free arm. This allows fabric to be easily maneuvered around the narrow arm for circular stitching.

4. Reverse Sewing

To secure stitches at the beginning and end of a seam, press and hold the reverse sewing lever. The machine will sew in reverse as long as the lever is held down, preventing unraveling and adding durability to your seams.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your sewing machine.

- **Cleaning:** Regularly clean lint and dust from the bobbin area and feed dogs using the provided brush. Unplug the machine before cleaning.
- **Needle Replacement:** Replace the needle frequently, especially after every 8-10 hours of sewing or if it becomes bent, dull, or burred. Use only SINGER brand needles for best results.
- **Lubrication:** Your SINGER M1150 is designed to be maintenance-free in terms of lubrication. Do not oil the machine.

TROUBLESHOOTING

Here are some common issues and their solutions:

Problem	Possible Cause	Solution
Needle breaking	Incorrect needle size for fabric, bent needle, pulling fabric while sewing, incorrect needle insertion.	Use correct needle, replace bent needle, guide fabric gently, re-insert needle correctly.
Skipped stitches	Incorrect needle, needle inserted incorrectly, machine not threaded properly.	Change needle, re-insert needle, re-thread machine completely.
Thread breaking	Improper threading, incorrect tension, poor quality thread, burr on needle or machine parts.	Re-thread machine, adjust tension, use good quality thread, check for burrs.
Fabric not feeding	Feed dogs lowered, lint in feed dogs.	Raise feed dogs, clean feed dog area.

SPECIFICATIONS

Model: SINGER M1150

Dimensions: 41D x 15W x 32H Centimetres

Item Weight: 4.72 kg

Material: Metal, Plastic

Stitch Applications: 45

Built-in Stitches: 16

Buttonhole: 4-step

Lighting: LED Light

Bobbin Type: Top Drop-in

Free Arm: Yes

SUPPORT AND RESOURCES

For additional support, product manuals, and to register for a free Beginner's Machine Class, please visit the official SINGER website:

- [SINGER Support Page](#)
- [Beginner's Machine Class](#)

SINGER sewing machines are delivered pre-threaded and factory tested to ensure quality assurance.

Related Documents - M1150

SINGER® HD6380

English

1	STITCHES	110
2	STITCHES	110
3	STITCHES	110
4	STITCHES	110
5	STITCHES	110

110

[SINGER HD6380 Sewing Machine Stitch Applications Guide](#)

A comprehensive guide to 110 stitch applications for the SINGER HD6380 sewing machine, covering straight, zigzag, multi-step zigzag, blind hem, picot hem, decorative, overlock, and bartack buttonhole stitches for various sewing projects and fabric types.

INSTRUCTION MANUAL

M1150 / M1155



SINGER

[SINGER M1150/M1155 Instruction Manual: Setup, Operation, and Maintenance](#)

Comprehensive instruction manual for the SINGER M1150 and M1155 sewing machines. Covers safety, setup, threading, stitch selection, maintenance, and troubleshooting.

M3330 Sewing Machine

English

1	STITCHES	97
2	STITCHES	97
3	STITCHES	97
4	STITCHES	97
5	STITCHES	97

97

[SINGER M3330 Sewing Machine: Features and Specifications](#)

Explore the SINGER M3330 sewing machine, a special edition model featuring 97 stitch applications, 23 built-in stitches, a one-step buttonhole, and a heavy-duty metal frame. Ideal for all types of sewing.

SINGER® HD6380

 
English

1	STITCHES	110
2	STITCHES	110
3	STITCHES	110
4	STITCHES	110
5	STITCHES	110


110

[SINGER HD6380 Sewing Machine Stitch Guide](#)

A comprehensive guide to various sewing machine stitches and their applications for the SINGER HD6380 model, including straight, zigzag, multi-step zigzag, blind hem, picot hem, decorative, straight stretch, reinforced zigzag, honeycomb, overlock, slant overedge, and bartack buttonhole stitches. Learn about techniques like seaming, quilting, topstitching, darning, applique, gathering, pleating, zipper insertion, hemming, couching, and attaching trims.


	SINGER HD6330M, HD6335M, HD6380 Heavy Duty Sewing Machine Instruction Manual This instruction manual provides comprehensive guidance for operating and maintaining SINGER HD6330M, HD6335M, and HD6380 household sewing machines. It covers essential safety instructions, machine parts, threading, bobbin winding, stitch selection, buttonhole sewing, and troubleshooting, ensuring optimal performance and longevity for your sewing projects.
	Singer Stitch Quick+ Instruction Manual Comprehensive instruction manual for the Singer Stitch Quick+ handheld sewing machine, covering safety, operation, threading, bobbin winding, needle changing, and troubleshooting.

Documents - Singer – M1150

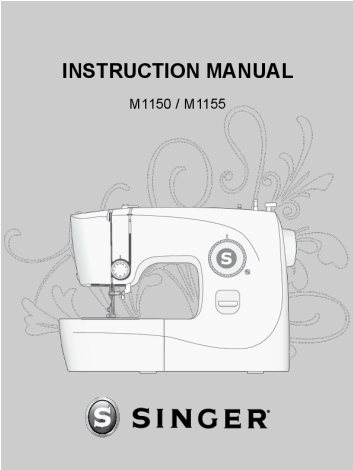

[Singer M1150/M1155 Sewing Machine Instruction Manual](#)

Comprehensive instruction manual for the Singer M1150 and M1155 sewing machines, covering setup, operation, maintenance, and troubleshooting.
lang:en score:35 filesize: 3.86 M page_count: 24 document date: 2021-12-15

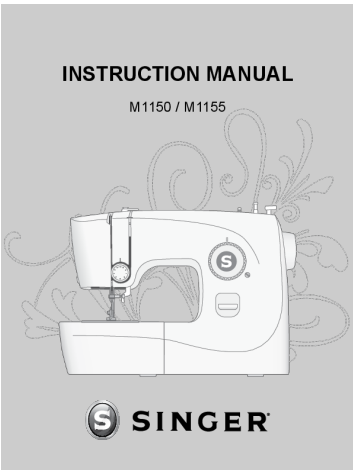

[SINGER M1150/M1155 Instruction Manual: Setup, Operation, and Maintenance](#)

Comprehensive instruction manual for the SINGER M1150 and M1155 sewing machines. Covers safety, setup, threading, stitch selection, maintenance, and troubleshooting.
lang:en score:31 filesize: 1.21 M page_count: 24 document date: 2024-05-13




[\[pdf\]](#)

MANUALE DI ISTRUZIONI Singer Manualsmanuals singer â° Retrieve 1040 manuals Manuals |||

MANUALE DI ISTRUZIONI M1150 / M1155 ISTRUZIONI IMPORTANTI PER LA SICUREZZA Leggere attentamente le istruzioni prima di utilizzare questa macchina per cucire per uso domestico. Durante l'uso dell'apparecchiatura, seguire sempre le precauzioni di sicurezza di base, ivi compreso quanto segue: Conserv...

lang:it **score:28** filesize: 3.86 M page_count: 24 document date: 2021-12-15

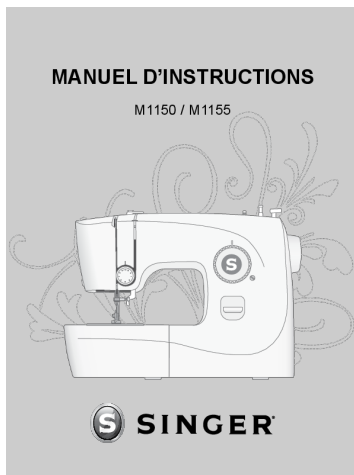


[\[pdf\]](#) Instructions

Untitled MANUEL D INSTRUCTIONS widen net Page 2 IMPORTANTES CONSIGNES DE SÉCURITÉ 471102931A Français ©2021 The Singer Company Limited SARL ou ses sociétés affiliées M1150 FR svpworldwide content fzuxopibdy u cko5pg |||

MANUEL D INSTRUCTIONS M1150 / M1155 IMPORTANTES CONSIGNES DE SCURIT Lisez attentivement toutes les consignes avant d'utiliser cette machine coudre usage domestique. Lors de l'utilisation d'un appareil électrique, les précautions de sécurité essentielles doivent toujours être respectées, y compris les ...

lang:fr **score:28** filesize: 1.22 M page_count: 24 document date: 2024-05-13

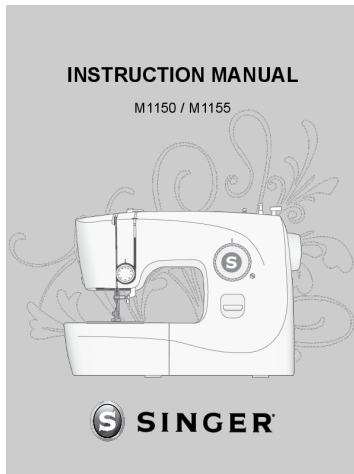


[\[pdf\]](#) User Manual Instructions

INSTRUCTION MANUALm media amazonB1KfGP0UKdLm amazon images I B1KfGP0UKdL |||

INSTRUCTION MANUAL **M1150** / M1155 IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this household sewing machine. When using an electrical appliance, basic safety precautions should always be followed, including the following: Keep the instructions at a suitable place close to the m...

lang:en **score:25** filesize: 3.86 M page_count: 24 document date: 2021-12-15

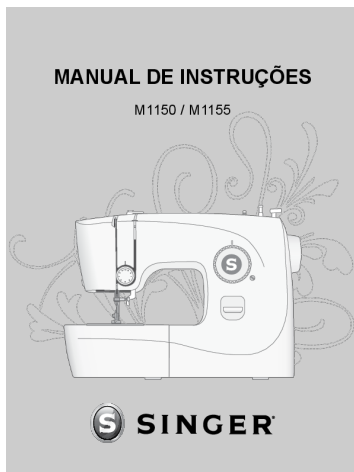


[\[pdf\]](#) User Manual

Untitled MANUAL DE INSTRUÇÕES widen net Puxe todo o pino porta carretel 2 Coloque um de linha no 3 Passe a trás para frente através da guia A M1150 PT svpworldwide content kos2zqiviv u cko5pg |||

MANUAL DE INSTRUES **M1150** / M1155 INSTRUES DE SEGURANA

IMPORTANTES Leia todas as instrues antes de usar a mquina de costura domstica. Quando for usar um equipamento eltrico, siga sempre as medidas bsicas de segurana, entre elas: Mantenha as instrues em um local adequado, perto da mquina. Se a mquin...

lang:pt **score:21** filesize: 1.2 M page_count: 24 document date: 2024-05-13

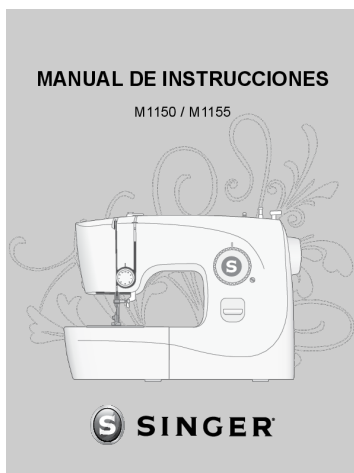

[\[pdf\]](#) User Manual

Untitled MANUAL DE INSTRUCCIONES widen net la máquina esté apagada antes de insertar o retirar bobina 1 Quite tapa canilla A deslizándola hacia adelante 2 Inserte en la M1150 ES svpworldwide content nvgs31qk3 u cko5pg |||


MANUAL DE INSTRUCCIONES **M1150** / M1155 INSTRUCCIONES DE

SEGURIDAD IMPORTANTES Lea las instrucciones en su totalidad antes de utilizar esta mquina de coser domstica. Cuando utilice un aparato eltrico, debe respetar siempre las precauciones de seguridad bsicas, incluyendo las siguientes: Conserve la...

lang:es **score:20** filesize: 1.19 M page_count: 24 document date: 2024-05-13

MANUALE DI ISTRUZIONI

M1150 / M1155

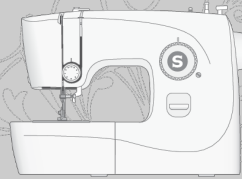

 **SINGER**

[\[pdf\]](#)


Untitled MANUALE DI ISTRUZIONI widen net Questo piedino tiene fermo il tessuto mentre si cuce l'alto basso i lati sinistro e destro dell'asola Piedino Page 7 A B Italiano M1150 IT svpworldwide content he5mssnyyk u cko5pg |||

MANUALE DI ISTRUZIONI M1150 / M1155 ISTRUZIONI IMPORTANTI PER LA SICUREZZA Leggere attentamente le istruzioni prima di utilizzare questa macchina per cucire per uso domestico. Durante l'uso dell'apparecchiatura, seguire sempre le precauzioni di sicurezza di base, ivi compreso quanto segue: Conserv...

lang:it **score:20** filesize: 1.21 M page_count: 24 document date: 2024-05-13

KÄYTTÖOPAS

M1150 / M1155

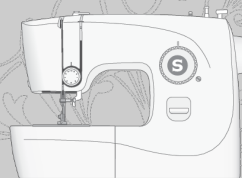

 **SINGER**

[\[pdf\]](#)


Untitled M1150 FI svpworldwide widen net content q27dwaetgi u cko5pg |||

KYTTOPAS M1150 / M1155 TRKEIT TURVAOHJEITA Lue käyttöohjeet huolellisesti ennen tmn kotiompelukoneen käyttöötoa. Shklaitteita kyteess on aina noudatettava perusturvaohjeita, joita ovat seuraavat: Silyt käyttöohjetta sopivassa paikassa koneen lhettyvill. Muista antaa käyttöohjeet mukaan, jos luovutat k...

lang:fi **score:18** filesize: 1.12 M page_count: 24 document date: 2024-05-13

GEBRAUCHSANLEITUNG

M1150 / M1155

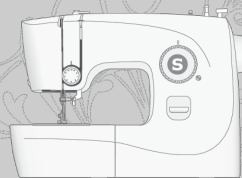

 **SINGER**

[\[pdf\]](#)

Untitled GEBRAUCHSANLEITUNG widen net In dieser Anleitung wird die optimale Nutzung und Wartung beschrieben Spulen der Klasse 15 von SINGER® Der Unterfaden ist an Stoffoberseite M1150 DE svpworldwide content z6ato594eq u cko5pg |||


GEBRAUCHSANLEITUNG M1150 / M1155 WICHTIGE SICHERHEITSHINWEISE

Lesen Sie sämtliche Hinweise für diese Haushaltsnähmaschine vor der erstmaligen Benutzung aufmerksam durch. Bei der Verwendung von elektrischen Geräten sind stets die grundlegenden Sicherheitsvorkehrungen zu beachten. Zusätzlich gilt: Bewahr...

lang:de **score:18** filesize: 1.22 M page_count: 24 document date: 2024-05-13

BRUKSANVISNING

M1150 / M1155

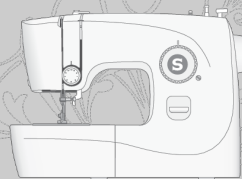

 **SINGER**


[Singer M1150 / M1155 Symaskin Bruksanvisning](#)

En komplett bruksanvisning for Singer M1150 og M1155 symaskiner, som dekker sikkerhetsinstruksjoner, oppsett, bruk, vedlikehold og feilsøking.

lang:no **score:18** filesize: 1.2 M page_count: 24 document date: 2024-05-13

BETJENINGSVEJLEDNING

M1150 / M1155

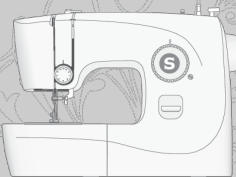

SINGER

[\[pdf\]](#)

Untitled M1150 DK svpworldwide widen net content 06akozcvcg u cko5pg |||


BETJENINGSVEJLEDNING **M1150** / M1155 VIGTIGE SIKKERHEDSANVISNINGER

Ls alle anvisninger, fr du tager denne symaskine, der er til almindelig hjemmebrug, i anvendelse. Ved anvendelse af elektriske apparater skal grundlggende sikkerhedsforanstaltninger altid overholdes, herunder flgende: Opbevar anvisni...

lang:da **score:17** filesize: 1.2 M page_count: 24 document date: 2024-05-13

KULLANIM KILAVUZU

M1150 / M1155

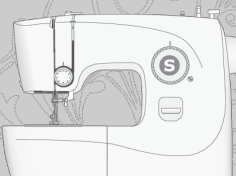

SINGER

[\[pdf\]](#)


Untitled M1150 TR svpworldwide widen net content uxacrplhu u cko5pg |||

KULLANIM KILAVUZU **M1150** / M1155 NEML GVENLK TALMATLARI Bu ev tipi diki makinesini kullanmadan nce tm talimatları okuyun. Elektrikli bir cihaz kullanılırken aaidakiler de dahil olmak zere temel gvenlik nlemlerine daima uyulmalıdır: Talimatları makineye yakın ve uygun bir yerde bulundurun. Makine, n...

lang:id **score:17** filesize: 1.2 M page_count: 24 document date: 2024-05-13

HANDLEIDING

M1150 / M1155

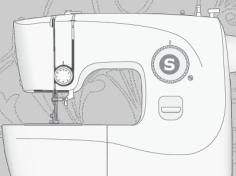

SINGER

[\[pdf\]](#)


Untitled HANDLEIDING widen netBeweeg het spoelhuis iets totdat goed in de grijperring E glijdt Om ervoor te zorgen dat terug is geplaatst draait u handwiel M1150 NLsvpworldwide net content b3jta6rl9r M1150 NL cko5pg |||

HANDLEIDING **M1150** / M1155 BELANGRIJKE VEILIGHEIDSINSTRUCTIES Lees alle instructies door voordat u deze huishoudnaaimachine in gebruik neemt. Wanneer u een elektrisch apparaat gebruikt, moet u altijd de belangrijke veiligheidsvoorschriften in acht nemen, inclusief het volgende: Bewaar de instructie...

lang:nl **score:17** filesize: 1.16 M page_count: 24 document date: 2024-05-13

NÁVOD K POUŽITÍ

M1150 / M1155

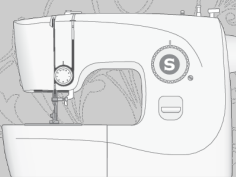

SINGER


[\[pdf\]](#)

Untitled NÁVOD K POUŽITÍ widen netZasuňte novou jehlu nahoru plochou stranou od sebe 4 Když jehla již nejde vysunout výše pevně utáhněte šroub Výměna jehly Volba vhodné velikost M1150

CZsvpworldwide net content z0orvchqt4 M1150 CZ u cko5pg |||

NVOD K POUZIT **M1150** / M1155 DLEZIT BEZPECNOSTN POKYNY Ped pouzitm tohoto domcho sicho stroje si pectte vesker pokyny. Pi pouzvn elektrickch pstroj by mla bt vzdy dodrzovna zkladn bezpecnostn opaten, vcetn nsledujcch: Pokyny uchovvejte na vhodnm mst poblz sicho stroje. Pokud sic stroj pedvte tet os...

lang:hr **score:17** filesize: 1.2 M page_count: 24 document date: 2024-05-13

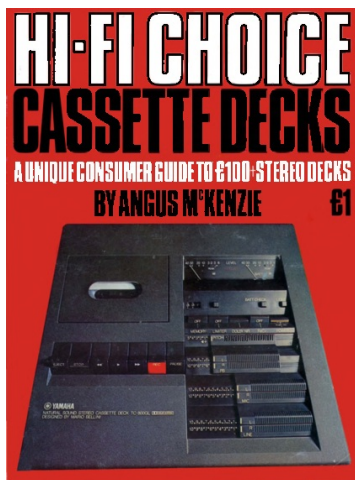


[\[pdf\]](#) Guide

AUNIQUECONSUMER GUIDE TP £100 STEREO DECKS Hi Fi Choice Iss 001 Cassette Decks 1975
worldradiohistory UK 1982 |||

M 05 ssmi mais A UNIQUE CONSUMER GUIDE TP 100 STEREO DECKS BY
ANGUS MWIE ||||| ... ney for sloppy engineering like that. And maybe they
move on. Not realising they re dismissing the **M1150** for being one step ahead of
more conventional units. You see the controls don t behave like or...

lang:en **score:16** filesize: 13.17 M page_count: 197 document date: 2024-03-17

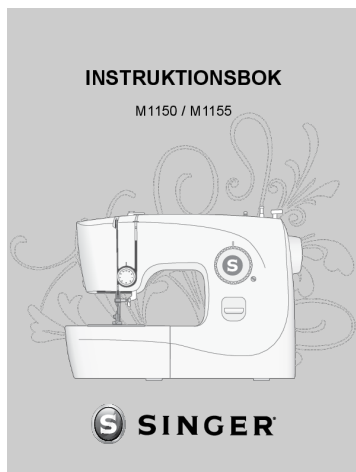

[\[pdf\]](#)

Untitled INSTRUKTIONSBOK widen net Torka av maskinen med en torr trasa för att ta bort ludd och eller
överflödig olja i nålområdet Ta spilluckan ut spolen Rengör M1150 SV svpworldwide content v714userus
u q3jo33 |||

INSTRUKTIONSBOK **M1150** / M1155 VIKTIGA SKERHETSFRESKRIFTER Ls
igenom alla instruktioner innan du brjar anvnda den hr symaskinen. Nr du anvnder
elektriska apparater r det viktigt att du alltid vidtar ndvndiga skerhetstgrder, bland
annat fljande: Frvara instruktionerna p ett Impligt stille nra maskine...

lang:no **score:14** filesize: 1.16 M page_count: 24 document date: 2024-05-13




[\[pdf\]](#)

Untitled NÁVOD K POUŽITÍ widen net flíkové dírky „b Obšijte v požadované délce levou stranu
knoflíkové směrem dozadu E Zastavte když je jehla na levé straně obšití 6 Zvedněte M1150 CZ
svpworldwide content z0orvchqt4 u q3jo33 |||

NVOD K POUZIT **M1150** / M1155 DLEZIT BEZPECNOSTN POKYNY Ped použitm
tohoto domcho sicho stroje si pectte vesker pokyny. Pi pouzvn elektrickch pstroj by
mla bt vzdy dodrzovna zkladn bezpecnostn opaten, vctn nsledujcch: Pokyny
uchovvejte na vhodnm mst poblz sicho stroje. Pokud sic stroj pedvte tet os...


lang:hr **score:14** filesize: 1.2 M page_count: 24 document date: 2024-05-13

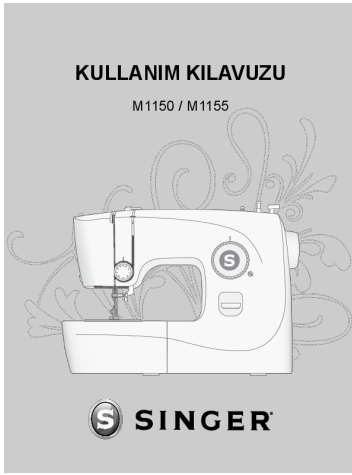

[\[pdf\]](#)

KULLANIM KILAVUZU Singer Geri dikiş kolunu bırakın makine yeniden ileri doğru dikmeye başlayacaktır
B A Dikiş Baskı ayağı C İplik tansiyonu Düz ayarı yönünü M1155 KK singer tr assets img product files |||
KULLANIM KILAVUZU **M1150** / M1155 NEML GVENLK TALMATLARI Bu ev tipi diki makinesini kullanmadan nce tm talimatları okuyun. Elektrikli bir cihaz kullanılırken aaidakiler de dahil olmak zere temel gvenlik nlemlerine daima uyulmalıdır: Talimatları makineye yakın ve uygun bir yerde bulundurun. Makine, n...

lang:id score:14 filesize: 3.88 M page_count: 24 document date: 2022-08-04

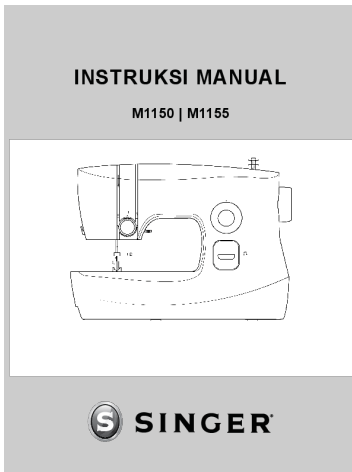

[\[pdf\]](#) User Manual

IM MM1155 ID VERSI BUKU im m1155 id singerindonesia assets files temp |||

INSTRUKSI MANUAL **M1150** M1155 Mesin jahit rumah tangga ini dirancang sesuai dengan standar IEC/EN/CSA C22.2 No.60335-1 60335-2-28 dan UL1594.

PETUNJUK-PETUNJUK PENTING KESELAMATAN Saat menggunakan peralatan listrik, tindakan pencegahan dasar harus selalu dipatuhi, termasuk berikut: Baca semua ...

lang:id score:11 filesize: 8.49 M page_count: 20 document date: 2020-11-20