

COSORI Twinfry Chef Edition

COSORI Twinfry Chef Edition 10L WiFi Dual Basket Air Fryer
Instruction Manual

Model: 810123673285 | Brand: COSORI

Introduction	Safety Instructions	Product Overview	Setup	Operating Instructions	Cooking
Guide	Maintenance & Cleaning	Troubleshooting	Specifications	Warranty & Support	

1. INTRODUCTION

Welcome to the COSORI Twinfry Chef Edition 10L WiFi Dual Basket Air Fryer. This appliance is designed to provide efficient and versatile cooking, allowing you to prepare a wide range of meals with less oil. This manual provides essential information for safe operation, setup, usage, and maintenance of your new air fryer.



Figure 1: COSORI Twinfry Chef Edition 10L WiFi Dual Basket Air Fryer, front view.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. Read all instructions before use.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or air fryer housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW

3.1 Components

- Main Unit (Air Fryer Housing)
- Dual Cooking Baskets (10L total capacity)
- Crisper Plates (removable for easy cleaning)
- Silicone Tongs



Figure 2: Dual baskets and internal heating elements.

3.2 Key Features

- **Dual Zone Technology:** Cook two different foods with different settings simultaneously.
- **WiFi Control:** Manage your cooking remotely via the COSORI app.
- **Sync Finish:** Ensures both baskets complete cooking at the same time.
- **Large Capacity:** 10-liter total capacity, ideal for family meals.
- **Pre-programmed Functions:** Multiple presets for common dishes (Air Fry, Roast, Broil, Frozen, Reheat, Bake, Dry, Proof, Warm).
- **Dishwasher Safe Baskets:** For easy cleanup.



Figure 3: Dual baskets in use, demonstrating simultaneous cooking.

4. SETUP

4.1 Unpacking

1. Remove all packaging materials from the air fryer and its accessories.
2. Check that all components are present and undamaged.
3. Wipe the exterior of the air fryer with a damp cloth.
4. Wash the cooking baskets and crisper plates with hot, soapy water, then rinse and dry thoroughly.

4.2 Placement

- Place the air fryer on a stable, heat-resistant, and level surface.
- Ensure there is at least 15 cm (6 inches) of space behind and above the air fryer for proper air circulation.
- Do not place the air fryer on top of other appliances or near heat sources.



Figure 4: Product dimensions for proper placement.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. Plug the air fryer into a grounded wall outlet.
2. Place the crisper plates into the cooking baskets.
3. Add your food to the baskets. Do not overfill.
4. Insert the baskets firmly into the air fryer.
5. Press the Power button to turn on the air fryer.
6. Select your desired cooking function (e.g., Air Fry, Roast) and adjust temperature and time using the arrow buttons.
7. Press the Start/Pause button to begin cooking.

5.2 Dual Zone Cooking

The COSORI Twin Fry allows you to cook two different foods simultaneously with independent settings for each basket.

- Load food into both baskets.

- Select settings for Basket 1 (temperature and time).
- Select settings for Basket 2 (temperature and time).
- To ensure both foods finish cooking at the same time, use the **Sync Finish** function. The air fryer will intelligently adjust cooking times.
- Alternatively, use the **Dual Cook** function if both baskets require the exact same cooking settings.

Your browser does not support the video tag.

Video 1: Demonstration of the Sync Finish feature for simultaneous cooking of different foods. This video shows sausages being cooked in a dual-basket air fryer, highlighting the ability to set different times and temperatures for each basket and have them finish together.

Your browser does not support the video tag.

Video 2: Overview of a dual-basket air fryer, demonstrating its use for everyday cooking. This video highlights the convenience and efficiency of cooking with two independent baskets.

5.3 WiFi Control (COSORI App)

Connect your air fryer to the COSORI app for remote control, recipe access, and cooking notifications.

1. Download the free VeSync app from the App Store or Google Play.
2. Create an account or log in.
3. Follow the in-app instructions to pair your COSORI Twinfry Chef Edition air fryer.
4. Once connected, you can start/stop cooking, adjust settings, and monitor progress from your smartphone.

6. COOKING GUIDE

The COSORI Twinfry Chef Edition is versatile for various cooking methods. Here are some general tips:

- **Preheating:** For best results, preheat the air fryer for 3-5 minutes before adding food.
- **Oil Usage:** Most foods require little to no oil. For crispier results, lightly spray or toss food with a small amount of oil.
- **Shaking/Tossing:** For even cooking, shake or toss the contents of the baskets halfway through the cooking cycle.
- **Doneness:** Always ensure food is cooked to safe internal temperatures.

Your browser does not support the video tag.

Video 3: A user demonstrating the cooking process with a dual-basket air fryer, including adding food and setting controls. This video provides a practical look at operating the appliance.

Your browser does not support the video tag.

Video 4: A user showcasing the cooking performance of a dual-basket air fryer, emphasizing its effectiveness for various dishes. This video highlights the appliance's ability to cook different items well.



Figure 5: Example of a meal prepared using the air fryer.



Figure 6: Variety of dishes cooked with the air fryer.

7. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your air fryer.

- **Before Cleaning:** Always unplug the air fryer and allow it to cool completely before cleaning.
- **Baskets and Crisper Plates:** The cooking baskets and crisper plates are dishwasher safe. Alternatively, wash them with hot, soapy water and a non-abrasive sponge.
- **Interior:** Wipe the interior of the air fryer with a damp cloth. For stubborn food residue, use a non-abrasive sponge and mild dish soap.
- **Exterior:** Wipe the exterior with a damp cloth. Do not use abrasive cleaners or scouring pads.
- **Heating Element:** Clean the heating element with a cleaning brush to remove any food residue.

Your browser does not support the video tag.

Video 5: A user demonstrating the ease of cleaning the air fryer baskets, highlighting their dishwasher-safe design. This video shows the removable crisper plate for thorough cleaning.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Plug the power cord into a grounded outlet.
Food is not cooked evenly.	Baskets are overfilled or food is not shaken.	Do not overfill baskets. Shake or toss food halfway through cooking.
White smoke coming from air fryer.	Grease from previous use or excess oil.	Clean baskets and crisper plates thoroughly. Use less oil.
Air fryer smells like plastic.	New appliance smell.	This is normal for first few uses. It will dissipate.

9. SPECIFICATIONS

Feature	Detail
Brand	COSORI
Model Number	810123673285
Capacity	10 Liters (Dual Basket)
Color	Black
Material	Stainless Steel
Voltage	220 Volts
Item Weight	9 kg
Special Features	Dual zone features, WiFi control
Recommended Uses	Bake, Broil, Defrost, Dehydrate, Reheat, Roast, Steam

10. WARRANTY AND SUPPORT

COSORI provides a limited warranty for this product. For detailed warranty information, please refer to the warranty card included in your product packaging or visit the official COSORI website.

For technical support, troubleshooting, or any questions regarding your COSORI Twinfry Chef Edition Air Fryer, please contact COSORI Customer Support. Contact details can be found on the COSORI website or in your product documentation.

	<p>COSORI Dual Blaze TwinFry™ Air Fryer 10L User Manual</p> <p>User manual for the COSORI Dual Blaze TwinFry™ 10L Air Fryer, covering setup, operation, safety precautions, and troubleshooting.</p>
	<p>COSORI Dual Blaze TwinFry 10L Air Fryer User Manual & Guide</p> <p>Comprehensive user manual and guide for the COSORI Dual Blaze TwinFry 10L Air Fryer. Learn about setup, operation, safety, maintenance, troubleshooting, and warranty.</p>
	<p>COSORI Dual Blaze TwinFry 10-Litre Air Fryer User Manual</p> <p>User manual for the COSORI Dual Blaze TwinFry 10-Litre Air Fryer, covering setup, operation, safety, maintenance, troubleshooting, and warranty information.</p>
	<p>COSORI Dual Blaze TwinFry 10-Liter Air Fryer User Manual</p> <p>Comprehensive user manual for the COSORI Dual Blaze TwinFry 10-Liter Air Fryer, covering setup, operation, safety precautions, troubleshooting, and warranty information.</p>
	<p>COSORI Dual Basket 9.0-Quart Air Fryer Recipe Book and Quick Start Guide</p> <p>Explore delicious recipes and get started quickly with the COSORI Dual Basket 9.0-Quart Air Fryer. This guide provides cooking tips, function explanations, and a variety of recipes for breakfast, appetizers, main courses, sides, desserts, and dehydrating.</p>
	<p>COSORI TurboBlaze Chef Edition 6.0-Litre Air Fryer User Manual</p> <p>User manual for the COSORI TurboBlaze Chef Edition 6.0-Litre Air Fryer. Covers safety, operation, cooking functions, troubleshooting, and warranty. Visit www.cosori.site for recipes.</p>