

Manuals.plus /

- › BOSCH /
- › BOSCH H11-11100-1 Folding Utility Knife Instruction Manual

BOSCH H11-11100-1

BOSCH H11-11100-1 Folding Utility Knife Instruction Manual

Model: H11-11100-1

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your BOSCH H11-11100-1 Folding Utility Knife. Please read these instructions carefully before operating the tool and retain them for future reference. The BOSCH H11-11100-1 is designed for various cutting applications, featuring a compact, portable design with integrated blade storage and a thumb rest for enhanced control.

2. IMPORTANT SAFETY INFORMATION

WARNING: Always exercise extreme caution when handling utility knives. Blades are extremely sharp and can cause severe injury.

- Keep hands and fingers away from the blade path.
- Always wear appropriate personal protective equipment, such as safety gloves and eye protection.
- Ensure the blade is securely locked in place before use.
- Fold the knife and engage the lock when not in use or when carrying.
- Store the knife and spare blades out of reach of children.
- Dispose of dull or broken blades safely in a designated container.
- Do not use the knife for purposes other than its intended cutting applications.

3. PRODUCT COMPONENTS

Familiarize yourself with the key features of your BOSCH H11-11100-1 Folding Utility Knife:

- **Aluminum Housing:** Provides durability for demanding tasks.

- **One-Button Folding Lock:** For fast and easy activation and secure folding.
- **Thumb Rest:** Designed for added control and comfort when applying force.
- **Tool-Free Blade Change:** Simple release/lock button for efficient blade replacement.
- **Integrated Handle Blade Storage:** Accommodates three extra blades for convenient access.
- **String/Box Strap Cutter:** For efficiently cutting string, wire, and box straps.
- **Belt Clip:** For convenient carrying and accessibility.

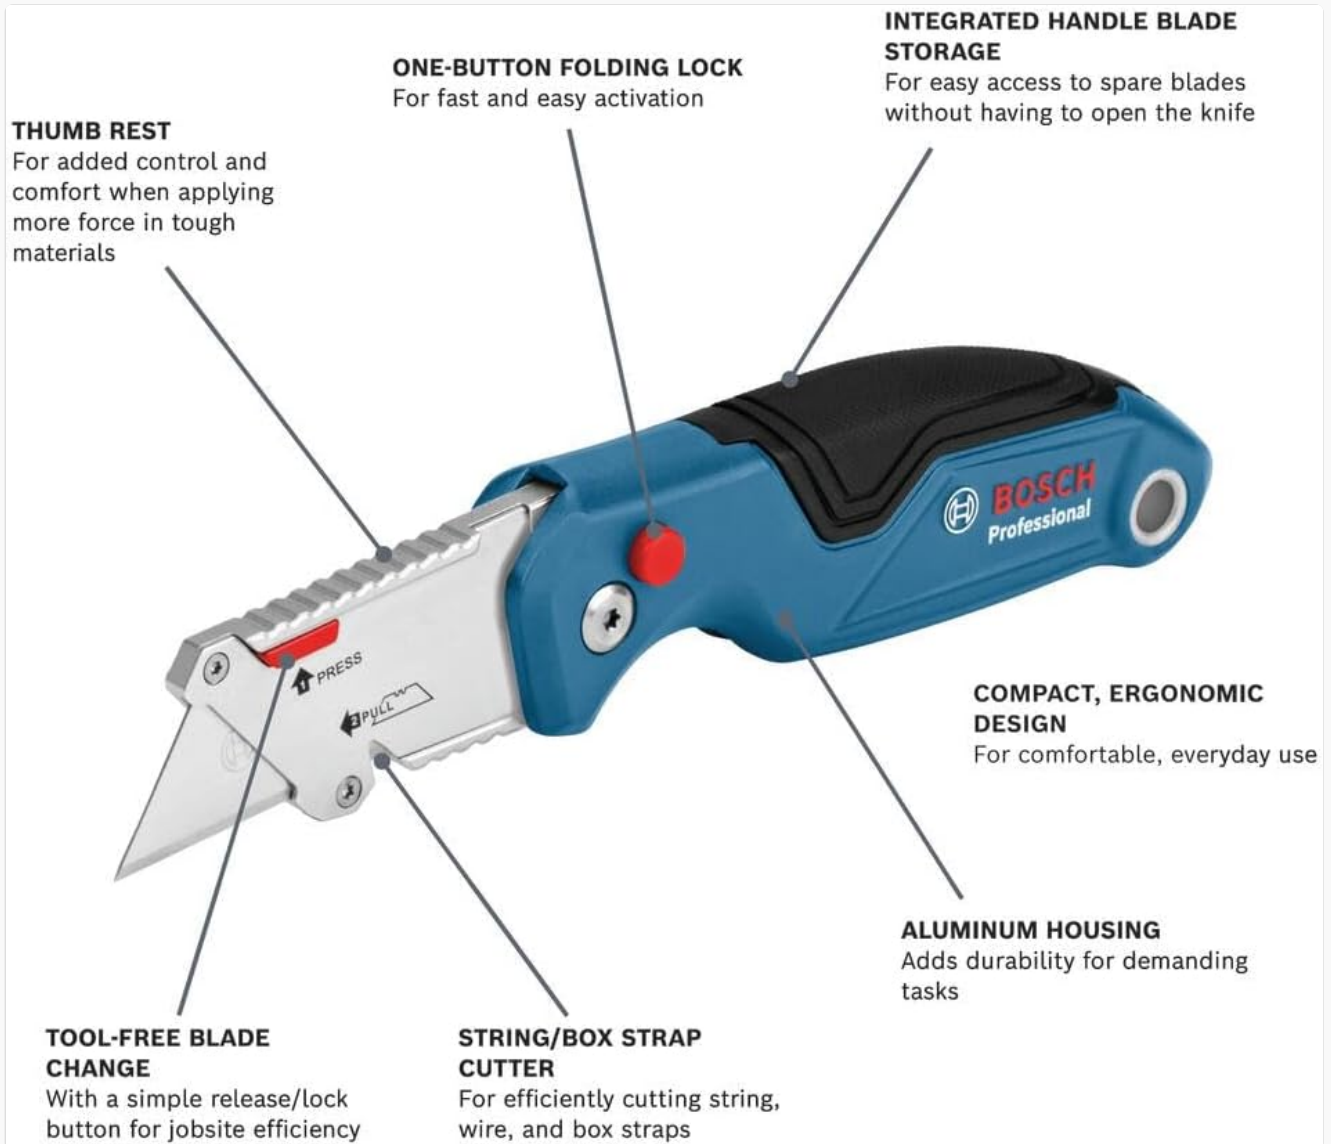


Image 3.1: Overview of the BOSCH H11-11100-1 Folding Utility Knife with key components labeled, including the thumb rest, one-button folding lock, integrated blade storage, tool-free blade change mechanism, string/box strap cutter, and aluminum housing.

4. SETUP: BLADE INSTALLATION

The BOSCH H11-11100-1 comes with three standard utility blades. Follow these steps to install or replace a blade:

1. Ensure the knife is in the folded position for safety.
2. Locate the blade release button/lever on the blade holder.
3. Press the release button/lever and carefully slide out the old blade (if applicable).
4. Take a new standard utility blade from the integrated storage or your supply.
5. Carefully insert the new blade into the slot until it clicks securely into place. Ensure the blade is fully seated and does not wobble.

6. Test the blade security by gently pulling on it.



Image 4.1: A user wearing gloves demonstrates the process of installing a new utility blade into the BOSCH H11-11100-1 Folding Utility Knife, highlighting the tool-free blade change mechanism.

5. OPERATING INSTRUCTIONS

5.1. Folding and Unfolding the Knife

- To unfold: Press the one-button folding lock and pivot the blade holder open until it locks into the extended position.
- To fold: Press the one-button folding lock again and carefully pivot the blade holder back into the closed position until it clicks securely.



Image 5.1: The BOSCH H11-11100-1 Folding Utility Knife shown in its compact, folded state, ready for storage or transport.

5.2. General Cutting

- Ensure the blade is sharp and clean for optimal performance.
- Position the material to be cut on a stable surface.
- Apply steady, controlled pressure, utilizing the thumb rest for additional leverage when needed.
- Always cut away from your body.



Image 5.2: A gloved hand uses the BOSCH H11-11100-1 Folding Utility Knife to precisely cut a piece of drywall on a workbench.

5.3. Using the Strap Cutter

- The integrated strap cutter is located on the side of the blade holder.
- Position the strap, string, or wire into the cutter slot.
- Apply firm pressure to cut through the material.



Image 5.3: A close-up view of a gloved hand using the integrated strap cutter on the BOSCH H11-11100-1 Folding Utility Knife to cut a piece of twine.

5.4. Carrying the Knife

- Always ensure the knife is folded and securely locked when carrying.
- Use the integrated belt clip to attach the knife to your belt or pocket for easy access and secure transport.



Image 5.4: The BOSCH H11-11100-1 Folding Utility Knife is shown securely clipped to a worker's belt, demonstrating its portability and convenient access.

6. MAINTENANCE

6.1. Blade Replacement

Replace blades as soon as they become dull to maintain cutting efficiency and safety. Refer to Section 4 for detailed blade installation steps.



Image 6.1: A gloved hand demonstrates the removal of a used utility blade from the BOSCH H11-11100-1 Folding Utility Knife, utilizing the quick-release mechanism.

6.2. Cleaning

- Periodically clean the knife to remove debris, dust, or residue.
- Use a dry cloth or a brush to clean the housing and blade holder.
- Do not use harsh chemicals or abrasive materials that could damage the finish or components.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Blade is dull or not cutting effectively.	Worn out blade.	Replace the blade with a new, sharp utility blade.
Knife does not fold or unfold smoothly.	Debris in the hinge mechanism or folding lock.	Clean the hinge area and folding lock mechanism. Apply a small amount of lubricant if necessary.
Blade feels loose after installation.	Blade not fully seated or incorrect blade type.	Ensure the blade is fully inserted and clicks into place. Use only standard utility blades. If the issue persists, inspect the blade holder for damage.

8. SPECIFICATIONS

- **Model:** H11-11100-1
- **Brand:** BOSCH

- **Material:** Aluminum (Housing), Metal (Blade)
- **Color:** Blue
- **Item Length:** 6.82 Inches
- **Item Weight:** 4.8 Ounces
- **Style:** Folding
- **Included Components:** (1) Folding Utility Knife, (3) Standard Utility Blades
- **UPC:** 000346821680

9. WARRANTY AND SUPPORT

9.1. Limited Lifetime Warranty

This BOSCH product is covered by a Limited Lifetime Warranty. For detailed information regarding warranty terms, conditions, and registration, please visit the official BOSCH website or contact customer support.



Image 9.1: A graphic indicating the BOSCH Limited Lifetime Warranty, with details available via a provided URL or phone number.

9.2. Customer Support

For technical assistance, parts, or service inquiries, please contact BOSCH customer support:

- **Website:** rb-pt.io/PowerToolWarranty
- **Phone:** 1-877-BOSCH99