

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Canon](#) /

› [Canon EOS Kiss Panorama \(Rebel XS\) SLR AF Film Camera Instruction Manual](#)

### Canon Rebel XS (AKA Canon EOS Kiss in Japan)

# Canon EOS Kiss Panorama (Rebel XS) SLR AF Film Camera Instruction Manual

Model: Rebel XS (AKA Canon EOS Kiss in Japan)

## INTRODUCTION

---

This manual provides comprehensive instructions for the operation and maintenance of your Canon EOS Kiss Panorama (also known as Rebel XS in USA/Canada) SLR AF Film Camera with the included 35-80mm EF Lens. This camera is designed for ease of use, featuring fully automatic operation and advanced photo system capabilities. Please read this manual thoroughly before using your camera to ensure proper function and longevity.

## SETUP

---

### 1. Battery Installation

The Canon EOS Kiss Panorama requires three CR123A batteries for operation.

1. Locate the battery compartment cover on the bottom of the camera body.
2. Slide the latch to open the cover.
3. Insert three CR123A batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.

### 2. Lens Attachment

Your camera comes with a 35-80mm EF Lens.

1. Remove the body cap from the camera and the rear cap from the lens.
2. Align the red dot on the lens barrel with the red dot on the camera's lens mount.
3. Insert the lens into the camera mount and rotate it clockwise until it locks into place with a click.
4. To remove the lens, press the lens release button on the camera body and rotate the lens counter-clockwise.



**Figure 1:** Front view of the Canon EOS Kiss Panorama camera with the 35-80mm EF lens attached. This image shows the camera from the front, highlighting the lens, flash, and overall body design.

### 3. Film Loading

The camera features easy drop-in film loading for 35mm film.

1. Open the camera back by sliding the film door release latch.
2. Insert a new 35mm film cartridge into the film chamber.
3. Pull the film leader across to the film take-up spool, aligning it with the orange mark.
4. Close the camera back. The camera will automatically advance the film to the first frame.

## OPERATING THE CAMERA

---

### 1. Power On/Off and Shooting Modes

To power on the camera, rotate the main dial. The EOS Kiss Panorama offers various shooting modes for different photographic situations.



**Figure 2:** Top view of the Canon EOS Kiss Panorama camera, illustrating the mode dial, shutter button, and other top-mounted controls.

- **Full Auto Mode:** The camera automatically sets all exposure parameters.
- **Program AE Mode:** The camera sets aperture and shutter speed, but allows for program shift.
- **Shutter-Priority AE Mode:** You set the shutter speed, and the camera selects the appropriate aperture.
- **Aperture-Priority AE Mode:** You set the aperture, and the camera selects the appropriate shutter speed.
- **Manual Mode:** You control both aperture and shutter speed.

## 2. Focusing

The camera supports both Autofocus (AF) and Manual Focus (MF).

- **Autofocus:** Set the switch on the lens to 'AF'. Press the shutter button halfway down to activate autofocus.
- **Manual Focus:** Set the switch on the lens to 'MF'. Rotate the focusing ring on the lens until the subject appears sharp in the viewfinder.

## 3. Exposure Control and Flash

The camera automatically adjusts exposure in most modes. The built-in flash will automatically pop up and fire in low-light conditions when in full auto mode. You can also manually control the flash in other modes.

## 4. Mid-Roll Change and PQI Function

The EOS Kiss Panorama allows for mid-roll film changes, enabling you to switch film types before finishing a roll. The camera also features a PQI (Print Quality Improvement) function, which records data about the scene to optimize print quality.



**Figure 3:** Rear view of the Canon EOS Kiss Panorama camera, displaying the LCD screen, viewfinder, and various control buttons for settings like mode and select/set.

## 5. Print Formats

This camera supports three print formats:

- **Classic (C):** Standard 3:2 aspect ratio.
- **HDTV (H):** Wider 16:9 aspect ratio, ideal for TV screens.
- **Panorama (P):** Ultra-wide aspect ratio for panoramic prints.

Select the desired print format using the camera's controls before shooting.

## MAINTENANCE

---

### 1. Cleaning the Camera and Lens

- Use a soft, lint-free cloth to wipe the camera body.
- For the lens, use a lens brush to remove dust, followed by a lens cleaning solution and a microfiber cloth. Avoid touching the lens surface with your fingers.
- Do not use harsh chemicals or abrasive materials.

### 2. Battery Care

- Remove batteries if the camera will not be used for an extended period to prevent leakage.
- Store batteries in a cool, dry place.

### 3. Storage

Store the camera in a dry, dust-free environment, preferably in a camera bag or case to protect it from impacts and moisture.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Camera does not power on.	Dead or incorrectly inserted batteries.	Check battery polarity. Replace with fresh CR123A batteries.
Film does not advance.	Film not loaded correctly or film door not closed.	Re-open film door, ensure film leader is properly engaged, and close door securely.
Autofocus not working.	Lens switch set to MF; insufficient light; subject too close.	Set lens switch to AF. Ensure adequate lighting. Maintain minimum focusing distance.
Flash does not fire.	Flash mode disabled; batteries low.	Check flash settings. Replace batteries if low.

If you encounter issues not listed here, please refer to the support section or contact the seller.

## SPECIFICATIONS

---

- **Model Name:** EOS Rebel Ti (AKA Canon EOS Kiss in Japan, Rebel XS in USA/Canada)
- **Brand:** Canon
- **Film Format Type:** 35mm
- **Special Feature:** PQI function and mid-roll film changing
- **Included Components:** Camera Body & Lens (35-80mm EF Lens)
- **Batteries:** 3 CR123A batteries required (included)
- **Item Weight:** 2 pounds
- **Package Dimensions:** 8 x 4 x 4 inches
- **Viewfinder Magnification:** 0.5x
- **Compatible Devices:** Camera
- **UPC:** 703670600418

## WARRANTY AND SUPPORT

---

This product is sold as "Renewed." Please refer to the seller's return policy for details regarding returns and replacements. The product is eligible for a 90-day refund/replacement return policy.

For technical support or further assistance, please contact the seller directly through the platform where the purchase was made.

