

MISIRUN S1

MISIRUN S1 Kids Instant Print Camera Instruction Manual

MODEL: S1

Introduction

The MISIRUN S1 Kids Instant Print Camera is a versatile device designed to capture and create memories. It functions as a digital camera for taking color photos and recording 1080p HD videos, while also offering instant black and white printing. Equipped with dual lenses for selfies and a 16x digital zoom, this camera encourages creativity and interaction. This manual provides comprehensive instructions to help you get the most out of your camera.

What's in the Box

Your MISIRUN S1 Kids Instant Print Camera package includes the following items:

- MISIRUN S1 Kids Instant Print Camera Body
- 5 Rolls of Print Paper
- 3 Sheets of Stickers
- Set of Coloring Pens
- 32GB Memory Card (pre-installed or included separately)
- Lanyard
- USB-C Charging Cable



Image: The MISIRUN S1 Kids Instant Print Camera shown with its included accessories: print paper rolls, stickers, and coloring pens.

HOW TO USE



Image: A detailed diagram illustrating the various buttons, ports, and features of the MISIRUN S1 Kids Instant Print Camera.

Setup

1. Charging the Camera

Before first use, fully charge the camera using the provided USB-C charging cable. Connect the cable to the Type-C port on the camera and a compatible USB power source. The charging indicator light will show the charging status.



Image: The camera's USB-C port is shown connected to a charging cable, indicating the charging process.

2. Inserting the Memory Card

The camera comes with a 32GB TF (MicroSD) card. Locate the TF card slot on the side of the camera and gently insert the memory card until it clicks into place. This card stores all your digital photos and videos.



Image: A 32GB memory card is shown being inserted into the camera's dedicated slot, highlighting its storage capability.

3. Loading Print Paper

Open the print paper compartment on the side of the camera. Insert a roll of print paper, ensuring the paper feeds out correctly through the slot. Close the compartment securely.

STORE PICTURES A VIDEO (COLORFUL) DIY Your Instant Photos (Black & White Photos)



Image: The camera demonstrates the process of loading print paper and shows a child coloring an instant black and white photo.

4. Attaching the Lanyard

Thread the provided lanyard through the designated loop on the camera body to prevent accidental drops and allow for easy carrying.

Operating Instructions

1. Controls Overview

Refer to the diagram below for an overview of the camera's buttons and their functions:

HOW TO USE



Image: A detailed diagram illustrating the various buttons, ports, and features of the MISIRUN S1 Kids Instant Print Camera.

2. Power On/Off

Press and hold the Power Button (usually located on the top or side) to turn the camera on or off.

3. Taking Photos

To take a photo, navigate to the Photo mode using the directional buttons and the OK/Shutter button. The camera features dual lenses for both front-facing (selfie) and rear-facing photos. Use the 16x digital zoom to adjust your shot. Experiment with the 6 color filters and 8 special effects available to enhance your pictures.

**DUAL LENSES,
ENJOY YOUR SELFIE TIME.**



16X DIGITAL ZOOM



Image: The camera highlights its dual lenses for selfies and its 16x digital zoom capability, showing various zoom levels.

4. Recording Video

Switch to Video mode to record high-definition 1080p videos. Press the OK/Shutter button to start and stop recording.



Video Record Funcion



Image: The camera's screen shows a video recording in progress, demonstrating its video capture function.

5. Instant Printing

After taking a photo, you can instantly print it in black and white. Use the Print Button to initiate printing. The printed photos can then be colored using the included pens and decorated with stickers.



Image: The camera illustrates its ability to store colorful digital pictures and print instant black and white photos.

6. Playback

Access the Playback mode to review your captured photos and videos on the camera's screen.

7. Games

The camera includes 5 built-in mini-games for entertainment. Navigate to the Games section from the main menu.



Image: Three children are shown enjoying the camera's built-in games, emphasizing its entertainment value.

8. MP3 Player

The camera also features an MP3 music player. Load your favorite music files onto the memory card and access them through the MP3 Player option in the menu.



Image: Two children are depicted dancing with musical notes, illustrating the camera's MP3 music playback capability.

9. Settings

The Settings menu allows you to customize various camera options, including image quality, print density, and print modes (e.g., grayscale or dot print).

Maintenance

1. Cleaning the Camera

Use a soft, dry cloth to clean the camera body and screen. Avoid using liquid cleaners or abrasive materials. For the lens, use a specialized lens cleaning cloth.

2. Storing Print Paper

Store unused print paper rolls in a cool, dry place away from direct sunlight to maintain print quality.

3. Battery Care

The camera uses a rechargeable battery, charged via the USB-C port. While the specifications mention 1 AAA battery, the primary charging method is USB-C. Ensure the camera is fully charged before extended use. If storing for a long period, charge the battery periodically to maintain its health.

Troubleshooting

- **Camera not turning on:** Ensure the battery is charged. Connect the camera to the charger and try again.
- **No print coming out:** Check if print paper is loaded correctly and if there's enough paper. Ensure the print function is enabled in settings.
- **Poor print quality:** Adjust print density in the settings. Ensure the print head is clean (refer to maintenance).
- **Memory card error:** Reinsert the memory card. If the issue persists, try formatting the card (this will erase all data) or use a different compatible memory card.
- **Camera frozen/unresponsive:** Use the Reset Button (a small pinhole, often labeled 'R') to restart the camera.

Specifications

Product Dimensions	4.72 x 3.54 x 1.97 inches
Item Weight	1.21 pounds
Model Name	S1
Batteries	1 AAA batteries required (included) - Note: Primary charging is via USB-C.
Special Feature	Memory-card-compatible
Film Format Type	Instant
Included Components	Camera Body & Accessories
Manufacturer	Shenzhen Ruidai intelligent Technology Co. , Ltd.

Warranty and Support

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer. Specific warranty terms and support contact details are not available in this manual.

Official Product Video

Your browser does not support the video tag.

Video: An official product video showcasing the features and functionality of the MISIRUN Kids Instant Print Camera, including its instant printing capability and various color options.