

[Manuals.plus](#) /

> [MISIRUN](#) /

> MISIRUN Instant Print Kids Digital Camera Instruction Manual

MISIRUN fu

MISIRUN Instant Print Kids Digital Camera Instruction Manual

Model: fu | Brand: MISIRUN

INTRODUCTION

This manual provides essential information for the safe and effective operation of your MISIRUN Instant Print Kids Digital Camera. Please read it thoroughly before use and retain it for future reference. This camera is designed to capture both digital photos and 1080p HD videos, with the added feature of instant black and white thermal printing.

WHAT'S IN THE BOX

Upon unpacking, please ensure all items listed below are present:

- MISIRUN Instant Print Kids Digital Camera
- USB Charging Cable
- Lanyard
- Thermal Print Paper Rolls (5 rolls included)
- Color Pens (Set of 6)
- Sticker Sheets (3 sheets)
- 32GB Memory Card (pre-installed or separate)
- Instruction Manual



Figure 1: Included accessories with the MISIRUN Instant Print Kids Digital Camera.

SETUP

1. Charging the Camera

Connect the provided USB cable to the camera's Type-C port and a compatible USB power adapter (not included) or computer. The charging indicator will illuminate. A full charge typically takes approximately 2-3 hours.



Figure 2: Connecting the USB-C cable for charging.

2. Installing Thermal Print Paper

1. Locate the paper compartment on the side of the camera.
2. Gently open the compartment cover.
3. Insert a roll of thermal paper, ensuring the paper feeds out from the top and is aligned correctly.
4. Close the compartment cover securely.



Figure 3: Loading thermal print paper into the camera.

3. Inserting the Memory Card

The camera comes with a 32GB memory card. Locate the TF card slot on the side of the camera and insert the card until it clicks into place. Ensure the card is inserted in the correct orientation.



Figure 4: Inserting the 32GB TF memory card.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the Power button (usually located on the top or side) for a few seconds to turn the camera on or off. The screen will display a "WELCOME" or "GOODBYE" message.

2. Navigation and Menu

Use the directional buttons (up, down, left, right) to navigate through the menu options on the screen. The 'OK' or 'Shutter' button typically confirms selections.

HOW TO USE



Figure 5: Camera menu interface with various functions.



Figure 6: Detailed view of camera buttons and ports.

3. Taking Photos

From the main menu, select the 'Photo' icon. Frame your shot using the screen. Press the 'Shutter' button to capture the image. The camera features dual lenses for both front-facing (selfie) and rear-facing photos. Long-press the shutter button to switch between lenses.



Figure 7: Utilizing the dual camera for selfies.

4. Recording Videos

Select the 'Video' icon from the menu. Press the 'Shutter' button to start recording. Press it again to stop. Videos are recorded in 1080p HD quality.



Figure 8: The camera's HD video recording function.

5. Instant Printing

After taking a photo, you can choose to print it instantly. Press the 'Print' button (often indicated by a printer icon) to initiate printing. The camera will print a black and white thermal image. You can then use the included color pens and stickers to customize your prints.



Figure 9: Instant printing and DIY customization of photos.

Video 1: Official product video demonstrating the instant print feature and other functionalities of the MISIRUN Kids Camera.

6. Games and Music

The camera includes 5 built-in mini-games for entertainment. Select the 'Games' icon to access them. An MP3 music player is also integrated; select the 'MP3' icon to play music (ensure compatible audio files are on the memory card).



Figure 10: Children enjoying the camera's built-in games.



Figure 11: The camera's MP3 music player feature.

FEATURES

- **Dual Lenses:** Front and rear cameras for versatile photography, including selfies.
- **16X Digital Zoom:** Allows for closer shots and detailed exploration.
- **1080P HD Video Recording:** Capture high-definition video moments.
- **Instant Thermal Printing:** Print black and white photos directly from the camera.
- **Customization:** Use included pens and stickers to personalize printed photos.
- **Built-in Games:** 5 mini-games for added entertainment.
- **MP3 Player:** Enjoy music on the go.
- **32GB Memory Card:** Ample storage for thousands of photos and videos.
- **Durable Design:** Made from non-toxic, shockproof materials suitable for children.



Figure 12: Demonstrating the 16X digital zoom capability.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body and screen. Avoid liquid cleaners.
- **Paper Replacement:** When the thermal paper runs out, replace it with a new roll as described in the "Setup" section.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Charge the camera regularly to maintain battery health. If not used for extended periods, charge it at least once every three months.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Low battery.	Charge the camera fully.

Problem	Possible Cause	Solution
Cannot take photos/record videos.	Memory card full or not inserted correctly.	Check memory card insertion or delete old files.
Prints are blank or faded.	Thermal paper installed incorrectly or run out.	Re-install paper correctly or replace with a new roll.
Camera freezes.	Software glitch.	Use a small pin to press the reset button (located near the Type-C port).

SPECIFICATIONS

- **Model:** fu
- **Product Dimensions:** 4.72 x 3.54 x 1.97 inches
- **Item Weight:** 1.3 pounds (0.59 Kilograms)
- **Video Resolution:** 1080P HD
- **Zoom:** 16X Digital Zoom
- **Lenses:** Dual (Front & Rear)
- **Print Type:** Instant Thermal (Black & White)
- **Memory:** Supports 32GB TF Card (included)
- **Battery:** 1 AAA battery required (included) - *Note: Product specifications state 1 AAA battery, but the charging cable implies a rechargeable internal battery. Please refer to the product packaging for definitive battery information.*
- **Special Feature:** Lightweight, Shockproof, Non-toxic materials

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty certificate included in your product packaging or visit the official MISIRUN website. You may also contact customer service via the details provided on the warranty certificate.

For additional support, you can visit the [MISIRUN Store on Amazon](#).

