

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WORTMANN AG](#) /

› [Terra All-in-One-PC 2710 HA Greenline User Manual](#)

## WORTMANN AG 1001378

# Terra All-in-One-PC 2710 HA Greenline User Manual

Model: 1001378 | Brand: WORTMANN AG

## INTRODUCTION

This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your Terra All-in-One-PC 2710 HA Greenline. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.

## PRODUCT OVERVIEW

The Terra All-in-One-PC 2710 HA Greenline is a compact and efficient computing solution designed for various applications. It integrates the display and computer components into a single unit, offering a streamlined workspace.



**Figure 1:** Front view of the Terra All-in-One-PC 2710 HA Greenline. The screen displays a Windows desktop environment with the Start menu open, showing various applications and recommended files.

## SETUP INSTRUCTIONS

- Unpacking:** Carefully remove the PC from its packaging. Ensure all components, including the power adapter and any included peripherals, are present.
- Placement:** Place the All-in-One PC on a stable, flat surface. Ensure adequate ventilation around the device. Avoid placing it near heat sources or in direct sunlight.
- Power Connection:** Connect the power adapter cable to the DC-in port on the back of the PC. Plug the other end of the power adapter into a grounded electrical outlet.
- Peripheral Connection:** Connect your keyboard, mouse, and any other desired USB devices to the available USB ports.
- Network Connection (Optional):** For internet access, connect an Ethernet cable to the LAN port or configure a wireless network connection after initial boot-up.
- First Boot:** Press the power button, usually located on the side or back of the display. The system will begin the initial boot process. Follow any on-screen prompts for operating system setup.

## OPERATING INSTRUCTIONS

### Power On/Off

- To Power On:** Press the power button.
- To Shut Down:** Click the Start button (Windows icon), then select the Power icon, and choose "Shut

down."

- **To Restart:** Click the Start button, then select the Power icon, and choose "Restart."
- **To Sleep:** Click the Start button, then select the Power icon, and choose "Sleep."

## Display and Audio

- **Brightness Adjustment:** Use the function keys on your keyboard (often F5/F6 or similar icons) or the display settings within the operating system to adjust screen brightness.
- **Volume Control:** Use the volume keys on your keyboard (often F1-F3 or similar icons) or the volume mixer in the operating system's taskbar to adjust audio output.

## Connectivity

- **USB Ports:** Connect USB devices such as external hard drives, flash drives, or printers to the available USB ports.
- **Network:** For wired connection, plug an Ethernet cable into the LAN port. For wireless, navigate to network settings in the operating system to connect to a Wi-Fi network.

## MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and exterior surfaces. For stubborn marks, slightly dampen the cloth with water or a non-abrasive screen cleaner. *Do not spray liquid directly onto the screen or vents.*
- **Ventilation:** Ensure that the ventilation openings on the PC are not blocked. Proper airflow is crucial for preventing overheating.
- **Software Updates:** Regularly update your operating system and drivers to ensure optimal performance and security.
- **Data Backup:** Periodically back up important data to an external drive or cloud storage to prevent data loss.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
PC does not power on.	No power connection.	Check if the power adapter is securely connected to the PC and the electrical outlet. Try a different outlet.
No display on screen.	PC is in sleep mode or display settings issue.	Press any key on the keyboard or move the mouse to wake the PC. If still no display, restart the PC.
No audio.	Volume muted or low; incorrect audio output device.	Check volume levels in the operating system. Ensure the correct audio output device is selected in sound settings.
Slow performance.	Too many applications running; insufficient disk space; outdated drivers.	Close unnecessary applications. Free up disk space. Update drivers and operating system.

## SPECIFICATIONS

- **Model:** Terra All-in-One-PC 2710 HA Greenline (Model Number: 1001378)
- **Brand:** WORTMANN AG
- **Hard Drive Type:** Solid State Drive
- **Color:** Black
- **Item Weight:** Approximately 2.2 pounds
- **Manufacturer:** WORTMANN AG
- **ASIN:** B0DF5Q4NR4
- **Date First Available:** April 7, 2025

*Note: Specifications are subject to change without prior notice. For the most current information, please refer to the official product page or contact WORTMANN AG support.*

## **WARRANTY AND SUPPORT**

---

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official WORTMANN AG website. You may also contact their customer service for assistance.

**WORTMANN AG Official Website:** [www.wortmann.de](http://www.wortmann.de)

Please have your model number (1001378) and purchase details ready when contacting support.

---

© 2025 WORTMANN AG. All rights reserved.

This manual is for informational purposes only.