

Darmoshark TOP98 (Black)

Darmoshark TOP98 Gaming Keyboard User Manual

Model: TOP98 (Black)

1. INTRODUCTION

Thank you for choosing the Darmoshark TOP98 Gaming Keyboard. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your new keyboard. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

2. PACKAGE CONTENTS

Please verify that all items listed below are present in your package:

- Darmoshark TOP98 Gaming Keyboard
- USB Cable (Type-C to Type-A)
- User Manual (this document)

3. PRODUCT OVERVIEW

The Darmoshark TOP98 Gaming Keyboard features a compact yet functional layout, designed for both gaming and productivity.



An overhead view of the Darmoshark TOP98 Gaming Keyboard, showcasing its full layout including the alphanumeric keys, function row, navigation cluster, numeric keypad, and a rotary knob in the top right corner. The keyboard features a black chassis with dark grey and black keycaps.

Key Features:

- Full-size 98-key layout with numeric keypad.
- Dedicated rotary knob for volume control or other functions.
- Durable construction for extended use.
- Customizable backlighting (if applicable, common for gaming keyboards).

4. SETUP

Wired Connection:

1. Locate the USB Type-C port on the Darmoshark TOP98 keyboard.
2. Connect one end of the provided USB cable to the keyboard's Type-C port.
3. Connect the other end of the USB cable (Type-A) to an available USB port on your computer.
4. The keyboard will be automatically recognized by your operating system, and drivers will install if necessary.
5. The keyboard is now ready for use.

5. OPERATING INSTRUCTIONS

Basic Key Functions:

The keyboard operates as a standard QWERTY layout. All standard alphanumeric, symbol, and modifier keys function as expected.

Function Key Combinations (Fn Key):

The **Fn** key, typically located near the right **Alt** key, can be combined with other keys to access multimedia controls or system functions. Refer to the keycaps for specific icons indicating these functions (e.g., volume control, media playback, backlight adjustments).

Rotary Knob Functionality:

The rotary knob, located in the top right corner of the keyboard, typically controls system volume.

- **Rotate Clockwise:** Increase volume.
- **Rotate Counter-clockwise:** Decrease volume.
- **Press Down:** Mute/Unmute audio.

Backlighting Control:

If your keyboard model includes backlighting, use the **Fn** key in combination with designated keys (often arrow keys or specific function keys) to adjust brightness, change lighting modes, or toggle the backlight on/off. Consult the keycap legends for specific backlight control icons.

6. MAINTENANCE

Cleaning the Keyboard:

- Disconnect the keyboard from your computer before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the keycaps

and chassis.

- For dust and debris between keys, use compressed air.
- Avoid using harsh chemicals, abrasive cleaners, or excessive moisture.
- Ensure the keyboard is completely dry before reconnecting it.

Storage:

When not in use for extended periods, store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Issue	Possible Cause	Solution
Keyboard not responding	Loose cable connection; USB port issue; Driver issue.	<ul style="list-style-type: none">◦ Ensure the USB cable is securely connected to both the keyboard and the computer.◦ Try connecting the keyboard to a different USB port on your computer.◦ Restart your computer.◦ Check Device Manager (Windows) or System Information (macOS) to see if the keyboard is recognized.
Specific keys not working	Debris under keycap; Software conflict; Hardware malfunction.	<ul style="list-style-type: none">◦ Clean the affected key with compressed air.◦ Test the keyboard on another computer to rule out software issues.◦ If the issue persists, contact customer support.
Backlight not working/flickering	Backlight disabled; Software setting; Power issue.	<ul style="list-style-type: none">◦ Ensure backlight is enabled and brightness is turned up using Fn key combinations.◦ Check if any keyboard software is installed and adjust settings there.◦ Ensure the keyboard is receiving sufficient power from the USB port.

8. SPECIFICATIONS

Feature	Detail
Brand	Darmoshark
Model Number	Top98black-linearo
Colour	Black
Item Weight	1 kg
Package Dimensions	10 x 2 x 1 cm
Connectivity	Wired USB

Feature	Detail
Included Components	1 product (Keyboard, USB Cable)


9. WARRANTY AND SUPPORT

Darmoshark products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Darmoshark website.

Contact Support: For further assistance, please contact Darmoshark customer support through their official channels.

© 2025 Darmoshark. All rights reserved.
This manual is subject to change without notice.

Related Documents

	<p>Darmoshark K7 Pro Gaming Keyboard Quick Start Guide</p> <p>A quick start guide for the Darmoshark K7 Pro gaming keyboard, covering custom lighting, wired and wireless modes, system switching, multimedia controls, and troubleshooting.</p>
--	--