

[Manuals.plus](#) /

› [DOUBLE E](#) /

› DOUBLE E 1:10 Ford F150 High Speed RC Car User Manual

DOUBLE E E331-003

DOUBLE E 1:10 Ford F150 High Speed RC Car User Manual

Model: E331-003 | Brand: DOUBLE E

1. PRODUCT OVERVIEW

The DOUBLE E 1:10 Ford F-150 High Speed RC Car is an officially licensed, high-performance remote control vehicle designed for thrilling off-road adventures. This 1:10 scale replica of the iconic Ford F-150 pickup combines authentic detailing with impressive speed and precise handling. Equipped with powerful dual motors and a 4-wheel drive system, it is engineered to tackle various terrains including dirt paths, grass, gravel, and pavement. The robust chassis and independent suspension system ensure durability and smooth operation during high-speed maneuvers. The included 2.4GHz remote control provides reliable, interference-free operation for an optimal driving experience.

Key Features:

- Officially Licensed Ford F-150 Design: 1:10 scale replica with authentic body detailing for a realistic driving experience.
- High-Speed Performance: Reach impressive speeds with a powerful motor and 4-wheel drive system made for racing and rough terrain.
- All-Terrain 4WD with Suspension: Conquer grass, gravel, sand, and pavement with shock-absorbing suspension and rugged tires.
- LED Headlights for Night Driving: Front LED lights illuminate the path ahead for exciting low-light play.
- Rechargeable Battery Included: Long-lasting play with a USB rechargeable battery pack and easy charging system.



Image 1: The DOUBLE E 1:10 Ford F150 High Speed RC Car, showcasing its vibrant design and robust off-road tires.

2. WHAT'S IN THE BOX

Please check the contents of the package to ensure all items are present and in good condition.

- 1 x DOUBLE E 1:10 Ford F150 RC Car
- 1 x Remote Control
- 1 x Rechargeable Battery Pack for RC Car
- 1 x USB Charging Cable
- 4 x AA Batteries for Remote Control (if included, otherwise "Batteries for Remote Control (not included)")

E331-003



Image 2: Contents of the DOUBLE E RC Car package, including the vehicle, remote control, battery, and charging cable.

3. SETUP

3.1. Battery Installation (RC Car)

1. Locate the battery compartment on the underside of the RC car.
2. Carefully open the battery compartment cover.
3. Connect the rechargeable battery pack to the car's power connector, ensuring correct polarity.
4. Place the battery pack inside the compartment and close the cover securely.

3.2. Battery Installation (Remote Control)

1. Open the battery cover on the back of the remote control.
2. Insert 4 AA batteries (if included, otherwise "not included") into the compartment, matching the positive (+) and negative (-) terminals.
3. Close the battery cover securely.

3.3. Charging the RC Car Battery

1. Connect the rechargeable battery pack to the USB charging cable.
2. Plug the USB charging cable into a standard USB power adapter (e.g., computer USB port, wall charger).

3. The charging indicator light on the USB cable will show the charging status (e.g., red for charging, green for fully charged).
4. Charging typically takes 3-4 hours for a full charge. Do not overcharge.

3.4. Pairing the RC Car and Remote Control

1. Ensure both the RC car and the remote control have fresh or fully charged batteries.
2. Turn on the RC car using the power switch located on the vehicle.
3. Turn on the remote control.
4. The remote control and car should automatically pair. If not, turn both off and on again, keeping them close to each other.
5. A successful connection is indicated by a solid light on both the car and the remote (or a specific sound, refer to product specific indicators if available).

4. OPERATING INSTRUCTIONS

4.1. Basic Controls

- **Steering Wheel:** Turn left or right to control the direction of the car.
- **Trigger/Throttle:**
 - Pull the trigger towards you to move the car forward.
 - Push the trigger away from you to brake or reverse the car.
- **Trim Adjustments:** Use the steering trim dial on the remote to fine-tune the car's straight-line tracking if it pulls to one side.

4.2. Driving Tips

- Always operate the RC car in open areas free from obstacles, people, and pets.
- Avoid driving in wet conditions or through puddles to prevent damage to electronics.
- Start with gentle throttle inputs to get a feel for the car's speed and handling before attempting high-speed maneuvers.
- Practice steering and throttle control to master turns and stops.
- When the car's speed decreases significantly, it indicates the battery is low and needs recharging.

5. MAINTENANCE

5.1. Cleaning

- After each use, especially after off-road driving, gently brush off dirt, dust, and debris from the car's chassis, wheels, and suspension components.
- Use a soft, dry cloth to wipe down the body. Do not use water or chemical cleaners directly on electronic components.
- Inspect the wheels and axles for any tangled hair or string that could impede movement.

5.2. Battery Care

- Always fully charge the battery before first use.

- Do not overcharge or completely discharge the battery.
- Remove batteries from the RC car and remote control when not in use for extended periods to prevent leakage.
- Store batteries in a cool, dry place away from direct sunlight and extreme temperatures.

5.3. Storage

- Store the RC car and remote control in a dry, cool environment.
- Keep away from direct sunlight and heat sources.
- If storing for a long time, ensure batteries are removed.

6. TROUBLESHOOTING

If you encounter issues with your DOUBLE E RC Car, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Car does not respond to remote.	Low batteries in car or remote. Not paired correctly. Interference.	Recharge/replace batteries. Turn both off, then on again to re-pair. Move to an area with less electronic interference.
Car moves slowly or stops.	Low car battery. Obstruction in wheels/axles.	Recharge car battery. Check and clear any debris from moving parts.
Car pulls to one side.	Steering trim needs adjustment. Damaged steering components.	Adjust the steering trim dial on the remote. Inspect for physical damage; contact support if necessary.

7. SPECIFICATIONS

Feature	Detail
Model Number	E331-003
Scale	1:10
Product Dimensions	13.6 x 12.2 x 6.9 inches
Item Weight	2.2 pounds
Manufacturer	Double Eagle
Control Frequency	2.4 GHz

Feature	Detail
Drive System	4-Wheel Drive (4WD)
Recommended Age	8+ Years

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact DOUBLE E customer service directly. Refer to the product packaging or the official DOUBLE E website for the most up-to-date contact details.

Website: [Visit the DOUBLE E Store on Amazon](#) (for general inquiries and product information)

© 2024 DOUBLE E. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question