

[Manuals.plus](#) /

› [Sokany](#) /

› Sokany SK-560 Halogen Oven 13 Liter User Manual

## Sokany SK-560

# Sokany SK-560 Halogen Oven 13 Liter User Manual

Model: SK-560

## INTRODUCTION

---

Thank you for purchasing the Sokany SK-560 Halogen Oven. This versatile appliance is designed to provide efficient and healthy cooking with its high electrical power and advanced features. Please read this manual thoroughly before operating the appliance to ensure safe and optimal performance. Keep this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- This appliance features a safe overheating protection system and automatic shutdown for added safety.

## PRODUCT OVERVIEW

---

The Sokany SK-560 Halogen Oven utilizes halogen heating technology to cook food quickly and efficiently. It features a transparent glass bowl, allowing you to monitor your cooking progress.



Figure 1: Main unit of the Sokany SK-560 Halogen Oven, showing a roasted chicken ready for cooking.

## Components:

- **Control Head:** Contains temperature and timer controls, and the halogen heating element.
- **Glass Bowl:** 13-liter capacity, heat-resistant for cooking.
- **Base Stand:** Provides stable support for the glass bowl.
- **Rack(s):** For placing food inside the oven.
- **Lid Handle:** For safe lifting and placement of the control head.

## Control Panel:

The control head features two main dials:

- **Temperature Dial:** Adjusts cooking temperature.
- **Timer Dial:** Sets cooking duration.



Figure 2: The halogen oven in use, cooking a variety of vegetables.

## SETUP

---

1. **Unpacking:** Carefully remove all packaging materials and accessories. Ensure all components are present and undamaged.
2. **Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is adequate ventilation around the appliance. Do not place it near flammable materials.
3. **Initial Cleaning:** Before first use, wipe the glass bowl and accessories with a damp cloth. Do not immerse the control head in water.
4. **Power Connection:** Ensure the power supply matches the voltage specified on the appliance (220 Watts). Plug the power cord into a grounded electrical outlet.

## OPERATING INSTRUCTIONS

---

The Sokany SK-560 Halogen Oven is designed for various cooking methods, including roasting, baking, grilling, and steaming.

1. **Prepare Food:** Place your food on the appropriate rack inside the glass bowl. Ensure there is enough space for air circulation.
2. **Secure Lid:** Carefully place the control head onto the glass bowl, ensuring it is seated properly and securely.
3. **Set Temperature:** Turn the temperature dial to your desired cooking temperature.
4. **Set Timer:** Turn the timer dial to the desired cooking time. The oven will start heating once the timer is set. The automatic shutdown feature will turn off the oven when the timer expires.
5. **Monitor Cooking:** You can observe the cooking process through the transparent glass bowl.
6. **Remove Food:** Once cooking is complete and the timer has sounded, carefully lift the control head using its handle and place it on a heat-resistant surface. Use oven mitts to remove the hot food and racks from the glass bowl.
7. **Cool Down:** Allow the oven to cool completely before cleaning or storing.



Figure 3: The halogen oven displayed with a variety of meals, demonstrating its versatility.

## CLEANING AND MAINTENANCE

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your halogen oven.

1. **Unplug and Cool:** Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. **Glass Bowl:** The glass bowl can be washed with warm, soapy water. For stubborn food residues, soak the bowl before cleaning. It is often dishwasher safe, but refer to specific product labeling if available.
3. **Racks and Accessories:** Wash racks and other accessories with warm, soapy water.
4. **Control Head:** Wipe the exterior of the control head with a damp cloth. Do NOT immerse the control head in water or any other liquid. Ensure no water enters the electrical components.
5. **Storage:** Store the clean and dry oven in a cool, dry place.

## TROUBLESHOOTING

---

If you encounter any issues with your Sokany SK-560 Halogen Oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; timer not set; power outage.	Ensure the oven is properly plugged in. Set the timer dial. Check your household's power supply.
Food is not cooking evenly.	Food overloaded; incorrect temperature/time setting; food placed too close to heating element.	Do not overload the oven. Adjust temperature and time as needed. Use appropriate racks to ensure even heat distribution. Turn food halfway through cooking if necessary.
Smoke or unusual odor during operation.	Food residue on heating element; new appliance odor.	Unplug immediately. Clean the oven thoroughly. A slight odor during first use is normal. If smoke persists, discontinue use and contact customer support.
Timer not working.	Timer dial not properly engaged or faulty.	Ensure the timer dial is turned past the 5-minute mark and then back to the desired time. If it still doesn't work, contact customer support.

## SPECIFICATIONS

---

Feature	Detail
Brand Name	Sokany
Model Number	SK-560
Capacity	13 Liters
Power	220 Watts
Control Type	Push Button (Dials for Temp/Timer)
Materials	Stainless Steel (blades), Glass (bowl)
Special Features	Timer, Overheating Protection, Automatic Shutdown
Product Dimensions (D x W x H)	20 x 40 x 30 cm
Item Weight	10 kg
Color	Silver
Assembly Required	No
Batteries Required	No

## WARRANTY AND SUPPORT

---

Specific warranty information for the Sokany SK-560 Halogen Oven is not provided in this manual. Please refer to the warranty card included with your purchase or contact the retailer for details regarding warranty coverage and customer support. For technical assistance or inquiries, please contact the Sokany customer service department or your local distributor.

