

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Lumote](#) /

> [Lumote Replacement Remote Control for ONKYO RC660S, RC662S, CR-315, CR-515, CR-325, CR-535, CR-715 User Manual](#)

Lumote RC660S, RC662S, CR-315, CR-515, CR-325, CR-535, CR-715

Lumote Replacement Remote Control User Manual

Compatible with ONKYO Models: RC660S, RC662S, CR-315, CR-515, CR-325, CR-535, CR-715

INTRODUCTION

This manual provides comprehensive instructions for the Lumote Replacement Remote Control, designed to function as a direct replacement for various ONKYO audio systems. This remote control replicates all functions of the original ONKYO RC660S, RC662S, CR-315, CR-515, CR-325, CR-535, and CR-715 remote controls. No programming or setup codes are required; simply insert batteries, and the remote is ready for immediate use.

SETUP

1. Installing Batteries

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Multiple views of the Lumote replacement remote control. The back view clearly shows the battery compartment, which can be opened by sliding the cover down to insert two AAA batteries.

2. Initial Use

Once batteries are installed, the Lumote Replacement Remote Control is ready for immediate use. No additional setup codes or programming are required. Point the remote towards your ONKYO audio system and begin operation.

OPERATING INSTRUCTIONS

This remote control provides full functionality for your compatible ONKYO audio system. Below is a guide to the primary buttons and their functions.





LUMOTE



Image: Front view of the Lumote replacement remote control, displaying all buttons and their labels. This image serves as a visual reference for the button descriptions below.

Key Button Functions:

- **Power ():** Turns the ONKYO system on or off.
- **AV:** Selects the audio/video input source.
- **SHIFT:** Activates secondary functions for certain buttons (if applicable).
- **V+ / V-:** Adjusts the volume up or down.
- **OK:** Confirms selections in menus.
- **Navigation Arrows (◀▶ ▲ ▼):** Navigates through menus and options.
- **MENU:** Accesses the main menu of the ONKYO system.
- **EXIT / RETURN:** Exits current menu or returns to the previous screen.
- **Number Buttons (0-9):** Direct input for channel selection or numerical settings.
- **GUIDE:** Accesses program guide (if supported by the connected device).
- **FAV:** Accesses favorite channels or settings.
- **PIC:** Adjusts picture settings.
- **TOP MENU:** Accesses the top level menu of a disc.
- **TITLE:** Accesses the title menu of a disc.
- **VOL+ / VOL-:** Dedicated volume control.
- **CH+ / CH-:** Changes channels or navigates through tracks.
- **REPEAT:** Repeats playback (e.g., track, chapter).
- **TEXT:** Displays teletext (if supported).
- **DISP:** Displays on-screen information.
- **TV:** Switches control to the television (if programmed or universal function).
- **Colored Buttons (Red, Green, Yellow, Blue):** Often used for specific functions within menus or interactive services.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip):** Controls media playback.
- **Epg:** Electronic Program Guide.
- **AUTO/TRK:** Auto track search or similar function.
- **SUBT:** Subtitle control.
- **ZOOM:** Zooms in/out on the display.
- **BACK:** Returns to the previous screen or step.
- **DEV1 - DEV4:** Device selection buttons for universal remote functionality (if applicable, may require programming not covered here as this is a direct replacement).

Note: The specific functionality of some buttons may vary depending on the ONKYO model and the connected devices.

MAINTENANCE

Cleaning the Remote Control

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, or solvents, as these can damage the surface and markings.

Battery Replacement

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both AAA batteries at the same time with new ones.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**

Ensure the batteries are correctly inserted with the proper polarity (+/-). Replace old or depleted batteries with new AAA batteries. Make sure there are no obstructions between the remote control and the ONKYO system's infrared receiver. Ensure you are within the effective range of the remote control.

- **Specific buttons not working:**

Check if the button is stuck or dirty. Clean the remote as described in the Maintenance section. If only specific buttons are unresponsive, and others work, it might indicate a fault with the remote itself.

- **System not turning on/off:**

Verify that the ONKYO system is plugged into a power source and is not in a standby mode that prevents remote activation. Test other functions to confirm the remote is generally working.

If troubleshooting steps do not resolve the issue, please refer to the Warranty and Support section.

SPECIFICATIONS

Brand	Lumote
Compatible Devices	ONKYO RC660S, RC662S, CR-315, CR-515, CR-325, CR-535, CR-715
Battery Type	2 x AAA batteries (not included)
Item Weight	6 ounces (approximately 170 grams)
Package Dimensions	9 x 3 x 2 inches (approximately 22.86 x 7.62 x 5.08 cm)

Max Number of Supported Devices	1 (Direct replacement for specified ONKYO models)
--	---

WARRANTY INFORMATION

This Lumote Replacement Remote Control comes with a **12-month guarantee** from the date of purchase. This warranty covers manufacturing defects and ensures the remote functions as described. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

SUPPORT

For further assistance, technical support, or warranty inquiries, please contact the retailer or manufacturer directly. Refer to your purchase documentation for specific contact details. When contacting support, please have your product model information and purchase date available.