

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Lumote](#) /

› Lumote Replacement Remote Control for ONKYO RC-962R TX-8220 TX8220 User Manual

## Lumote RC-962R

# Lumote Replacement Remote Control for ONKYO RC-962R TX-8220 TX8220 User Manual

Model: RC-962R

## INTRODUCTION

---

This manual provides instructions for the Lumote Replacement Remote Control, designed as a direct replacement for ONKYO RC-962R, TX-8220, and TX8220 audio/video receivers. This remote offers all the functions of your original remote control without requiring any complex setup codes. Simply insert batteries, and it is ready for immediate use.

The remote control is compatible with the following ONKYO models:

- ONKYO RC-962R
- ONKYO TX-8220
- ONKYO TX8220

## SETUP

---

### Battery Installation

The Lumote Replacement Remote Control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: The Lumote Replacement Remote Control, displaying its front, back, and side profiles. The back view clearly shows the battery compartment cover located at the bottom.

## Initial Use

No setup codes or programming are required. Once batteries are installed, the remote control is ready to operate your compatible ONKYO receiver immediately.

## OPERATING INSTRUCTIONS

---

To operate your ONKYO receiver with this remote control, point the remote directly at the receiver's infrared sensor. Ensure there are no obstructions between the remote and the receiver. Press the desired function button to control your device.

### Button Functions Overview

The remote control features a comprehensive set of buttons designed to replicate the functionality of your original ONKYO remote. Refer to the image below for a visual guide to the buttons and their general functions.



Image: Front view of the Lumote Replacement Remote Control, showcasing all its buttons and their labels for easy identification.

Below is a detailed description of the primary button groups and their functions:

#### Power & Input Selection:

- **Power Button** (⏻): Turns the receiver on or off.
- **AV**: Selects the Audio/Video input source.
- **SHIFT**: Used in combination with other buttons for secondary functions (if applicable).

#### Volume & Mute:

- **V+ / V-**: Increases or decreases the volume level.
- **Mute** (🔇): Mutes or unmutes the audio output.

#### Navigation & Confirmation:

- **Arrow Buttons** (▲ ▼ ◀ ▶): Navigates through menus and options.
- **OK**: Confirms selections or enters menus.
- **EXIT**: Exits the current menu or screen.
- **RETURN**: Returns to the previous screen or menu.
- **MENU**: Accesses the main menu of the receiver.

- **TOP MENU:** Accesses the top-level menu.
- **TITLE:** Accesses disc title menu (for connected players).

#### **Numeric Keypad:**

- **0-9:** Enters numbers for channel selection, time input, or other numerical functions.
- **./?:** Special character or function key.
- **P/C:** Picture or character input.
- **FAV:** Accesses favorite channels or settings.

#### **Playback & Media Controls:**

- **Play (▶):** Starts playback.
- **Pause (⏸):** Pauses playback.
- **Stop (■):** Stops playback.
- **Fast Forward (⏩):** Fast forwards through media.
- **Rewind (⏪):** Rewinds through media.
- **Skip Forward (⏭):** Skips to the next track/chapter.
- **Skip Back (⏮):** Skips to the previous track/chapter.
- **REPEAT:** Repeats current track or playlist.

#### **Display & Information:**

- **TEXT:** Displays text information.
- **DISP (Display):** Changes display modes or shows on-screen information.
- **PICT (Picture):** Adjusts picture settings.
- **CH/PAGE (+/-):** Changes channels or pages.
- **EPG:** Electronic Program Guide.
- **SUBT (Subtitle):** Toggles subtitles.
- **ZOOM:** Zooms in or out on the display.

#### **Device Selection:**

- **DEV1, DEV2, DEV3, DEV4:** Selects different devices if the remote supports multi-device control (e.g., TV, DVD, AUX).

## **MAINTENANCE**

---

### **Cleaning the Remote Control**

To maintain the remote control's appearance and functionality, clean it regularly:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

### **Battery Replacement**

Replace batteries when the remote control becomes unresponsive or its range decreases. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

## Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

## TROUBLESHOOTING

---

If you experience issues with your Lumote Replacement Remote Control, try the following troubleshooting steps:

- **Remote not responding:**
  - Ensure the remote is pointed directly at the ONKYO receiver's infrared sensor.
  - Check for any obstructions between the remote and the receiver.
  - Verify that the batteries are installed correctly with the correct polarity (+/-).
  - Replace the batteries with fresh AAA batteries.
- **Intermittent functionality:**
  - This often indicates low battery power. Replace the batteries.
  - Ensure the remote's infrared emitter is clean and free from dirt or smudges.
- **Specific buttons not working:**
  - Confirm that the button's function is supported by your specific ONKYO receiver model.
  - If multiple buttons are affected, try replacing the batteries.

If these steps do not resolve the issue, please refer to the support information provided in the Warranty and Support section.

## SPECIFICATIONS

---

<b>Brand</b>	Lumote
<b>Model Number</b>	RC-962R
<b>Compatible Devices</b>	ONKYO RC-962R, TX-8220, TX8220
<b>Batteries Required</b>	2 x AAA (not included)
<b>Item Weight</b>	6 ounces (approximately 170 grams)
<b>Package Dimensions</b>	9 x 3 x 2 inches (approximately 22.86 x 7.62 x 5.08 cm)
<b>Special Feature</b>	Universal (direct replacement, no programming needed)

## WARRANTY AND SUPPORT

---

### Warranty Information

This Lumote Replacement Remote Control comes with a 12-month guarantee from the date of purchase. This warranty covers manufacturing defects and ensures the remote control functions as described under normal use.

### Customer Support

For any questions, technical assistance, or warranty claims, please contact your retailer or the point of purchase. Please have your purchase details and the product model number (RC-962R) ready when contacting support.