

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Yintiny](#) /

> [Yintiny Rechargeable Leather CD Player with Speakers, Bluetooth Transmitter, Model TMB8 User Manual](#)

Yintiny TMB8

Yintiny Rechargeable Leather CD Player

MODEL TMB8 INSTRUCTION MANUAL

Introduction

Thank you for choosing the Yintiny TMB8 Rechargeable Leather CD Player. This device combines classic CD playback with modern Bluetooth connectivity, offering a versatile audio experience. Please read this manual carefully to ensure proper use and maintenance of your new CD player.

Safety Information

- Do not expose the device to water or excessive moisture.
- Avoid extreme temperatures and direct sunlight.
- Do not disassemble or attempt to repair the device yourself. Contact qualified personnel for service.
- Keep out of reach of children.
- Use only the provided charging cable.

Package Contents

- Yintiny TMB8 CD Player
- Standard packaging
- Basic remote control
- Charging cable
- User Manual (this document)

Product Overview

The Yintiny TMB8 is a compact and portable CD player featuring a vintage leather design. It supports multiple audio sources including CD, Bluetooth, and USB, and offers both Bluetooth transmission and 3.5mm AUX audio output.



Image: The Yintiny TMB8 CD Player highlighting its multiple connectivity options including wireless remote control, AUX connection, USB flash drive connection, and wireless connection & transmission.

1
Into the daily life,
light up the color of life.
On weekends,
it's a recorder of time.
Let the music always be with you.



2
CD player, repeat as you like.
To learn a language, repeat
it sentence by sentence to
overcome language difficulties
to enjoy music, repeat it to
immerse yourself in the
world of art.



3
Repeat function is super powerful
Repeat to listen to the beauty
dig deep into the treasure of music
and bring you the charm of every note



4
CD Support Formats:
Widely compatible with CD
CD-R, CD-RW, CD-MP3, CD-WMA



Image: A multi-functional portable CD player with a vintage design, featuring a CD spinning inside and control buttons on the side.

Setup

1. Charging the Device

- Connect the provided charging cable to the USB-C port on the back of the CD player.
- Plug the other end into a compatible USB power adapter (not included).
- The charging indicator light will show the charging status. A full charge typically takes a few hours.

2. Power On/Off

- To power on, long press the power button (usually integrated with the volume knob) for 3 seconds. The indicator light will illuminate.
- To power off, long press the power button again for 3 seconds.



Image: Visual guide demonstrating how to long-press the power button for 3 seconds to turn the device on/off and how to twist the volume control knob.

Operating Instructions

1. Inserting a CD

- Gently lift the lid of the CD player.
- Place the CD onto the spindle, ensuring it is centered and flat.
- Close the lid.

2. CD Playback

- After inserting a CD and powering on, the device will automatically detect the CD and begin playback.
- Use the control buttons (Play/Pause, Skip Forward, Skip Backward, Stop) on the device or remote control to manage playback.

Video: Demonstration of the Yintiny TMB8 CD Player playing a CD, showcasing the spinning disc and audio output.

3. Bluetooth Transmission (Connecting to External Bluetooth Speakers/Headphones)

- Ensure the CD player is powered on and no CD is actively playing.
- Activate pairing mode on your external Bluetooth device (speakers or headphones).
- On the CD player's remote control, press the Bluetooth button for a few seconds to initiate pairing.
- Once paired, audio from the CD player will transmit to your external Bluetooth device.

Video: A detailed look at the Bluetooth transmitter function of the Yintiny TMB8 CD Player, demonstrating how it connects to external devices.

4. USB Playback

- Insert a USB flash drive containing MP3/WMA audio files into the USB port on the back of the device.
- Press the 'M' (Mode) button to switch to USB mode.
- Use the playback controls to navigate and play your audio files.

5. AUX Audio Output

- Connect one end of a 3.5mm audio cable (not included) to the AUX output port on the back of the CD player.
- Connect the other end to the AUX input of an external speaker or audio system.
- Audio will be routed through the connected external device.

6. Volume Control

- Rotate the volume knob clockwise to increase the volume.
- Rotate the volume knob counter-clockwise to decrease the volume.

7. Using the Remote Control

- The remote control allows for convenient operation of all playback functions, mode selection, and volume adjustment from a distance.
- Ensure the remote has working batteries and is pointed towards the front of the CD player for optimal response.

Maintenance

- Clean the exterior of the device with a soft, dry cloth. Do not use liquid cleaners.
- Keep the CD compartment free of dust and debris.
- Store the device in a cool, dry place when not in use.

Troubleshooting

Problem	Possible Cause	Solution
Device does not power on	Low battery or power issue	Charge the device fully. Ensure the power button is pressed for 3 seconds.
CD does not play or skips	CD is dirty, scratched, or incorrectly inserted	Clean the CD, check for scratches, and reinsert correctly.
No sound from internal speakers	Volume too low, or external audio device connected	Increase volume. Disconnect any external audio devices from the AUX output.
Cannot pair via Bluetooth	Device not in pairing mode, or too far from external device	Ensure the CD player is in Bluetooth pairing mode (via remote). Move devices closer.
Remote control not working	Batteries low or line of sight blocked	Replace remote batteries. Ensure no obstructions between remote and player.

Specifications

Feature	Detail
Model Number	TMB8

Feature	Detail
Product Dimensions	10 x 6.5 x 4.53 inches
Item Weight	2.4 pounds
Battery	1 Lithium Ion battery (included)
Connectivity Technology	Bluetooth, Auxiliary, USB
Special Feature	Rechargeable
Supported CD Formats	CD, CD-R, CD-RW, MP3, CD-WMA

Warranty

Please refer to the product packaging or the retailer's website for specific warranty information regarding your Yintiny TMB8 CD Player. Keep your purchase receipt as proof of purchase for any warranty claims.

Support

For further assistance or inquiries, please contact Yintiny customer support through the contact information provided on the product packaging or the official Yintiny website. You may also refer to the retailer's support channels.