

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Yintiny](#) /

> [Yintiny Time Music Box CD Player with Speakers; Bluetooth Transmitter; Festival Gift; BGM Player for Home Decor \(Orange\) Instruction Manual](#)

Yintiny TMB8

Yintiny Time Music Box CD Player Instruction Manual

Model: TMB8 | Brand: Yintiny

PRODUCT OVERVIEW

The Yintiny Time Music Box CD Player (Model: TMB8) is a versatile and portable audio device designed for an enjoyable listening experience. It combines classic aesthetics with modern functionality, allowing playback from various sources including CDs, Bluetooth, and USB. Its compact and rechargeable design ensures music can accompany you anywhere.



Figure 1: Yintiny Time Music Box CD Player (Orange model) with remote and charging cable.

WHAT'S IN THE BOX

Upon unboxing your Yintiny Time Music Box CD Player, please ensure all the following components are present:

- Leather CD Player Unit
- Standard Packaging
- Basic Remote Control
- Charging Cable (USB-C)
- Instruction Manual (this document)



Figure 2: All included accessories: CD player, remote control, charging cable, and manual.

SETUP

Initial Charging

The CD player is equipped with a built-in 3600mAh Lithium Ion battery for portable use. Before first use, it is recommended to fully charge the device.

1. Locate the USB-C charging port on the back of the unit.
2. Connect the provided USB-C charging cable to the port.
3. Connect the other end of the USB-C cable to a compatible USB power adapter (not included) or a powered USB port.
4. The indicator light on the back of the unit will illuminate to show charging status.
5. Once fully charged, the indicator light may change color or turn off. Disconnect the charging cable.

Powering On/Off

To power on the device, locate the volume control knob on the top panel. Press and hold this knob for approximately 3 seconds until the indicator light illuminates and you hear an audible prompt.

To power off, press and hold the same volume control knob for 3 seconds until the indicator light turns

off and the device powers down.



Figure 3: Power switch (long press) and volume control (twist).

OPERATING INSTRUCTIONS

CD Playback

The unit supports CD, CD-R, CD-RW, CD-MP3, and CD-WMA formats.

1. Open the top lid of the CD player.
2. Place a CD onto the spindle in the CD tray.
3. Gently move the tone arm (stylus-like arm) over the CD. This action initiates CD playback.
4. Use the control buttons on the unit or the remote control for playback functions (Play/Pause, Stop, Skip Forward/Backward).

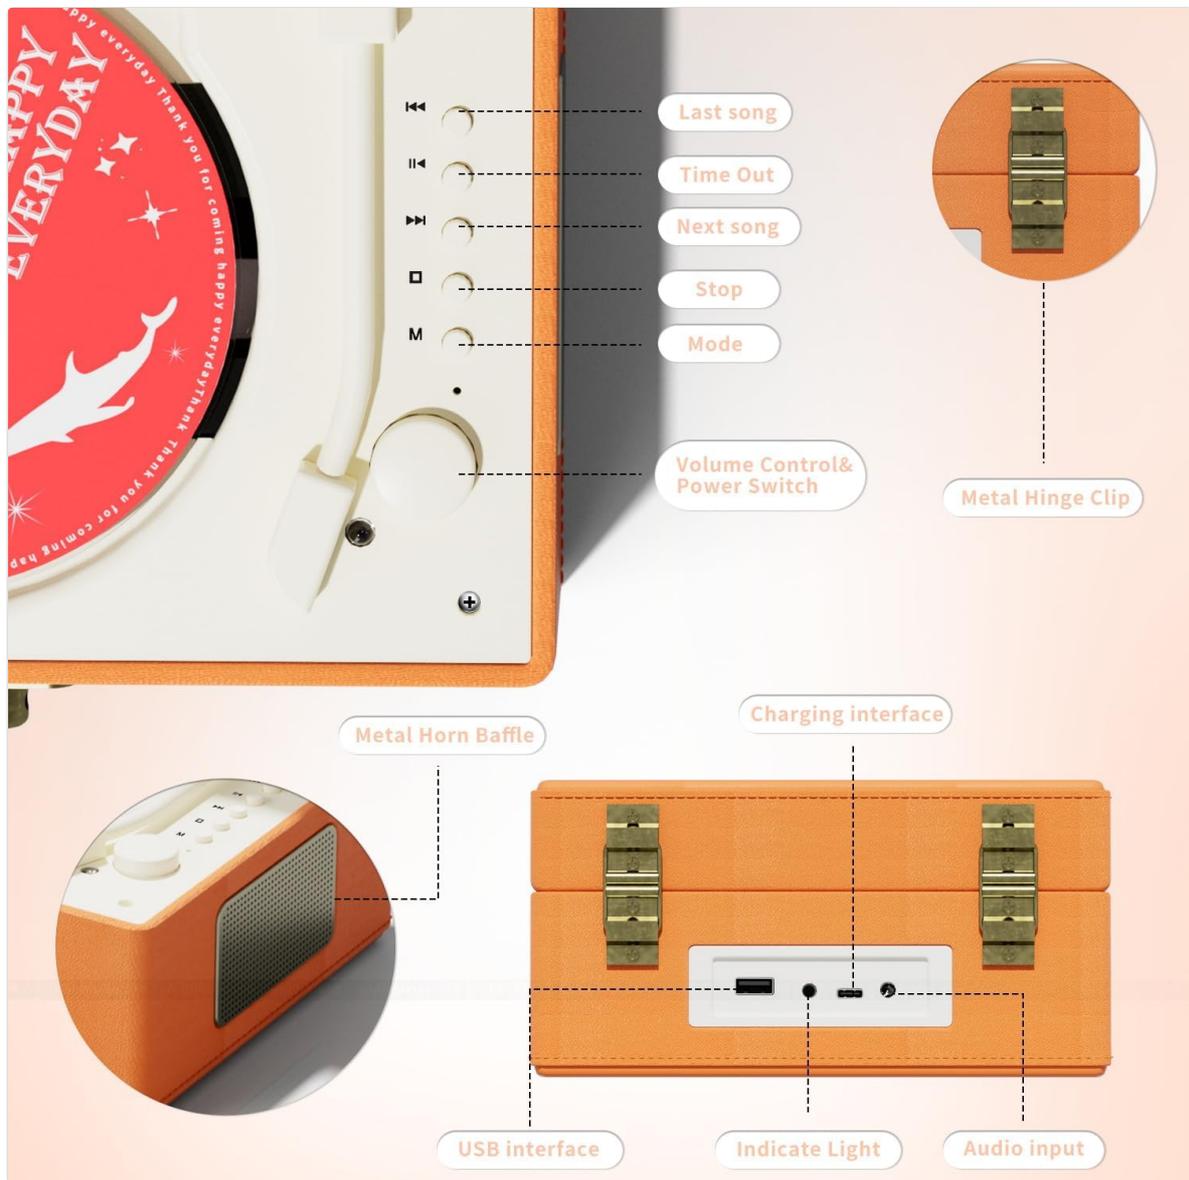


Figure 4: Top panel controls including play/pause, skip, stop, and mode buttons.

Bluetooth Connectivity

The device functions as both a Bluetooth receiver (to play audio from your phone) and a Bluetooth transmitter (to connect to Bluetooth headphones/speakers).

Bluetooth Receiver Mode:

1. Power on the CD player.
2. Press the 'M' (Mode) button on the unit or remote until the indicator light turns blue and you hear "Bluetooth mode".
3. On your mobile device, search for "Time Music Box" in your Bluetooth settings and pair.
4. Once connected, you can stream audio from your device to the CD player.

Bluetooth Transmitter Mode:

This mode allows the CD player to transmit audio from a playing CD to external Bluetooth headphones or speakers.

1. Ensure your Bluetooth headphones/speaker are in pairing mode.
2. With a CD playing, press and hold the Bluetooth button on the remote control for 3 seconds. The CD player will enter Bluetooth transmission mode and attempt to pair.
3. Once successfully paired, audio from the CD will play through your connected Bluetooth device.



Figure 5: Bluetooth connectivity options, including transmitting to headphones/speakers and receiving from a phone.

USB Playback

Insert a USB flash drive into the USB port on the back of the unit. The player will automatically detect and begin playing compatible audio files from the drive.

3.5mm AUX Audio Output

Connect external speakers or headphones using a 3.5mm audio cable to the AUX output port on the back of the unit for alternative audio output.

MAINTENANCE

- Keep the unit clean by wiping with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Ensure the CD tray is free of dust and debris to prevent playback issues.
- Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- Do not attempt to disassemble or repair the unit yourself. Refer to customer service for assistance.

TROUBLESHOOTING

Problem	Possible Solution
Unit does not power on.	Ensure the battery is charged. Press and hold the power knob for 3 seconds.
CD does not play.	Check if the CD is inserted correctly. Ensure the tone arm is moved over the CD. Clean the CD for scratches or smudges.
No sound from speakers.	Increase the volume. Ensure the correct mode (CD, Bluetooth, USB) is selected. Check external speaker connections if applicable.
Bluetooth pairing fails.	Ensure the unit is in Bluetooth mode. Keep devices within range (approx. 10 meters). Restart both devices and try again.

Problem	Possible Solution
Remote control not working.	Ensure batteries are correctly inserted and not depleted. Point the remote directly at the unit's sensor.

SPECIFICATIONS

Product Dimensions: 7.95 x 5.9 x 4 inches

Item Weight: 2.38 pounds

Model Number: TMB8

Battery: 1 Lithium Ion battery (3600mAh, included)

Connectivity Technology: Bluetooth, Auxiliary, USB

Supported CD Formats: CD, CD-R, CD-RW, CD-MP3, CD-WMA

Manufacturer: Yintiny

Country of Origin: China

WARRANTY AND SUPPORT

The Yintiny Time Music Box CD Player comes with a **15-day return policy** and a **one-year warranty** from the date of purchase.

For any assistance, technical support, or warranty claims, please contact our customer service department via email. Refer to your purchase documentation for specific contact details.