

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ECONTROLLY](#) /
- › [ECONTROLLY XRT270 Voice Remote Control User Manual for Vizio Smart TVs](#)

## ECONTROLLY XRT270

# ECONTROLLY XRT270 Voice Remote Control User Manual

For Vizio Smart TVs

## 1. INTRODUCTION

This manual provides essential instructions for the ECONTROLLY XRT270 Voice Remote Control. It covers how to set up, operate, and troubleshoot your remote for use with compatible Vizio Smart TVs. Please read this manual thoroughly before using the remote control.

## 2. PRODUCT OVERVIEW

The ECONTROLLY XRT270 is a replacement voice-enabled remote control designed for seamless integration with various Vizio Smart TV models. It features dedicated buttons for popular streaming services and a voice command function for convenient control.





Image 1: Front view of the ECONTROLLY XRT270 Voice Remote Control, showing all buttons including power, input, streaming service shortcuts, microphone, settings, navigation pad, back, home, and star buttons.





1.75 inch

6.0 inch




Image 2: The ECONTROLLY XRT270 Voice Remote Control with indicated dimensions of approximately 6.0 inches in length and 1.75 inches in width.

## 3. SETUP

---

### 3.1 Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two (2) AAA ALKALINE batteries, ensuring correct polarity (+ and -). Do not use rechargeable batteries.
3. Close the battery compartment cover securely.

### 3.2 Pairing the Remote Control

The XRT270 remote control requires pairing with your Vizio Smart TV to enable full functionality, especially voice control. Follow these steps:

1. Ensure your Vizio Smart TV is powered on.
2. Hold the remote control within 3 feet (approximately 1 meter) of your Vizio Smart TV.
3. Press and hold the **MIC** (Microphone) button on the remote control.
4. The remote will enter pairing mode. Follow any on-screen prompts that may appear on your TV.
5. Once successfully paired, a confirmation message should appear on your TV screen.

If pairing fails, ensure the batteries are correctly installed and try the process again. Refer to your TV's user manual for specific pairing instructions if needed.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Basic Functions

- **Power Button** (⏻): Turns the TV on or off.
- **Input Button**: Cycles through available input sources (HDMI 1, HDMI 2, etc.).
- **Navigation Pad**: Use the circular pad to navigate menus and select items. The center button confirms selections.
- **Back Button** (⏪): Returns to the previous screen or menu.
- **Home Button** (🏠): Accesses the TV's main home screen or smart TV interface.
- **Star Button** (★): Often used for favorites or customizable shortcuts.
- **Settings Button** (⚙️): Opens the TV's settings menu.

### 4.2 Voice Control

After successful pairing, you can use the voice control feature:

1. Press and hold the **MIC** (Microphone) button.
2. Speak your command clearly into the microphone located on the remote control.
3. Release the **MIC** button when you are finished speaking.

Examples of voice commands include: "Open Netflix," "Switch to HDMI 1," "Search for action movies," or "Turn

off TV."

### 4.3 Streaming Service Shortcut Buttons

The remote includes dedicated buttons for quick access to popular streaming services:

- **sig**
- **NETFLIX**
- **prm video** (Prime Video)
- **redbox**
- **iHeartRADIO**
- **CRACKLE**
- **WATCH FREE+**

Pressing these buttons will directly launch the corresponding application on your Vizio Smart TV, provided the app is installed and your TV is connected to the internet.

## 5. COMPATIBLE VIZIO SMART TV MODELS

---

The ECONTROLLY XRT270 Voice Remote Control is compatible with the following Vizio Smart TV models:

- V655-J09
- V705-J03
- V755-J04
- V706-J03
- V756-J03
- V4K75C-08
- V4K86C-08
- OLED55-H1
- M55Q6-L4
- M65Q6-L4
- M75Q6-L4
- M43Q6-J04
- M50Q6-J01
- M55Q6-J01
- VHD24M-08
- D40fM-K09
- D43fM-K04
- VFD32M-08
- P85QX-J01
- P65QX-H1
- V435-J01
- V505-J09
- V555-J01
- VHD32M-08
- D24fM-K01
- D32fM-K01

- D32fM-K07
- VFD40M-08
- VFD43M-08
- V435M-K04
- V585M-K01
- V655M-K03
- V655M-K04
- V705M-K03
- V755M-K03
- V506-J09
- V756-J03
- V4K43M-08
- V4K43C-08
- V4K50M-08
- V4K65M-08
- V4K65C-08
- V4K70M-08
- V4K75M-08
- M43Q6M-K04
- M55Q6M-K01
- M65Q6M-K04
- M70Q6M-K03
- M75Q6M-K03
- M50QXM-K01
- M65QXM-K03
- M75QXM-K03
- M65Q6-J09
- M70Q6-J03
- M75Q6-J03
- M50Q7-J01
- M55Q7-J01
- M58Q7-J01
- M65Q7-J01
- M70Q7-J03
- M75Q7-J03
- VQP65C-84
- VQP75C-84
- P65Q9-J01
- P75Q9-J01
- P75QX-H1
- P85QX-H1
- OLED65-H1
- V755x-K04

- V435-J01
- V585-J01
- V505M-K09
- V555M-K01
- V4K50C-08
- V4K55M-08
- V4K55C-08

## 6. TROUBLESHOOTING

---

### 6.1 Remote Not Responding

- **Check Batteries:** Ensure AAA alkaline batteries are correctly inserted and not depleted. Replace if necessary.
- **Line of Sight:** Ensure there are no obstructions between the remote and the TV's infrared receiver.
- **Re-pair Remote:** If the remote was previously paired and stopped working, try re-pairing it by following the steps in Section 3.2.

### 6.2 Voice Control Not Working

- **Pairing:** Voice control requires the remote to be paired with the TV. Ensure pairing was successful (Section 3.2).
- **Internet Connection:** Your Vizio Smart TV needs an active internet connection for voice commands to function correctly.
- **Microphone Button:** Ensure you are pressing and holding the **MIC** button while speaking.
- **Distance:** Keep the remote within a reasonable distance from the TV (e.g., within 3 feet during pairing, and generally within typical viewing distance for operation).

### 6.3 Streaming App Buttons Not Working

- **Internet Connection:** Ensure your Vizio Smart TV is connected to the internet.
- **App Installation:** Verify that the corresponding streaming application is installed on your Vizio Smart TV.
- **App Updates:** Ensure the streaming applications are updated to their latest versions.

## 7. SPECIFICATIONS

---

Feature	Detail
Model	XRT270
Brand	ECONTROLLY
Special Feature	Voice Search
Color	Black
Compatible Devices	Television (Vizio Smart TVs)
Max Number of Supported Devices	1

Product Dimensions	6.03 x 1.79 x 0.56 inches
Item Weight	1.76 ounces
Power Source	2 x AAA ALKALINE Batteries (not included)

## 8. SAFETY INFORMATION

---

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries if the remote control will not be used for an extended period.
- Keep the remote control away from water and direct sunlight.
- Do not attempt to disassemble or modify the remote control.

## 9. MAINTENANCE

---

To maintain your remote control, wipe it with a soft, dry cloth. Avoid using abrasive cleaners or solvents.

## 10. WARRANTY AND SUPPORT

---

Specific warranty information for the ECONTROLLY XRT270 remote control is not provided in this manual. For support or warranty inquiries, please refer to the product's purchase documentation or contact the seller directly.