

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY RMF-TX811U Voice Remote Control User Manual for Sony 4K Smart Google TVs

ECONTROLLY RMF-TX811U

ECONTROLLY RMF-TX811U Voice Remote Control User Manual

For Sony 4K Smart Google TVs

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your ECONTROLLY RMF-TX811U Voice Remote Control. This remote is designed as a replacement for specific Sony 4K Smart Google TV models, offering voice control functionality and essential TV navigation.

Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your viewing experience.

PACKAGE CONTENTS

- 1 x ECONTROLLY RMF-TX811U Voice Remote Control

Note: AAA ALKALINE batteries are required and are not included in the package.

SETUP

1. Battery Installation

To power your remote control, you will need two (2) AAA ALKALINE batteries. Ensure you use new, non-rechargeable alkaline batteries for optimal performance.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA ALKALINE batteries, matching the positive (+) and negative (-) terminals as indicated inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

Important: Do not use rechargeable batteries. Using rechargeable batteries may result in improper operation or damage to the remote control.



Image: Front view of the ECONTROLLY RMF-TX811U Voice Remote Control. This image displays the layout of the buttons, including navigation, volume, channel, and dedicated app buttons.

2. Pairing Instructions

The RMF-TX811U remote control requires pairing with your Sony 4K Smart Google TV to enable full functionality, especially the voice control feature. Follow these steps to pair the remote:

1. Ensure your TV is powered on.
2. Point the remote control towards your TV.
3. Simultaneously press and hold the **VOL- (Volume Down) button** and the **Google Assistant key (microphone icon)** for approximately 2 seconds.
4. Release the buttons when a pairing confirmation message appears on your TV screen.
5. Follow any on-screen prompts to complete the pairing process.

If pairing is unsuccessful, ensure the batteries are correctly installed and try the process again. You may need to move closer to the TV during pairing.

OPERATING THE REMOTE CONTROL

The RMF-TX811U remote control provides intuitive access to your Sony 4K Smart Google TV features. Below is a general guide to its primary functions:

Button Functions Overview

- **Power Button** (⏻): Turns the TV on or off.
- **TV Button**: Switches to TV input.
- **Input Button** (⏮): Cycles through available input sources (HDMI, AV, etc.).
- **Menu Button**: Accesses the TV's main menu or settings.
- **Navigation Pad (Up, Down, Left, Right, Enter)**: Used to navigate menus and select options.
- **Back Button** (⏮): Returns to the previous screen or menu.
- **Home Button** (🏠): Returns to the TV's home screen.
- **Volume Up/Down (VOL+/VOL-)**: Adjusts the TV's volume.
- **Mute Button** (🔇): Mutes or unmutes the TV sound.
- **Channel Up/Down (CH+/CH-)**: Changes TV channels.
- **Google Assistant Key (Microphone Icon)**: Activates voice control (requires pairing).
- **Settings Button** (⚙️): Quick access to TV settings.
- **Play/Pause Button** (⏮): Controls media playback.
- **Dedicated App Buttons (Crunchyroll, Netflix, Disney, Prime Video, YouTube, Music)**: Direct access to these streaming applications.



Image: A person using the ECONTROLLY RMF-TX811U remote control with a Sony 4K Smart Google TV setup. This illustrates the remote's intended use in a home entertainment environment.

Voice Control Functionality

Once paired, the Google Assistant key allows you to use voice commands to control your TV. Press and hold the Google Assistant key, speak your command clearly into the remote's microphone, and then release the button. Examples of commands include:

- "Open Netflix"
- "Change to HDMI 1"
- "Search for action movies"
- "What's the weather?"

Compatible TV Models

This remote control is compatible with the following Sony 4K Smart Google TV models:

- KD-85X77L

- KD-43X77L
- KD-65X77CL
- KD-75X77L
- KD-75X77CL
- KD-65X77L
- KD-50X77L
- KD-55X77L

Compatibility is specifically for these models. Functionality with other Sony TV models or non-Sony TVs is not guaranteed.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or if the voice control feature stops working reliably. Always replace both batteries at the same time with new AAA ALKALINE batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote to extreme temperatures, direct sunlight, or high humidity.


TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote is not responding.	• Check if batteries are installed correctly with correct polarity. • Replace old batteries with new AAA ALKALINE batteries. • Ensure there are no obstructions between the remote and the TV's IR receiver.
Voice control is not working.	• The remote may not be paired. Follow the "Pairing Instructions" in the Setup section. • Ensure you are holding the Google Assistant key while speaking and releasing it afterward. • Check TV's network connection, as voice features often require internet access. • Ensure the TV's software is up to date.
Specific buttons are not working.	• Verify the remote is compatible with your specific TV model. • Try re-pairing the remote with the TV. • Clean the remote, ensuring no debris is lodged under the buttons.

SPECIFICATIONS

- **Model Number:** RMF-TX811U
- **Brand:** ECONTROLLY
- **Special Feature:** Voice Search
- **Color:** Black

- **Compatible Devices:** Sony 4K Smart Google Television (Specific models listed in "Operating" section)
- **Power Source:** 2 x AAA ALKALINE Batteries (not included)
- **Product Dimensions:** 6.95 x 1.51 x 0.56 inches (approximately 17.65 x 3.84 x 1.42 cm)
- **Item Weight:** 1.76 ounces (approximately 50 grams)

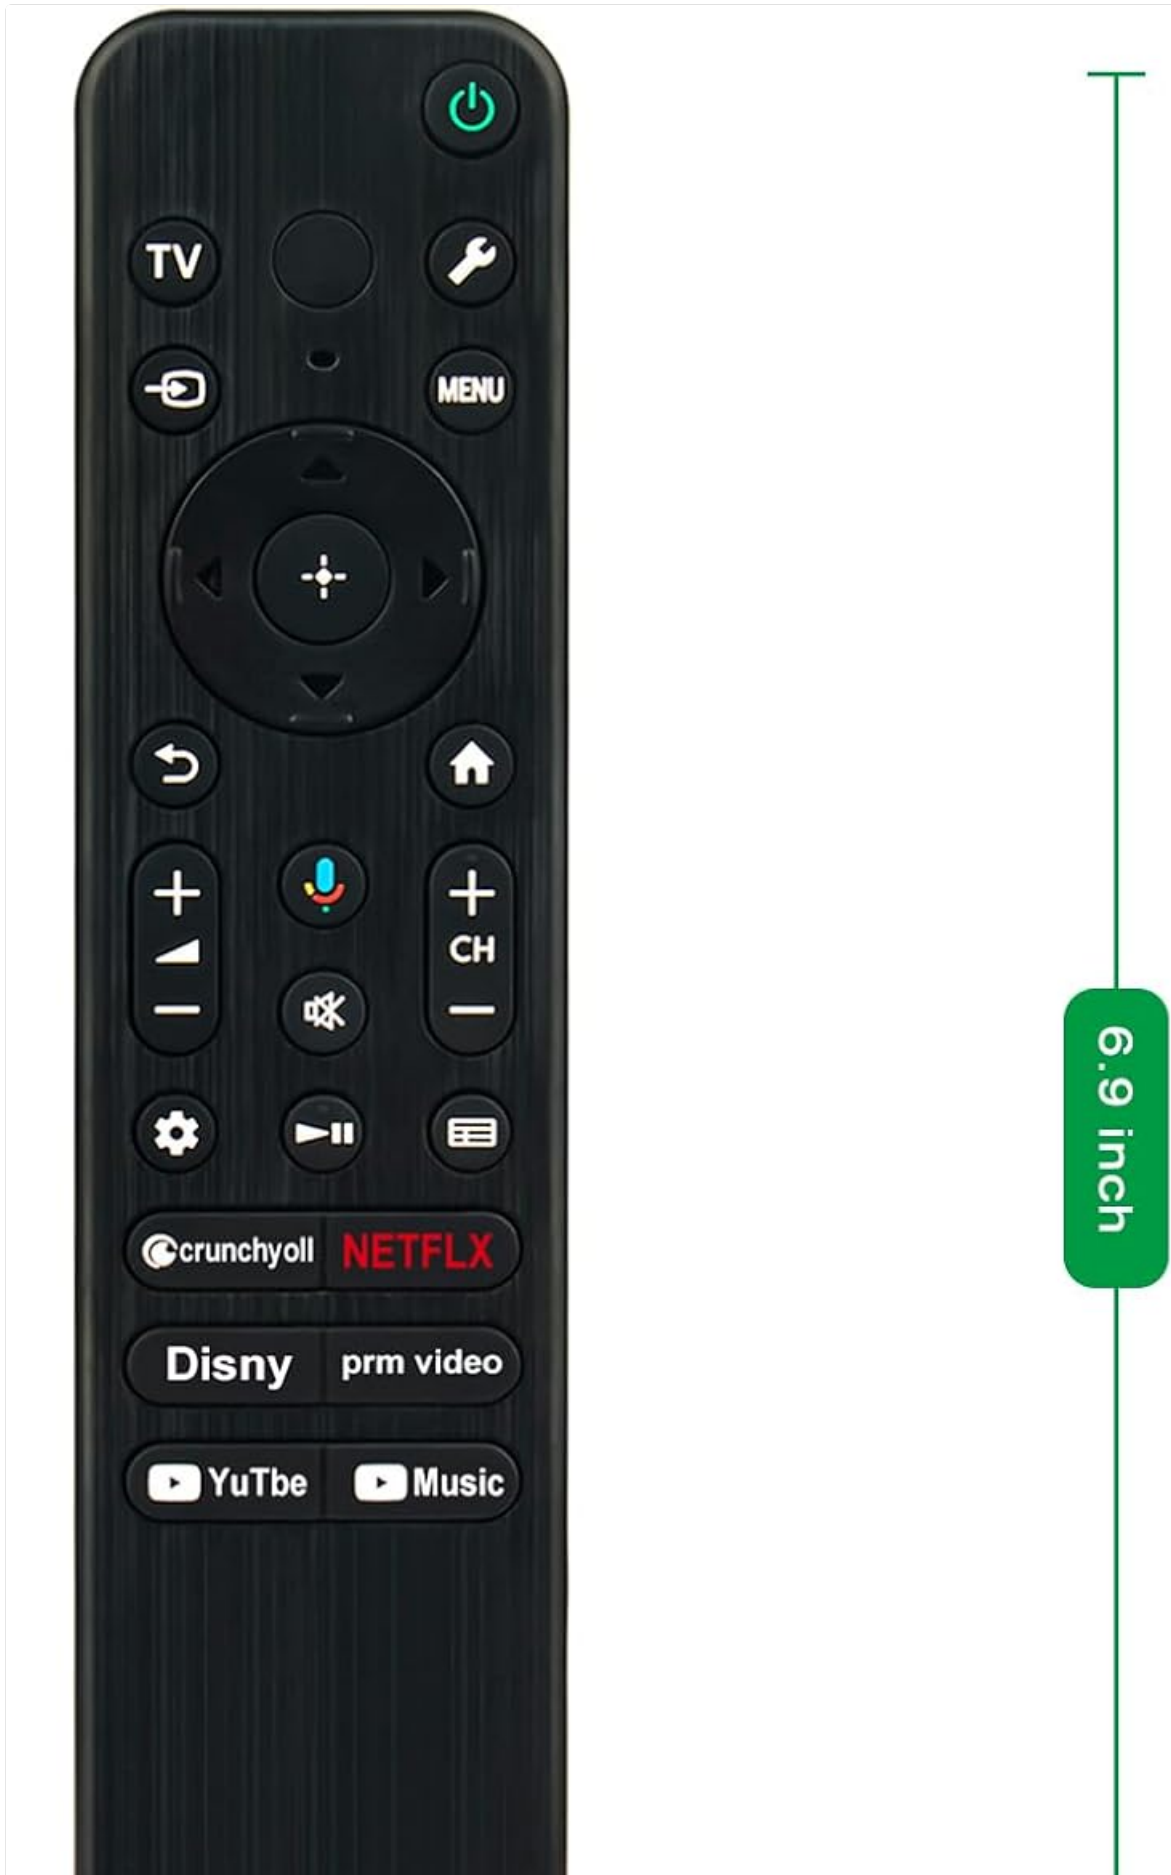

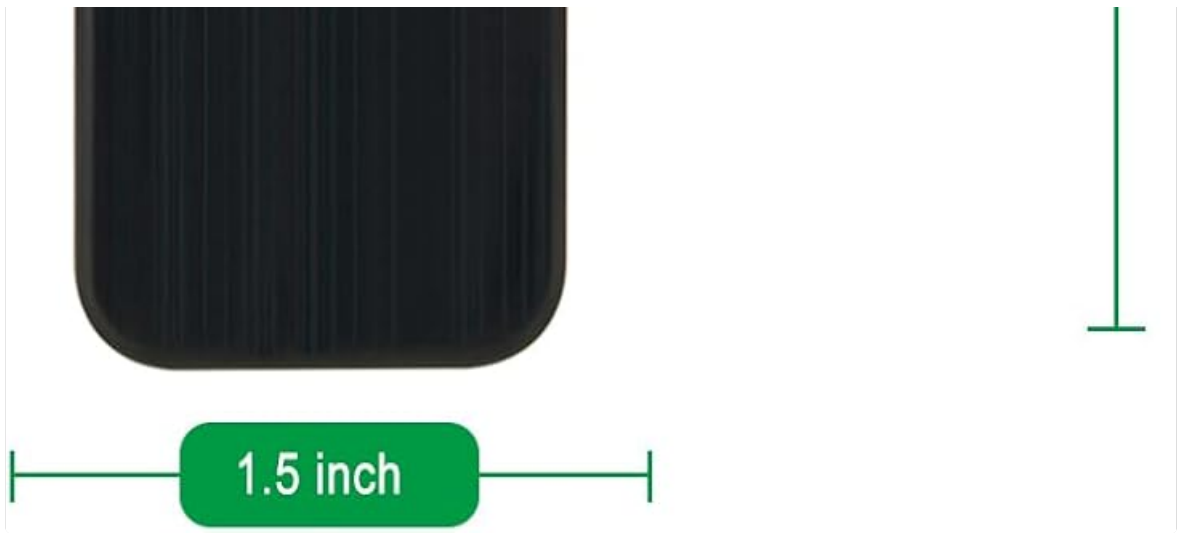


Image: The ECONTROLLY RMF-TX811U remote control displayed with its approximate length (6.9 inches) and width (1.5 inches) measurements. This provides a visual reference for the remote's physical size.

WARRANTY AND SUPPORT

For any questions, technical assistance, or warranty inquiries regarding your ECONTROLLY RMF-TX811U Voice Remote Control, please contact the seller or manufacturer directly through your purchase platform. Please refer to your purchase documentation for specific warranty terms and contact information.

© 2026 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Answered questions about this manual

How do I change the language or subtitles using the ECONTROLLY RMF-TX811U remote control?

The ECONTROLLY RMF-TX811U remote control is a replacement for Sony 4K Smart Google TVs. While the manual does not list a dedicated "Subtitle" button, you can manage these settings through the TV's software interface...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0DF729XVZ>

More documents and user manuals: <https://manuals.plus/>