

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY TV Stand Legs Instruction Manual for Hisense 55U6G TV

ECONTROLLY 55U6G

ECONTROLLY TV Stand Legs Instruction Manual for Hisense 55U6G TV

Model: 55U6G

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and proper installation and use of your ECONTROLLY TV Stand Legs, designed specifically for the Hisense 55U6G Series Quantum ULED 4K ULED Smart Android TV. Please read this manual thoroughly before installation to ensure correct setup and to prevent damage to your television or the stand.

2. PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, please contact customer support.

- 1 Pair of TV Stand Legs (Left and Right)
- Mounting Screws (Quantity: 4)



Figure 2.1: Contents of the package, showing two TV stand legs and four mounting screws.

3. SAFETY INFORMATION

Please observe the following safety precautions:

- Ensure the television is placed on a stable, level surface.
- Do not exceed the weight capacity of the stand or the surface it rests on.
- Keep small parts, such as screws, away from children to prevent choking hazards.
- Always handle the television with care during installation to avoid injury or damage.

4. SETUP AND INSTALLATION

Follow these steps to correctly install the TV stand legs onto your Hisense 55U6G television.

4.1 Identify Left and Right Legs

Each stand leg is marked with an 'L' for Left and 'R' for Right. Ensure you match the correct leg to the corresponding side of the television.



Figure 4.1: Close-up view of the TV stand legs showing 'L' and 'R' markings for proper orientation.

4.2 Attach Legs to TV

1. Carefully place your Hisense 55U6G TV face down on a soft, clean surface to prevent screen damage.
2. Align the Left stand leg with the mounting holes on the left side of the TV's bottom panel.
3. Insert two mounting screws into the designated holes and tighten them securely with a screwdriver. Do not overtighten.
4. Repeat the process for the Right stand leg on the right side of the TV.



Figure 4.2: Illustration of the TV stand legs securely attached to the base of a television.

4.3 Non-Slip Pads

The stand legs are equipped with soft non-slip pads on their base. These pads protect your cabinet surface from scratches and help keep the TV stable, preventing accidental slipping.



Figure 4.3: Detail showing the non-slip pad integrated into the base of the TV stand leg for surface protection and stability.

5. OPERATING INSTRUCTIONS

Once the stand legs are securely installed, carefully lift the television and place it upright on a stable, level surface such as a TV cabinet or table. Ensure the television is balanced and does not wobble. Connect all necessary cables (power, HDMI, etc.) to your TV.

6. MAINTENANCE

The ECONTROLLY TV Stand Legs require minimal maintenance. Periodically check the mounting screws to ensure they remain tight. Clean the legs with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these may damage the finish.

7. TROUBLESHOOTING

- **TV wobbles after installation:** Ensure all screws are securely tightened. Verify the TV is placed on a completely flat and stable surface.
- **Legs do not fit:** Double-check that you have the correct model (Hisense 55U6G) and that the 'L' and 'R' legs are aligned with the correct sides of the TV.
- **Scratches on furniture:** Confirm that the non-slip pads are intact and properly positioned on the bottom of the legs.

8. SPECIFICATIONS

Feature	Detail
Brand	ECONTROLLY
Compatible TV Model	Hisense 55U6G
Material	Metal (with non-slip pads)
Color	Gray
Product Dimensions (each leg)	Approximately 8 x 5 x 1 inches (20.3 x 12.7 x 2.5 cm)
Item Weight (total)	12.3 ounces (350 grams)



Figure 8.1: Visual representation of the dimensions of the TV stand legs.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller's contact information provided at the time of purchase or visit the ECONTROLLY official support channels. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DF72GKDR>

More documents and user manuals: <https://manuals.plus/>