

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY RAV576 VDM8710 Remote Control Instruction Manual for Yamaha AV Receivers RX-A2A RX-A2ABL

ECONTROLLY RAV576 VDM8710

ECONTROLLY RAV576 VDM8710 Remote Control Instruction Manual

Compatible with Yamaha AV Receivers RX-A2A and RX-A2ABL

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY RAV576 VDM8710 infrared remote control. This remote is designed as a replacement for specific Yamaha AV Receiver models, offering straightforward operation without the need for programming. Please read this manual thoroughly before use to ensure proper functionality.



Image 1.1: Angled view of the RAV576 VDM8710 remote control.

2. PACKAGE CONTENTS

Please check the package for the following item:

- 1 x ECONTROLLY RAV576 VDM8710 Remote Control

Note: Batteries and additional instructions are not included in the package.

3. SETUP

3.1 Battery Installation

The remote control requires AAA ALKALINE batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two (2) AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Important: Do not use rechargeable batteries. Only AAA ALKALINE batteries are recommended for optimal performance and to prevent potential damage.

3.2 Initial Use

This remote control is pre-programmed and does not require any additional setup or programming. Once batteries are installed, it is ready for use with compatible Yamaha AV Receivers.





Image 3.1: Front view of the RAV576 VDM8710 remote control with button layout.

4. OPERATION

4.1 Compatibility

This remote control is compatible with the following Yamaha AV Receiver models:

- RX-A2A
- RX-A2ABL

4.2 Basic Functions

The remote control operates via infrared (IR) signals. Ensure a clear line of sight between the remote control and the AV receiver's IR sensor for proper communication.

Key functions include:

- **Power Button:** Turns the AV receiver on or off.
- **Input Selection:** Buttons for selecting various audio/video inputs (e.g., HDMI, TUNER, NET, USB).
- **Volume Control:** Adjusts the master volume level.
- **Mute:** Silences the audio output.
- **Navigation Buttons:** Up, Down, Left, Right, and ENTER buttons for menu navigation.
- **Scene Buttons (1-4):** Recall pre-registered settings for specific listening environments.
- **Number Buttons (1-8):** For direct input selection or other numerical entries.

- **Home/Menu:** Accesses the receiver's main menu or home screen.



Image 4.1: Remote control in use with a home theater system.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

5.2 Storage

When not in use for extended periods, store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for several weeks or months, it is advisable to remove the batteries to prevent leakage and potential damage to the battery compartment.

6. TROUBLESHOOTING

6.1 Remote Not Responding

- **Check Batteries:** Ensure the batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with fresh AAA ALKALINE batteries.
- **Line of Sight:** Verify there is a clear path between the remote control and the AV receiver's infrared sensor. Obstructions can block the signal.
- **Distance:** Ensure you are within the effective operating range of the remote control.

6.2 Remote Not Controlling Device

- **Compatibility:** Confirm that your AV receiver model (RX-A2A or RX-A2ABL) is listed as compatible. This remote is specifically designed for these models.
- **Receiver Power:** Ensure the AV receiver is powered on.

7. SPECIFICATIONS

Model	RAV576 VDM8710
Brand	ECONTROLLY
Compatible Devices	Yamaha AV Receivers (RX-A2A, RX-A2ABL)
Special Feature	Pre-programmed, no setup required
Color	Black
Power Source	2 x AAA ALKALINE Batteries (not included)
Product Dimensions	9.73 x 2 x 0.56 inches
Item Weight	1.76 ounces



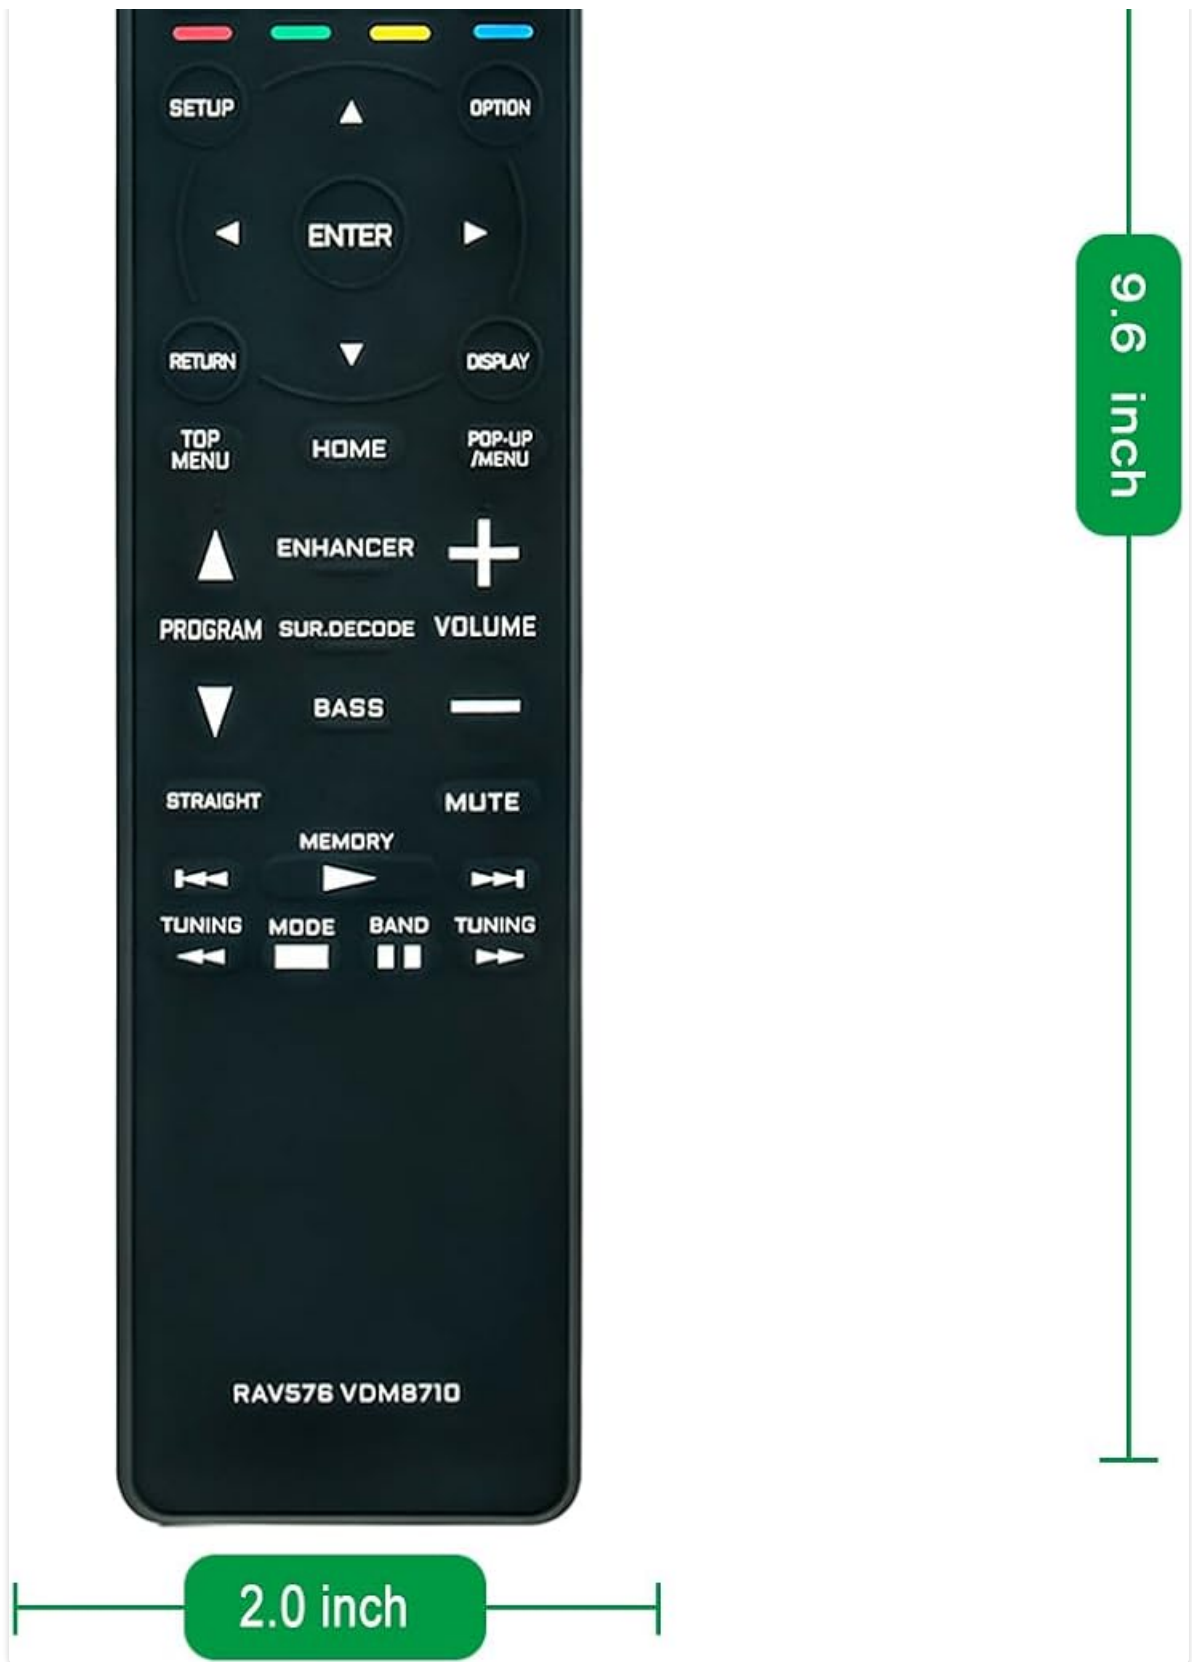


Image 7.1: Dimensions of the RAV576 VDM8710 remote control.

8. WARRANTY AND SUPPORT

Warranty and customer support information for the ECONTROLLY RAV576 VDM8710 remote control is not provided within the product details. Please refer to your purchase documentation or contact the seller directly for any warranty claims or support inquiries.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DF72K22P>

More documents and user manuals: <https://manuals.plus/>