

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY AH81-15183A Replacement Remote Control User Manual for Samsung Soundbars

ECONTROLLY AH81-15183A

ECONTROLLY AH81-15183A Replacement Remote Control User Manual

MODEL: AH81-15183A

Brand: ECONTROLLY

Introduction

This manual provides essential instructions for the ECONTROLLY AH81-15183A replacement infrared remote control. This remote is designed to be compatible with various Samsung Soundbar models. Please read this manual carefully before use to ensure proper operation and longevity of your remote control.

This remote control operates using infrared technology and does not require programming. It does not support voice control or pairing functions.


Setup

1. Battery Installation

The remote control requires AAA ALKALINE batteries for operation. Rechargeable batteries are not supported and should not be used.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) and lift to open.
3. Insert two (2) AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

Once batteries are installed, the remote control is ready for use with compatible Samsung Soundbar models. No additional programming is required.

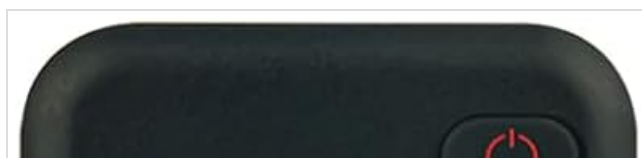



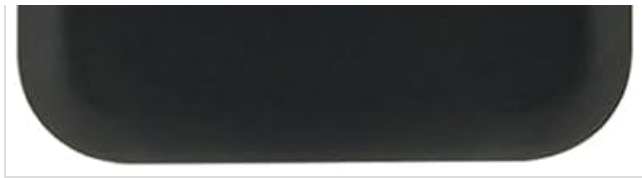


Image: Front view of the ECONTROLLY AH81-15183A replacement remote control. It is a black, rectangular remote with various buttons for power, volume, sound mode, and other soundbar functions.

Operating Instructions

Point the remote control directly at your Samsung Soundbar. Ensure there are no obstructions between the remote and the soundbar's infrared receiver.

Key Functions:

- **Power Button** (): Turns the soundbar on or off.
- **Mute Button** (): Mutes or unmutes the sound.
- **Volume Up/Down** (+ / -): Adjusts the soundbar's volume level.
- **Sound Mode**: Cycles through available sound modes (e.g., Standard, Surround, Game).
- **Woofer**: Adjusts the subwoofer level.
- **CH Level**: Adjusts individual channel levels.
- **Pair** (🔗): Used for pairing with external devices (note: this remote does not support Bluetooth pairing for itself, but may trigger soundbar pairing functions).
- **Tone Control**: Accesses tone settings (e.g., Bass, Treble).
- **Play/Pause** (⏮): Controls media playback.
- **Source/Input** (🔍): Changes the input source of the soundbar.
- **Info** (i): Displays information on the soundbar's display.
- **Settings** (⚙️): Accesses soundbar settings menu.

Important Note: This remote control is an infrared replacement and does not support voice control features or Bluetooth pairing for the remote itself. Any 'Pair' button functionality is for the soundbar's internal pairing processes, not for the remote to pair with the soundbar.



Image: A person holding the remote control, pointing it towards a Samsung Soundbar and television setup, demonstrating typical usage.

Maintenance

1. Battery Replacement

If the remote control becomes unresponsive or its range decreases, replace both AAA ALKALINE batteries. Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

2. Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's finish or internal components.

3. Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

Troubleshooting

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh AAA ALKALINE batteries.
 - Ensure there is a clear line of sight between the remote control and the soundbar's infrared receiver. Remove any obstructions.
 - Verify that the soundbar is powered on.
- **Limited functionality or specific buttons not working:**
 - Confirm that your Samsung Soundbar model is listed as compatible in the specifications section.
 - Remember that voice control and Bluetooth pairing functions for the remote itself are not supported by this model.
 - Ensure batteries are not low, as this can sometimes affect signal strength for certain commands.

Specifications

Model Number	AH81-15183A
Brand	ECONTROLLY
Product Dimensions	6.07 x 1.51 x 0.56 inches
Item Weight	1.76 ounces
Color	Black
Special Feature	Pre-Programmed (Infrared)
Max Number of Supported Devices	1 (Soundbar)
Compatible Devices	Home Theater (Samsung Soundbars)
Power Source	2 x AAA ALKALINE Batteries (not included)

Compatible Samsung Soundbar Models:

- HW-S800D/ZA
- HW-S801B/ZA
- HW-S800B/ZA
- HW-S801D/ZA
- HW-S800D
- HW-S800B
- HW-S801B
- HW-S801D
- HW-S800B/ZC
- HW-S801B/ZC





6.0 inch



Image: A diagram illustrating the dimensions of the remote control, showing a length of approximately 6.0 inches and a width of 1.54 inches.

Warranty and Support

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact the seller directly. Specific warranty terms may vary.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0DF734WVR>

More documents and user manuals: <https://manuals.plus/>