



Manuals.plus /

› BAROCCOMiSTEL /

› BAROCCOMiSTEL MD750 Delight Mechanical Keyboard User Manual

## BAROCCOMiSTEL MD750

# BAROCCOMiSTEL MD750 Delight Mechanical Keyboard User Manual

Model: MD750

## INTRODUCTION

Welcome to the user manual for your new BAROCCOMiSTEL MD750 Delight Mechanical Keyboard. This keyboard is engineered to deliver a premium typing experience, combining an ergonomic TKL layout with advanced features such as a 1.2-inch LED screen, a multi-function control knob, and versatile connectivity options. Please review this manual thoroughly to ensure optimal setup, operation, and longevity of your device.

## PACKAGE CONTENTS

Please verify that all the following items are included in your MD750 Delight keyboard package:

- MD750 Delight Mechanical Keyboard
- USB Type-C Cable
- 7 Extra Yellow Keycaps (including Esc, Enter, Spacebar, and Arrow keys)
- Keycap Puller
- User Manual (this document)

Should any items be missing or appear damaged, please contact customer support immediately.

## KEY FEATURES

- **1.2" LED Screen & Control Knob:** Provides intuitive control for adjusting RGB lighting effects, colors, speed, brightness, volume, and switching between operating systems.
- **Versatile Connectivity:** Supports three modes of connection: Bluetooth 5.0, 2.4G wireless, and USB Type-C wired, allowing seamless switching between multiple devices.

- **Gasket Mount Structure:** Designed with a gasket mounting system to ensure a responsive, stable, and acoustically pleasing typing experience.
- **Hot-Swappable Switches:** Customize your typing feel with ease. The MD750 features hot-swappable sockets, enabling you to change mechanical switches (compatible with Gateron G Red and other 3-pin/5-pin switches) without soldering.
- **Long-lasting Battery Life:** Equipped with a high-capacity 4000mAh Lithium Polymer battery for extended wireless usage.
- **2-Level Adjustable Stand:** Offers ergonomic comfort with two adjustable typing angles.
- **Magnetic Storage Slot:** Conveniently stores the 2.4G wireless USB dongle when not in use.
- **CNC Machined Aluminum Knob:** Ensures durability and precise tactile feedback for control adjustments.

## SETUP GUIDE

---

### Charging the Keyboard

For optimal performance, fully charge the keyboard before its initial use. Connect the provided USB Type-C cable to the keyboard's USB-C port and the other end to a powered USB port on your computer or a certified USB wall adapter. The LED screen will display the charging status.

### Connectivity Options

The MD750 Delight keyboard supports three versatile connection modes:

#### 1. USB Type-C Wired Connection:

Connect the keyboard directly to your computer using the supplied USB Type-C cable. The keyboard will be automatically detected by your operating system, and no additional drivers are typically required.

#### 2. 2.4G Wireless Connection:

Retrieve the 2.4G USB dongle from its magnetic storage slot on the keyboard. Insert the dongle into an available USB port on your computer. Use the mode switch on the keyboard (or navigate via the LED screen) to select 2.4G wireless mode. The keyboard should establish a connection automatically.

## Long-lasting Battery Life

The 4000mAh large capacity Li-Po battery. Reliable, long-lasting power for seamless typing and productivity.



Image: Close-up view of the MD750 keyboard's side, illustrating the USB-C port and the magnetic storage slot for the 2.4G wireless dongle, emphasizing its versatile connectivity.

### 3. Bluetooth 5.0 Connection:

Switch the keyboard to Bluetooth mode. On your host device (computer, smartphone, or tablet), enable Bluetooth and initiate a search for new devices. Select "MD750 Delight" from the list of discoverable devices to complete the pairing process. The keyboard supports multiple Bluetooth profiles for seamless switching between paired devices.

## Adjusting Keyboard Stand

The keyboard is equipped with a 2-level adjustable stand located on its underside. Extend the stands to achieve your preferred ergonomic typing angle.

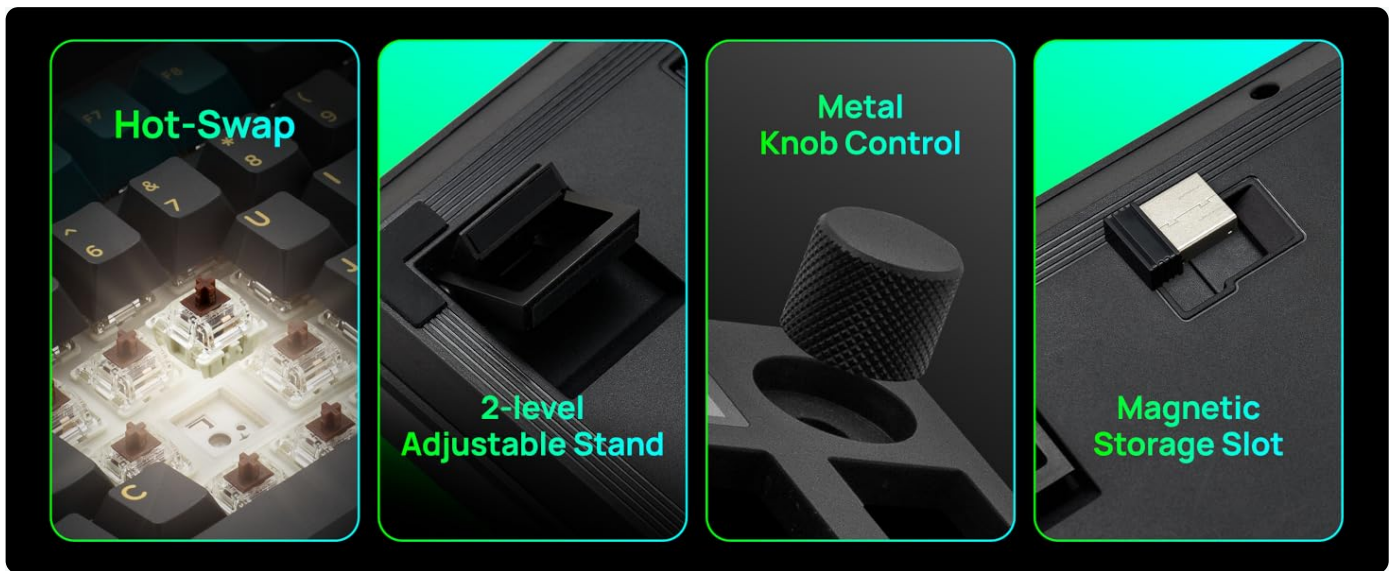


Image: Diagram illustrating the adjustable stand and magnetic storage slot on the underside of the MD750 keyboard, designed for enhanced comfort and convenience.

## OPERATING INSTRUCTIONS

---

### Using the 1.2" LED Screen and Control Knob

The integrated 1.2-inch LED screen and multi-function knob provide quick and intuitive access to various keyboard settings:

- **Rotate Knob:** Turn the knob to adjust volume, cycle through different RGB lighting effects, change colors, modify animation speed, and control brightness levels.
- **Press Knob:** Press the knob to confirm a selection or to switch between different setting categories (e.g., RGB mode, volume control, system selection).
- **System Switching:** Utilize the knob or specific function key combinations to seamlessly switch between Mac and Windows operating system layouts.

## 1.2" LED & Knob for Instant Control

Featuring a 1.2" LED screen and an intuitive knob, easily adjust RGB lighting effects, colors, speed, brightness, volume and switch between systems.



Image: Detailed view of the MD750 keyboard's 1.2-inch LED screen and the rotary control knob, highlighting the intuitive user interface for quick adjustments.

### Customizing Switches (Hot-Swappable)

The MD750 features hot-swappable switch sockets, allowing you to easily change mechanical switches without the need for soldering. This enables extensive customization of your typing feel and sound profile.

1. Using the provided keycap puller, gently remove the desired keycap by pulling it straight up.
2. Using a switch puller (not included, but widely available), carefully grasp the switch and pull it straight up from its socket.
3. Align the pins of the new switch with the corresponding holes in the PCB and press it firmly into place until it clicks. Ensure the pins are not bent during insertion.
4. Replace the keycap onto the new switch.

## Hot-Swappable Switches

Customize your typing experience with ease. The MD750 features hot-swappable switches, allowing you to change switches without soldering.

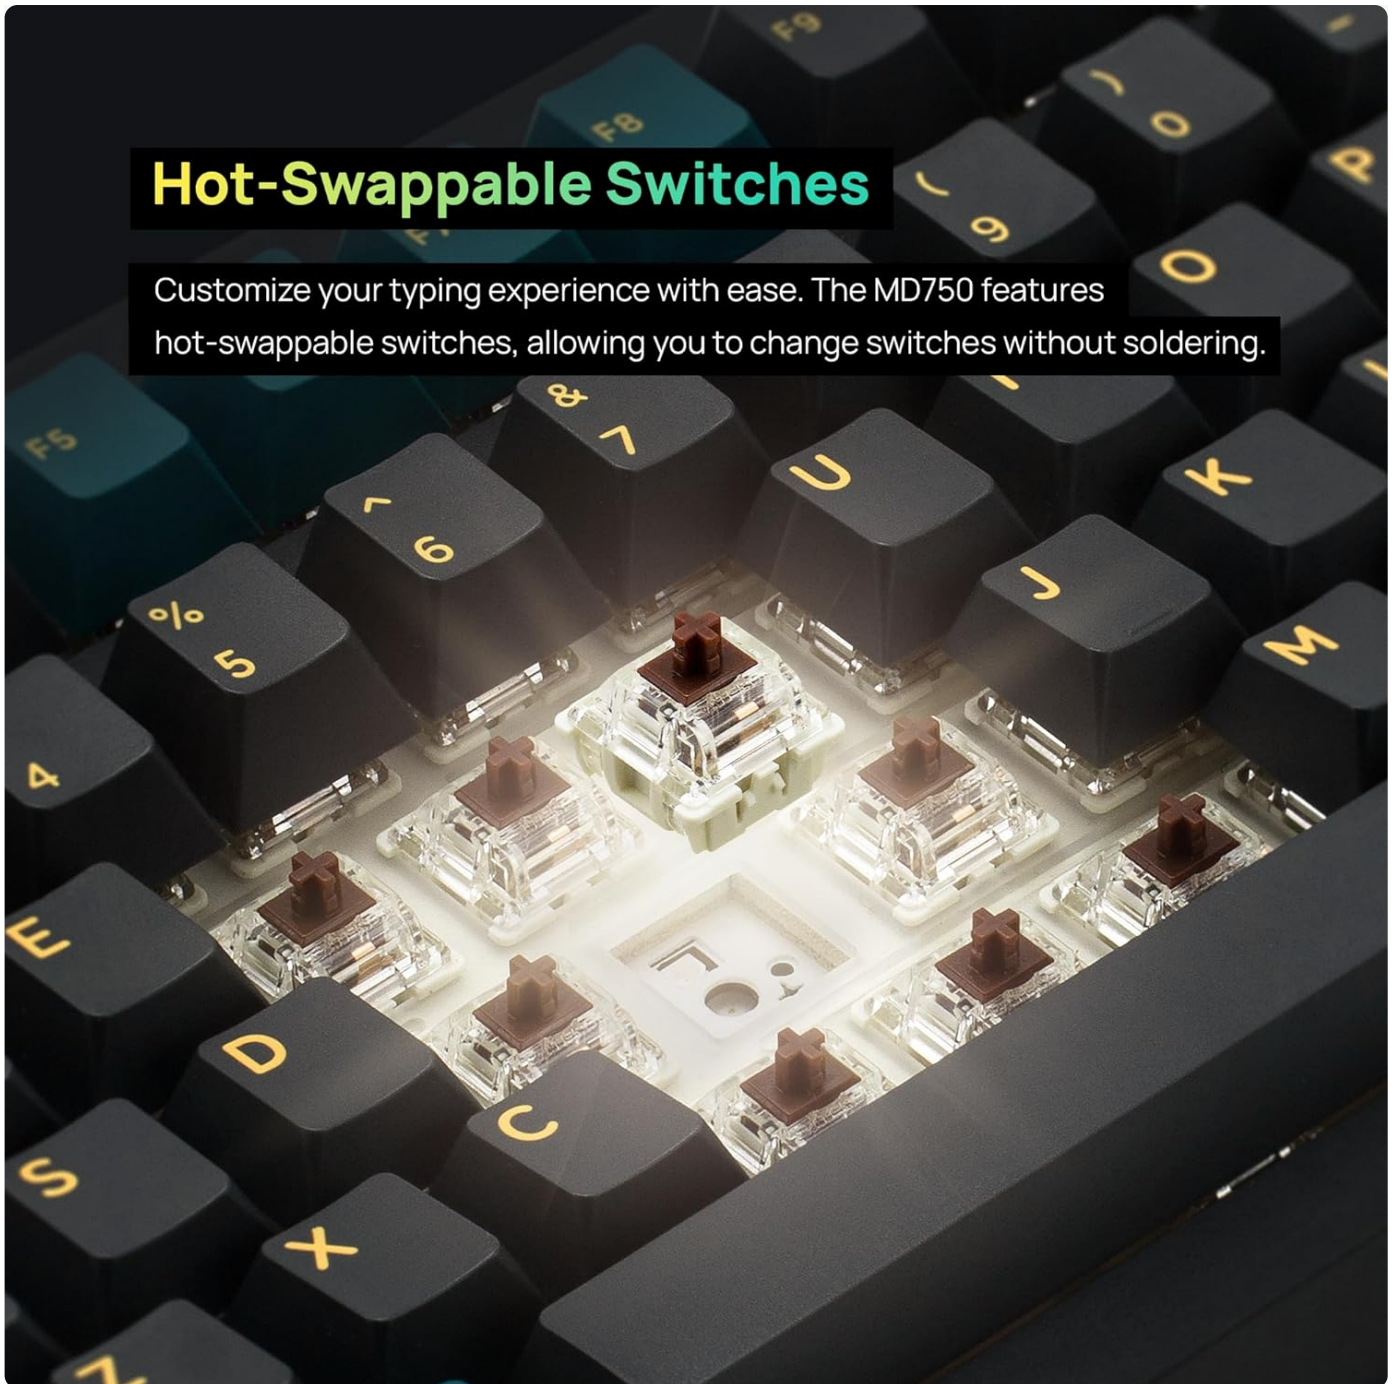


Image: Close-up view of the MD750 keyboard's hot-swappable switch sockets, demonstrating the ease with which mechanical switches can be removed and replaced for personalized customization.

## RGB Lighting Control

The keyboard features full RGB backlighting with extensive customization options. Use the control knob and/or specific function key combinations (refer to the keyboard's quick guide or LED screen menu) to:

- Change lighting effects (e.g., static, wave, breathing, reactive).
- Adjust the color palette to match your setup or preference.
- Modify animation speed for dynamic effects.
- Control brightness levels to suit your environment.



Image: Top-down view of the MD750 keyboard showcasing its vibrant and customizable RGB backlighting across all keys, highlighting its aesthetic capabilities.

## MAINTENANCE

---

### Cleaning the Keyboard

To ensure the continued performance and pristine appearance of your keyboard, follow these cleaning guidelines:

- Always disconnect the keyboard from your computer before commencing any cleaning.
- Use a can of compressed air to effectively remove dust, crumbs, and other debris from between the keycaps and switch housings.
- Gently wipe the keycaps and the keyboard's surface with a soft, lint-free cloth that has been lightly dampened with water or a mild, non-abrasive cleaning solution. Avoid applying excessive moisture.
- Never spray cleaning solutions directly onto the keyboard.

### Battery Care

To maximize the lifespan and performance of your keyboard's internal battery:

- Avoid frequently allowing the battery to fully discharge.
- When storing the keyboard for extended periods, ensure it is kept in a cool, dry environment.
- For long-term storage, it is advisable to charge the battery to approximately 50% capacity before storing.

## TROUBLESHOOTING

---

This section provides solutions to common issues you might encounter with your MD750 Delight keyboard. If the problem persists after trying these steps, please contact customer support.

Problem	Possible Cause	Solution
Keyboard not responding (wired connection)	Loose or faulty USB-C cable connection; issue with the computer's USB port.	Ensure the USB-C cable is securely connected at both ends. Try connecting to a different USB port on your computer or using an alternative USB-C cable.
Keyboard not responding (wireless/Bluetooth)	Low battery; incorrect connection mode selected; Bluetooth pairing issue; 2.4G dongle not properly inserted or recognized.	Charge the keyboard fully. Verify that the correct mode (2.4G or Bluetooth) is selected via the keyboard's switch or LED screen. For Bluetooth, unpair and re-pair the device. For 2.4G, ensure the dongle is firmly inserted and try a different USB port.
LED screen or backlight not functioning	Brightness set to minimum; temporary software glitch; potential hardware issue.	Increase the brightness using the control knob or designated function keys. Try restarting the keyboard by turning it off and on. If the issue persists, it may indicate a hardware fault requiring professional support.
Keys not registering input or double-typing	Dust or debris lodged under the keycap or switch; a faulty mechanical switch.	Remove the affected keycap and use compressed air to clean around the switch. If the keyboard is hot-swappable, try replacing the problematic switch with a spare or known-good switch.

## SPECIFICATIONS

Detailed technical specifications for the BAROCCOMiSTEL MD750 Delight Mechanical Keyboard:

Feature	Detail
Model	MD750
Brand	BAROCCOMiSTEL
Layout	75% TKL Ergonomic
Connectivity	Bluetooth 5.0, 2.4G Wireless, USB Type-C Wired
Switches	Gateron G Red (Hot-Swappable)
Backlighting	RGB
Battery Capacity	4000mAh Lithium Polymer
LED Screen Size	1.2 inches
Compatible OS	Mac, Windows
Number of Keys	81
Item Weight	2.7 pounds
Package Dimensions	13.7 x 8.2 x 2 inches
Country of Origin	Taiwan

## WARRANTY AND SUPPORT

---

BAROCCOMiSTEL products are manufactured to stringent quality standards. Your MD750 Delight keyboard is covered by a standard manufacturer's warranty against defects in materials and workmanship. For comprehensive details regarding warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official BAROCCOMiSTEL website.

For technical assistance, troubleshooting guidance, or to initiate a warranty claim, please contact BAROCCOMiSTEL customer service. You can typically find contact information on their official website or within your product packaging. When reaching out for support, please have your product model (MD750) and purchase details readily available to facilitate a quicker resolution.

