

[manuals.plus](#) /

› [Hatteker](#) /

› [Hatteker Professional 3-in-1 Hair Clipper, Trimmer, and Shaver User Manual HT-6063](#)

Hatteker HT-6063

Hatteker Professional 3-in-1 Grooming Kit User Manual

Model: HT-6063

INTRODUCTION

Thank you for choosing the Hatteker Professional 3-in-1 Grooming Kit. This manual provides essential information for the safe and effective use of your new hair clipper, beard trimmer, and electric shaver. Please read these instructions thoroughly before first use and retain them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock, injury, or damage, always follow these basic safety precautions:

- **Water Hazard:** Do not reach for an appliance that has fallen into water. Unplug immediately. Do not use while bathing or in a shower. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- **Children:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Power Source:** Only use the charger supplied with the appliance. Ensure the voltage specified on the charger matches your local mains voltage.
- **Damage:** Do not operate the appliance with a damaged cord or plug, or if it is not working properly, or if it has been dropped or damaged.
- **Maintenance:** Do not attempt to repair the appliance yourself. Refer all servicing to qualified service personnel.
- **Blade Care:** Use caution when handling blades to avoid cuts. Ensure blades are properly

attached before use.

- **Skin Irritation:** If you experience skin irritation, discontinue use.

PRODUCT OVERVIEW AND COMPONENTS

The Hatteker Professional 3-in-1 Grooming Kit includes a hair clipper, a T-blade trimmer, and an electric foil shaver, along with various accessories.



Image Description: This image displays the complete Hatteker 3-in-1 Grooming Kit. From left to right, it shows the main hair clipper, the T-blade trimmer, and the electric foil shaver. Also visible are various guide combs for each device, three USB charging cables, and two small cleaning brushes. Each device features a gold-colored body with an intricate carved design and an LCD display.

Kit Contents:

- **Hair Clipper:** Main unit with adjustable blade lever.
- **T-Blade Trimmer:** Precision trimmer for detailing and outlining.
- **Electric Foil Shaver:** For close shaving and finishing.
- **Hair Clipper Guide Combs:** 3mm, 6mm, 10mm, 13mm.
- **T-Blade Trimmer Guide Combs:** 1.5mm, 3mm, 4.5mm.
- **USB Charging Cables:** Three cables for simultaneous charging.
- **Cleaning Brush:** For removing hair debris from blades.

- **Lubricating Oil:** For blade maintenance.

SETUP AND CHARGING

Initial Charge:

Before first use, fully charge each device. Connect the USB charging cable to the charging port at the tail of the clipper, trimmer, or shaver, and then connect the other end to a suitable USB power adapter (not included) or a computer USB port.

- **Hair Clipper:** Approximately 3 hours for a full charge, providing about 180 minutes of running time.
- **T-Blade Trimmer & Electric Shaver:** Approximately 2 hours for a full charge, providing about 120 minutes of running time each.

The LCD display on each device will show the battery percentage and a charging reminder icon during charging. Once fully charged, the display will indicate 100% or the charging icon will turn off/change.



Image Description: This image illustrates the charging process and battery display for the Hatteker grooming devices. It shows the hair clipper, T-blade trimmer, and electric shaver, each with an LCD screen displaying battery percentage, an oil reminder icon, and a charging reminder icon. The image also highlights the USB charging cables and various power sources like a phone,

laptop, wall adapter, and car charger.

Attaching Guide Combs:

To attach a guide comb, align the comb with the blade and push it firmly until it clicks into place.

To remove, gently pull the comb away from the blade.

OPERATION

Ensure your hair is clean and dry before trimming or shaving for optimal results.

1. Using the Hair Clipper:

- Select Comb:** Choose the desired guide comb (3mm, 6mm, 10mm, or 13mm) and attach it securely to the hair clipper.
- Adjust Taper Lever:** The hair clipper features an adjustable taper lever for fine-tuning cutting lengths between comb sizes (e.g., 0.79mm to 1.59mm without a comb). Adjust the lever as needed.
- Power On:** Press the power button to turn on the clipper.
- Clipping:** Hold the clipper with the teeth pointing upwards and move it against the direction of hair growth. Use smooth, even strokes.
- Power Off:** Press the power button to turn off the clipper after use.

4 Hair Clipper Adjustable Taper Levels

Trim your hair length as needed

0.79 3 6 10 13mm

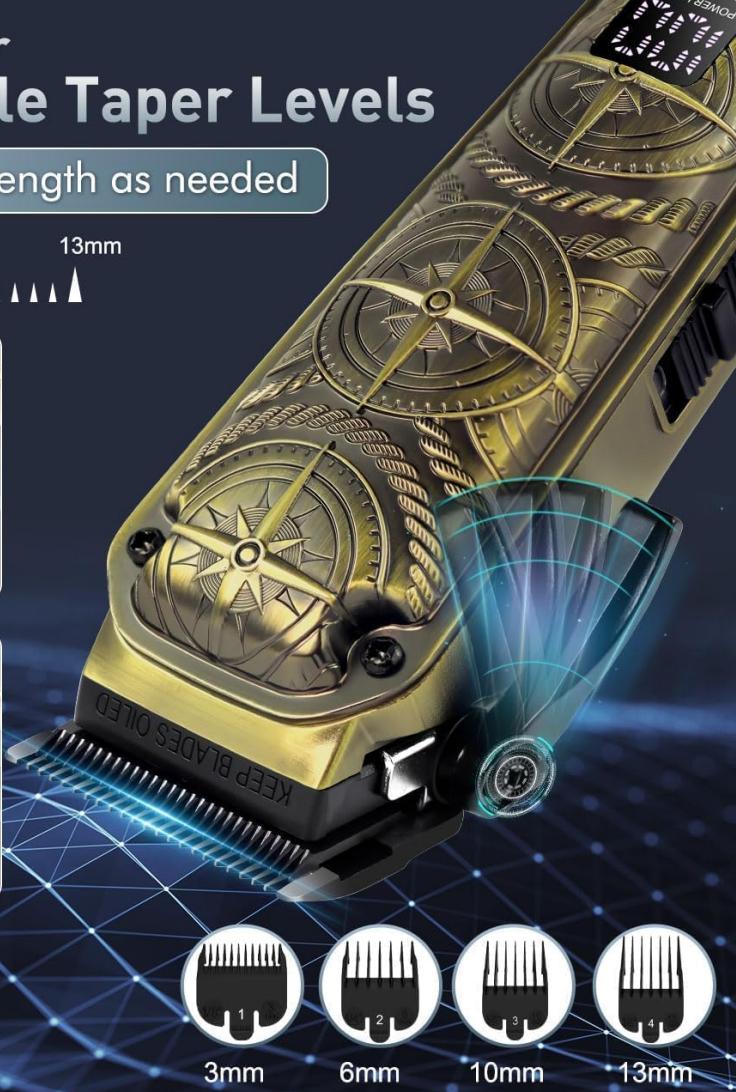


Image Description: This image focuses on the Hatteker hair clipper, demonstrating its adjustable taper lever and the various cutting lengths it can achieve. It shows close-ups of the blade at 0.79mm and 1.59mm settings, along with the four guide combs (3mm, 6mm, 10mm, 13mm) for different hair lengths.

2. Using the T-Blade Trimmer:

- Select Comb (Optional):** For beard trimming or specific lengths, attach one of the guide combs (1.5mm, 3mm, or 4.5mm). For zero-gapped trimming and outlining, use without a comb.
- Power On:** Press the power button to turn on the trimmer.
- Trimming:** Use the sharp T-shaped blade for precise edging, detailing, and trimming beards or sideburns. Move the trimmer gently against the skin.
- Power Off:** Press the power button to turn off the trimmer after use.

Zero Gapped T-Blade Trimmer

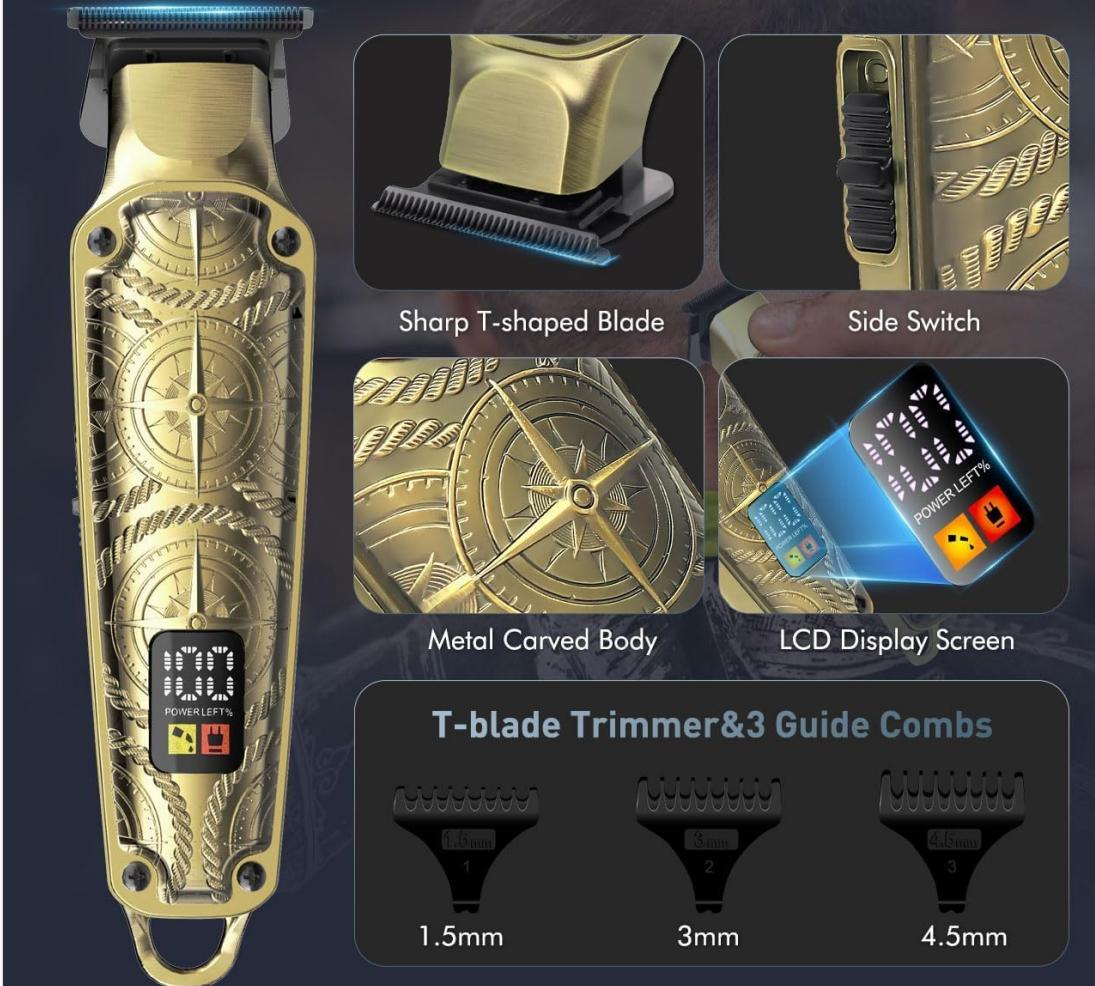


Image Description: This image details the features of the Hatteker T-blade trimmer. It highlights the sharp T-shaped blade, the side switch, the metal carved body, and the LCD display screen. The three guide combs (1.5mm, 3mm, 4.5mm) for the trimmer are also shown.

3. Using the Electric Foil Shaver:

- Power On:** Press the power button to turn on the shaver.
- Shaving:** Gently press the shaver against your skin and move it in short, circular, or linear motions. The dual floating shaving heads are designed to capture short, thicker whiskers for a close shave on the face, neck, and jawline.
- Power Off:** Press the power button to turn off the shaver after use.

Independent Floating Double Blade

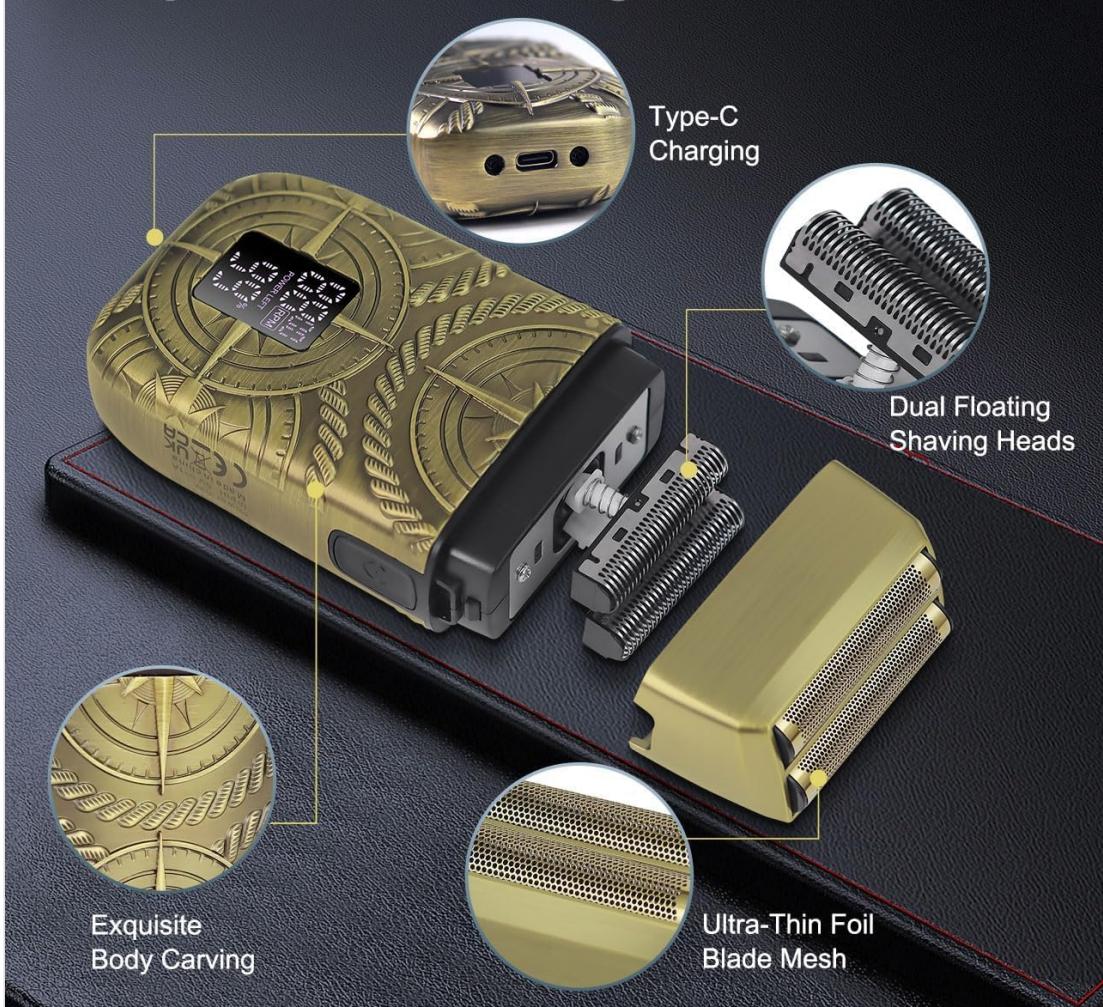


Image Description: This image provides an exploded view of the Hatteker electric foil shaver, showcasing its internal components. It highlights the Type-C charging port, the exquisite body carving, the ultra-thin foil blade mesh, and the dual floating shaving heads, emphasizing their independent movement for a closer shave.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your grooming kit.

- Power Off:** Always ensure the device is turned off and unplugged before cleaning.
- Remove Hair:** Use the provided cleaning brush to brush away any loose hairs from the blades and inside the cutting head.
- Rinse Blades:** The blades can be rinsed under running water. Ensure the device body does not get wet, especially the charging port. Dry thoroughly before reassembling or storing.
- Lubricate Blades:** After every few uses, or if the blades feel sluggish, apply a small drop of lubricating oil (included) to the blades. Turn on the device for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and reduces friction. The LCD display may show an oil reminder icon.
- Storage:** Store the grooming kit in a dry place, away from direct sunlight and out of reach of children.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------------------|--|---|
| Device does not turn on. | Low battery or no charge. | Charge the device fully. Check the LCD display for battery level. |
| Blades pull hair or cut poorly. | Blades are dull, dirty, or not lubricated. | Clean the blades thoroughly. Apply lubricating oil. If problem persists, blades may need replacement. |
| Device makes unusual noise. | Hair caught in blades or motor issue. | Clean blades thoroughly. If noise continues, contact customer support. |
| Charging indicator not working. | Cable or adapter issue, or device already fully charged. | Try a different USB cable or power adapter. Check if the device is already at 100% charge. |

SPECIFICATIONS

Model: HT-6063

Brand: Hatteker

Power Source: Battery Powered (Rechargeable Lithium Battery)

Hair Clipper Charge Time: Approx. 3 hours

Hair Clipper Run Time: Approx. 180 minutes

Trimmer/Shaver Charge Time: Approx. 2 hours

Trimmer/Shaver Run Time: Approx. 120 minutes

Motor Speed: Up to 6500 RPM (Hair Clipper)

Blade Material: Stainless Steel

Display: LCD Digital Display (Battery, Oil, Charge Reminders)

Product Dimensions: 3.86 x 9.21 x 9.57 inches (packaging)

Item Weight: 1320 Grams (approx. 2.91 Pounds)

Color: Gold

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Hatteker customer service through the retailer where the product was purchased. Please have your model number (HT-6063) and purchase date available when contacting support.

Manufacturer: Hatteker

Related Documents - HT-6063

| | |
|---|---|
|  | <p>HATTEKER RFC-695 Electric Hair Clipper User Manual and Safety Guide</p> <p>Comprehensive user manual for the HATTEKER RFC-695 Electric Hair Clipper, covering features, safety instructions, charging, usage, cleaning, maintenance, and environmental disposal.</p> |
|  | <p>Hatteker HT-300 4-in-1 Hot Air Hair Brush Keratin Protect Styling Tool</p> <p>Discover the Hatteker HT-300, a 1000W 4-in-1 hot air hair brush for salon-quality styling. Features Keratin Protect technology for fast, hassle-free results. Includes multiple attachments for drying and styling.</p> |
|  | <p>HATTEKER RFC-695 Electric Hair Clipper User Manual and Safety Guide</p> <p>Comprehensive user manual for the HATTEKER RFC-695 Electric Hair Clipper, covering features, safety instructions, charging, usage, cleaning, maintenance, and environmental disposal.</p> |
|  | <p>Wellshave HT-6006 Bodygroomer Hair Trimmer Instruction Manual</p> <p>Comprehensive guide for the Wellshave HT-6006 Bodygroomer. Learn about its features, accessories, safe usage, cleaning, maintenance, and technical specifications.</p> |
|  | <p>Beurer HT 22 Split End Trimmer User Manual</p> <p>User manual for the Beurer HT 22 Split End Trimmer, providing instructions for safe operation, maintenance, and technical specifications to help achieve healthier hair by cutting split ends.</p> |



[Hatteker HT-300 4-in-1 Hot Air Hair Brush | Keratin Protect Styling Tool](#)

Discover the Hatteker HT-300, a 1000W 4-in-1 hot air hair brush for salon-quality styling. Features Keratin Protect technology for fast, hassle-free results. Includes multiple attachments for drying and styling.