

dsorupa V10 Ultra

dsorupa V10 Ultra Cordless Vacuum Cleaner User Manual

Model: V10 Ultra

Brand: dsorupa

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filters in place.
- Turn off the appliance before connecting or disconnecting the motorized brush, charging, or performing any maintenance.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Store the vacuum cleaner indoors in a cool, dry place.

2. PACKAGE CONTENTS

Verify that all components are present in the package:

- dsorupa V10 Ultra Vacuum Cleaner Main Body
- 2500mAh Battery Pack
- Tangle-Free Roller Brush Head
- Wall-Mounted Charging Dock Station
- 1.8L Dust Cup (pre-installed)

- Aromatherapy Tablets (set of 2)
- Telescopic Extension Tube
- Crevice Nozzle
- Cleaning Brush Tool
- Charger
- Instruction Manual
- HEPA Filters (2 included, 1 pre-installed)
- 2-in-1 Brush Tool

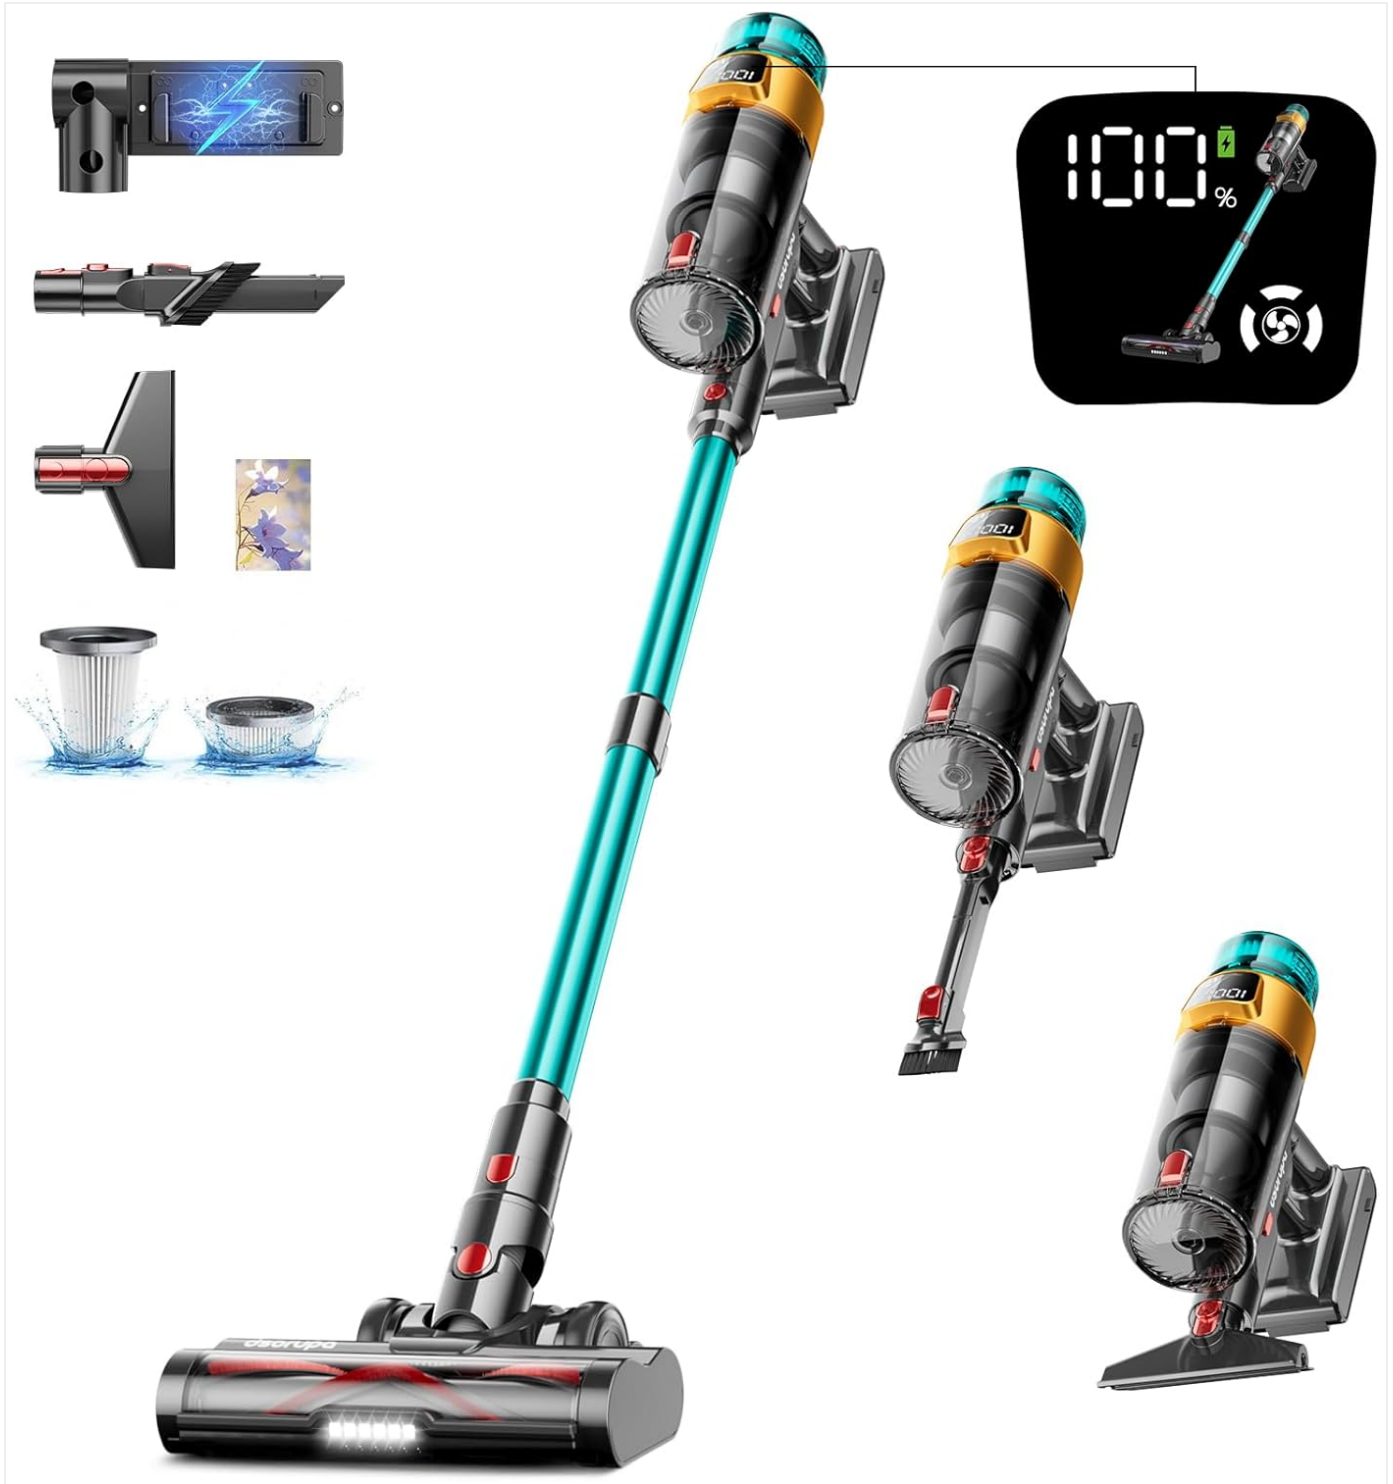


Image: The dsorupa V10 Ultra Cordless Vacuum Cleaner shown with its main body, telescopic tube, floor brush, battery, wall mount, and various attachments including the crevice tool, 2-in-1 brush, and spare filters.

3. PRODUCT OVERVIEW

3.1 Main Components

- **Main Body:** Contains the motor, dust cup, filtration system, and control panel.
- **Battery Pack:** Rechargeable 2500mAh lithium-ion battery.
- **Telescopic Extension Tube:** Adjustable length for various cleaning tasks.
- **Motorized Floor Brush:** Features a V-shaped anti-tangle soft and hard roller for different floor types. Includes LED lights.

3.2 Attachments

- **Crevice Nozzle:** Ideal for narrow gaps, corners, and edges.
- **2-in-1 Brush Tool:** Combines a brush and wide nozzle for upholstery, curtains, and delicate surfaces.
- **Mite Remover:** Specialized attachment for deep cleaning mattresses and fabric surfaces to remove dust mites.



Image: A visual representation of the vacuum's versatility, showing the crevice tool for tight spaces, the 2-in-1 brush for surfaces, and the extension tube for high-reach cleaning.

4. SETUP

4.1 Assembly

1. **Attach the Battery:** Slide the battery pack into the main body until it clicks securely into place.
2. **Connect the Extension Tube:** Insert one end of the telescopic extension tube into the main body until it locks.
3. **Attach the Floor Brush:** Connect the motorized floor brush to the other end of the extension tube. Ensure it clicks firmly.
4. **Install Wall-Mounted Charging Dock:** Choose a suitable location near a power outlet. Secure the dock to the wall using the provided screws and anchors.

4.2 Charging the Battery

Before first use, fully charge the battery for approximately 4-5 hours.

- Connect the charger to the wall-mounted dock or directly to the battery pack.
- Plug the charger into a power outlet.
- The LED display on the vacuum will show charging progress. A full charge is indicated by 100% on the display.



Image: A detailed view of the vacuum's removable battery pack, highlighting its internal components and the '70 Mins Runtime' capability.



Image: The dsorupa V10 Ultra vacuum cleaner is shown mounted on its wall-mounted charging dock, connected to a power outlet, indicating convenient storage and charging.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Suction Modes

- Press the power button to turn the vacuum cleaner on. It will start in the default suction mode.
- Press the mode button to cycle through different suction power levels (e.g., Eco, Standard, Max).
- Press the power button again to turn the vacuum cleaner off.

5.2 Digital LED Display

The integrated LED display provides real-time information:

- **Battery Percentage:** Shows the remaining battery life.
- **Suction Mode Indicator:** Displays the current power setting.
- **Error Codes:** Alerts for potential issues (refer to Troubleshooting section).



Image: A close-up of the vacuum cleaner's digital LED display, illustrating how it shows battery percentage and current suction mode, with examples of different battery levels.

5.3 Using the Vacuum Cleaner

- **Floor Cleaning:** Use the motorized floor brush for carpets and hard floors. The V-shaped roller is designed for effective debris pick-up and anti-tangle performance.
- **Above-Floor Cleaning:** Detach the extension tube and floor brush to use the main body with the crevice nozzle or 2-in-1 brush for furniture, stairs, or car interiors.

- **High-Reach Cleaning:** Use the extension tube with the crevice nozzle or 2-in-1 brush to clean ceilings, cobwebs, or high shelves.
- **Mite Removal:** Attach the mite remover tool directly to the main body for cleaning mattresses and upholstered items.



Image: A person is shown operating the dsorupa V10 Ultra cordless vacuum cleaner on a hard floor, demonstrating its powerful 580W/48KPA suction capability to clean scattered debris.



Image: The motorized floor brush of the vacuum cleaner is shown cleaning dirt particles right up against a wall, illustrating its 'Close To The Wall Cleaning' feature.



Image: A close-up of the vacuum cleaner's anti-tangle brush head, designed to prevent hair and debris from wrapping around the roller during operation.

Equipped with a mite remover to
enjoy a mite-free life



Image: The vacuum cleaner is depicted with its specialized mite remover attachment, actively cleaning a mattress surface to eliminate dust mites, promoting a mite-free environment.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

6.1 Emptying the Dust Cup

Empty the 1.8L dust cup after each use or when the MAX fill line is reached.

1. Ensure the vacuum is turned off.
2. Press the dust cup release button to detach it from the main body.
3. Position the dust cup over a trash bin and press the bottom release latch to open the flap and empty contents.
4. Close the flap and reattach the dust cup to the main body.

6.2 Cleaning Filters

The vacuum features an 8-stage filtration system, including HEPA filters. Clean filters regularly to maintain suction power.

1. Twist and pull to remove the filter assembly from the dust cup.
2. Separate the HEPA filter and mesh filter.
3. Tap off loose dirt. Rinse both filters under cold running water until the water runs clear. Do not use detergent.
4. Allow filters to air dry completely for at least 24 hours before reassembling and placing back into the vacuum. Do not use a hairdryer or other heating methods.
5. Replace HEPA filters every 3-6 months, depending on usage.

8-layer filtration system with aromatherapy tablets



Image: An exploded view diagram illustrating the vacuum cleaner's 8-layer filtration system, including the HEPA filter and the integrated aromatherapy tablet feature, designed to capture fine dust and release a pleasant scent.

6.3 Cleaning the Brush Roll

The anti-tangle brush roll minimizes hair wrapping, but occasional cleaning may be necessary.

1. Ensure the vacuum is off and disconnected from power.
2. Locate the brush roll release tab on the side of the motorized floor brush.

3. Unlock and remove the brush roll.
4. Use scissors or the provided cleaning tool to cut and remove any tangled hair or debris.
5. Reinsert the brush roll and secure the release tab.



Image: A detailed illustration of the vacuum's soft and hard roller brush, highlighting its dual-material design optimized for deep cleaning on both carpets and hard floors.

6.4 Battery Care

- Do not expose the battery to extreme temperatures.
- If storing the vacuum for an extended period, charge the battery to about 50% and store in a cool, dry place.
- Use only the original charger provided with the appliance.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely clicked into place.
Low suction power	Dust cup is full; filters are clogged; blockage in nozzle/tube/brush roll.	Empty dust cup; clean filters; check for and remove any blockages.
Brush roll not spinning	Hair/debris tangled in brush roll; brush roll not properly installed.	Clean brush roll; ensure it is correctly reinstalled and locked.
Short battery runtime	Using Max suction mode; battery not fully charged; aging battery.	Use lower suction modes for longer runtime; ensure full charge; contact support if battery life significantly degrades.

8. SPECIFICATIONS

Feature	Detail
Model Name	V10 Ultra cordless vacuum cleaner
Brand	dsorupa
Wattage	580 watts
Suction Power	Up to 48KPA
Battery Life	Up to 70 minutes (in Eco mode)
Dust Cup Capacity	1.8 Liters
Filter Type	HEPA Filter (8-stage filtration system)
Special Features	LED display, Anti-tangle brush, Aromatherapy tablet, Ultra-Quiet Mode (64DB)
Product Dimensions	13 x 8 x 49 inches
Item Weight	8 pounds

9. WARRANTY AND CUSTOMER SUPPORT

dsorupa provides a 2-year warranty for this product, covering manufacturing defects from the date of purchase.

- This warranty does not cover damage caused by misuse, neglect, accident, unauthorized modification, or normal wear and tear.
- Proof of purchase is required for all warranty claims.

Customer Service

For any questions, concerns, or warranty claims, please contact dsorupa customer service. We offer 24-hour attentive service.

- **Email:** Refer to your product packaging or the official dsorupa website for contact information.
- **Online Support:** Visit the dsorupa official website for FAQs and support resources.

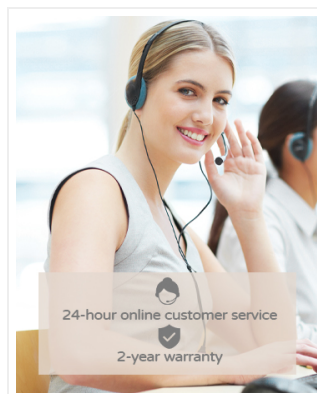


Image: A customer service representative wearing a headset, symbolizing the availability of 24-hour online customer service and the 2-year warranty provided with the product.



