

## KPAW MAX 6

# KPAW MAX 6 Automatic Card Shuffler & Dealer User Manual

Model: MAX 6 | Brand: KPAW

## 1. INTRODUCTION

The KPAW MAX 6 is an innovative 2-in-1 automatic card shuffler and dealer designed to enhance your card game experience. It streamlines the process of shuffling and dealing, ensuring fair and efficient gameplay for a variety of card games, including Poker, UNO, Phase 10, Skip-Bo, Rummy, and more. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your device.

## 2. WHAT'S IN THE BOX

Upon unboxing, please verify that all the following components are included:

- 1 × MAX 6 Automatic Card Shuffler & Dealer
- 4 × Wireless Drawing Remotes
- 1 × USB-C Charging Cable
- 1 × User Manual
- 1 × Packaging Box

## 3. KEY FEATURES

### 3.1. 2-in-1 Shuffling & Dealing

The KPAW MAX 6 innovatively combines card shuffling and dealing into a single unit. This eliminates the need for manual shuffling, ensuring a smooth and error-free game setup.

# 2 IN 1 SHUFFLE & DEAL



Image: The KPAW MAX 6 device demonstrating its dual function of shuffling and dealing cards.

### 3.2. Supports Up to 12 Players

This device is designed to accommodate up to 12 players, making it suitable for large gatherings and various card games like Blackjack, Texas Hold'em, Rummy, and Bridge. Custom settings allow for adjustment of card count and player numbers.

# SUPPORT 12 PLAYERS

Support up to 12 Players in 360° Rotate Deal

Back-Forth Deal  
▶ 360° Rotate Deal



Image: The KPAW MAX 6 dealing cards in a circular pattern, illustrating its support for up to 12 players with 360-degree rotation.


### 3.3. Custom Dealing Options

Tailor your game with adjustable card count, dealing direction (180° or 360°), and dealing distance (Far/Mid/Close). This flexibility ensures compatibility with diverse game rules worldwide.



# UP TO 8 PLAYERS ON ONE SIDE

Back-Forth Deal for up to 8 players

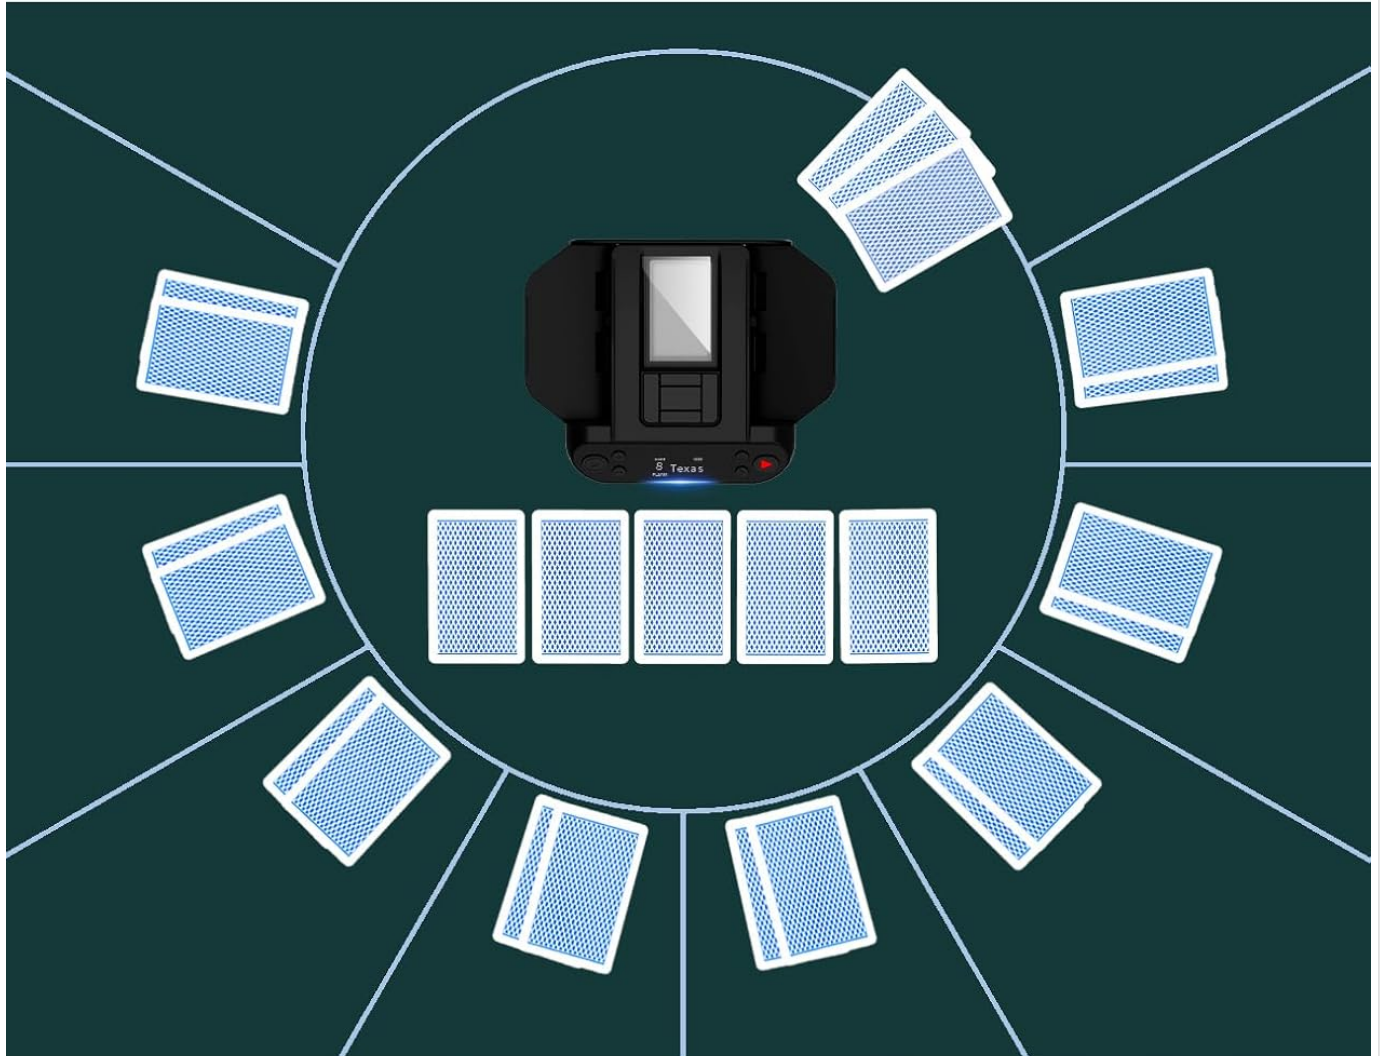

► **Back-Forth Deal**  
360° Rotate Deal

Image: The KPAW MAX 6 dealing cards in a semi-circular, back-and-forth pattern, suitable for up to 8 players.

# ADJUSTABLE DEALING DISTANCE

Choose from Far/Mid/Close for Optimal Play

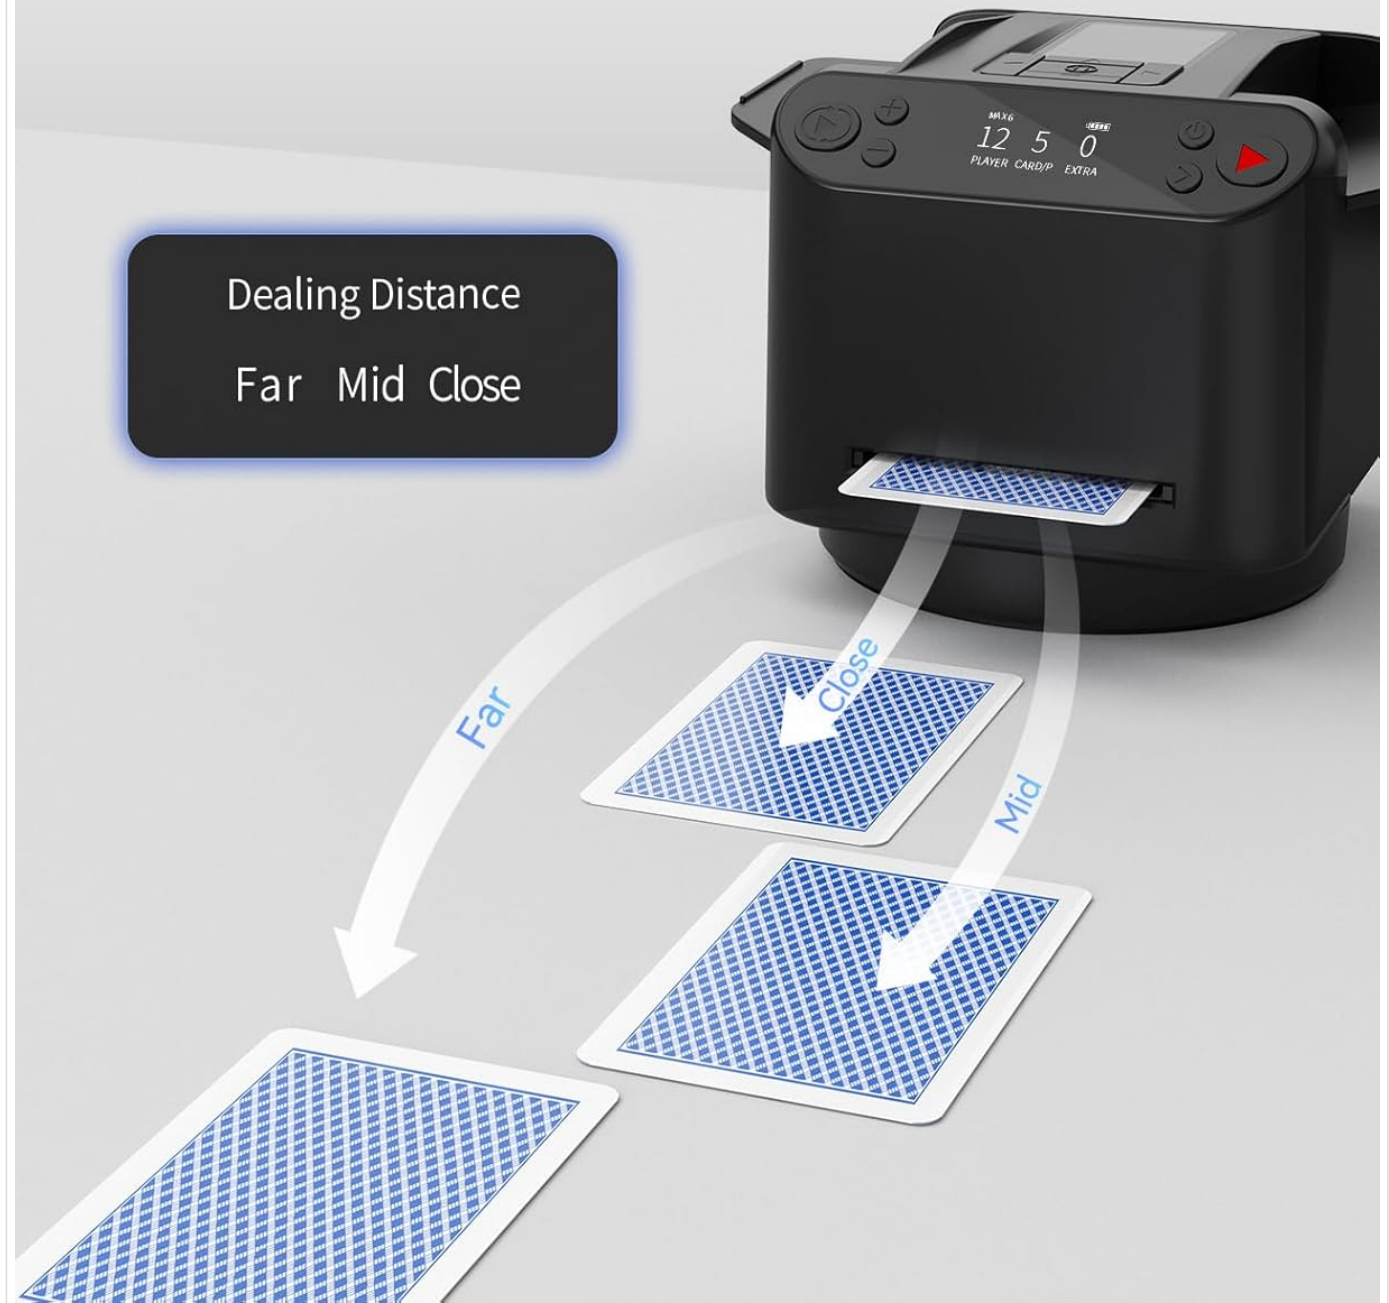


Image: The KPAW MAX 6 illustrating different card dealing distances: far, mid, and close, for optimal play.

## 3.4. Wireless Drawing Remotes

Four wireless drawing remotes are included, allowing players to draw cards remotely with a simple press. This feature is particularly useful for games like UNO, Rummy, and Phase 10, simplifying card management during gameplay.

# REMOTE CARD DRAWING

4 Wireless Drawing Remotes Included



Image: The KPAW MAX 6 surrounded by four wireless drawing remotes, with UNO cards being dealt, highlighting the remote drawing feature.

### 3.5. Adapts to Multiple Card Sizes

 
Equipped with a retractable card baffle and open-sided trays, the device accommodates various card sizes, from standard poker decks to specialty game cards like Canasta or UNO, ensuring smooth operation.



# FITS VARIOUS CARD SIZES



Standard  
2.5 x 3.5 in



Bridge  
2.25 x 3.5 in



UNO  
2.25 x 3.5 in



Phase 10  
2.5 x 3.5 in



Five Crowns  
2.5 x 3.5 in



The Adjustable  
Baffle Adapts  
Different Card Size

Image: The KPAW MAX 6 illustrating its adaptability to different card sizes, including standard, bridge, UNO, Phase 10, and Five Crowns cards.

## 3.6. Quiet Operation

The KPAW MAX 6 operates with minimal noise, maintaining a calm atmosphere ideal for extended game sessions, social gatherings, or family nights.

## 3.7. Rechargeable Battery

A long-lasting rechargeable battery allows the device to handle up to 150 decks on a single full charge, eliminating the need for disposable batteries.

# LARGER BATTERIES FOR EXTENDED PLAYTIME

Powerful Battery for Hundreds of Plays



## 5,200mAh

Shuffle and handle up to **150** decks on a full charge

**NOTE : Do not use while charging.**

Image: An internal view of the KPAW MAX 6, emphasizing its powerful 5,200mAh rechargeable battery for extended playtime.

### 3.8. Preset Gameplay Settings

The device comes with ready-to-play settings for popular games like Texas Hold'em and Bridge, simplifying game setup.



# PRESET GAMEPLAY SETTINGS

Ready-to-Play Settings for Texas Hold'em and Bridge



Image: The KPAW MAX 6's control panel displaying options for preset gameplay settings, specifically for Texas Hold'em and Bridge.

## Demonstration Video: UNO and Texas Hold'em Mode

Your browser does not support the video tag.

Video: This video demonstrates the KPAW MAX 6 in action, showcasing its functionality for both UNO and Texas Hold'em game modes, including card dealing and remote drawing.

## 4. SETUP GUIDE

1. **Unboxing:** Carefully remove all components from the packaging box. Retain the packaging for future storage or transport.
2. **Charging the Device:** Connect the provided USB-C charging cable to the device's charging port and a compatible USB power adapter (not included). The battery indicator on the display will show charging status. A full charge can take a few

hours. Ensure the device is fully charged before first use for optimal performance.

- 3. **Inserting Cards:** Place up to two standard decks of cards into the card input trays. Ensure cards are neatly stacked and aligned. The retractable card baffle can be adjusted to fit different card sizes.
- 4. **Power On:** Press and hold the power button (usually located on the control panel) until the display illuminates.

## 5. OPERATING INSTRUCTIONS

- 1. **Selecting Game Mode:** Use the navigation buttons on the control panel to browse through available game modes (e.g., Texas Hold'em, Bridge, UNO, Custom). Select your desired game mode.
- 2. **Adjusting Settings (Custom Mode):** If using Custom mode, you can adjust parameters such as number of players (up to 12), number of cards per player, dealing direction (180° or 360° rotation), and dealing distance (Far, Mid, Close). Refer to the on-screen prompts for specific adjustments.
- 3. **Shuffling Cards:** Once the game mode and settings are confirmed, press the 'Shuffle' button. The device will automatically shuffle the cards placed in the input trays.
- 4. **Dealing Cards:** After shuffling, press the 'Deal' button. The device will begin dealing cards according to the selected game mode and settings. For games like Texas Hold'em, it will deal hole cards, then community cards (Flop, Turn, River) upon subsequent presses of the 'Deal' button.
- 5. **Using Wireless Drawing Remotes:** For games requiring players to draw cards (e.g., UNO, Rummy), distribute the wireless remotes to each player. When a player needs to draw a card, they simply press the button on their remote. The machine will automatically deal a card to the corresponding player's position. Ensure a clear line of sight between the remote and the device for optimal performance.
- 6. **Power Off:** To turn off the device, press and hold the power button until the display shuts down.

## 6. MAINTENANCE

- **Cleaning:** Regularly wipe the exterior of the device with a soft, dry cloth. For internal cleaning, ensure the device is powered off and unplugged. Use a soft brush or compressed air to remove any dust or card residue from the card pathways and sensors. Do not use abrasive cleaners or immerse the device in water.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods (e.g., once every 3 months). Store the device in a cool, dry place.
- **Card Condition:** Use clean, undamaged cards for optimal performance. Bent, sticky, or excessively worn cards can lead to jams or misfeeds.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cards not shuffling/dealing smoothly or stopping early.	Cards are bent, worn, or dirty; card baffle not adjusted correctly; low battery.	Use new or clean cards. Adjust the retractable card baffle to fit the card size. Ensure the device is fully charged. Clean card pathways.
Device not dealing cards after shuffling.	Internal mechanism jam; software glitch.	Power off the device, remove all cards, and inspect the card path for obstructions. Power on again. If the issue persists, contact customer support.

Problem	Possible Cause	Solution
Wireless remotes not responding.	Remotes not paired; battery in remote is low; obstruction between remote and device.	Ensure remotes are paired according to the operating instructions. Replace remote batteries if necessary. Ensure a clear line of sight to the device.
Device not powering on.	Battery is completely drained; power button not held long enough.	Connect the device to the charger and allow it to charge for at least 30 minutes before attempting to power on again. Press and hold the power button for 3-5 seconds.

## 8. SPECIFICATIONS

Attribute	Detail
Product Dimensions	6.38 x 5 x 4.57 inches
Item Weight	2.25 pounds
Country of Origin	China
ASIN	B0DF7KXF87
Item Model Number	MAX 6
Batteries	Rechargeable (5,200mAh built-in)
Manufacturer	KPAW

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact KPAW Gaming Tech. directly through their official channels. Keep your proof of purchase for any warranty claims.

**Contact Information:** Please visit the KPAW official website or your point of purchase for the most up-to-date contact details for support and service inquiries.

