

HEASON dog001-Update

HEASON Outdoor Dog Kennel Instruction Manual

Model: dog001-Update (96"L x 48"W x 72"H)

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembling and using the HEASON Outdoor Dog Kennel. Failure to follow these instructions may result in injury to pets or individuals, or damage to the product.

- Ensure all components are securely fastened during assembly and regularly check for loose parts.
- This kennel is designed for pets. Do not allow children to play unsupervised inside or around the kennel.
- Place the kennel on a level, stable surface to prevent tipping.
- Regularly inspect the kennel for any signs of wear, damage, or rust. Replace damaged parts immediately.
- Ensure proper ventilation for your pet, especially during hot weather.
- Do not use the kennel as a permanent living space for your pet. Provide adequate shelter, food, and water.

2. PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Metal Kennel Panels (various sizes for sides, front, back)
- Roof Frame Components
- Waterproof PE Roof Cover
- Feeding Door Assembly with 2 Bowls
- Assembly Hardware (bolts, nuts, washers, clamps)

- Elastic Straps for Roof Cover
- Instruction Manual

3. ASSEMBLY INSTRUCTIONS

Assembly typically requires two people and can take approximately 1-2 hours. Ensure you have sufficient space for assembly.

3.1. Prepare the Area

Choose a level and stable outdoor location for the kennel. Clear the area of any debris or obstacles.

3.2. Assemble the Base Frame

1. Unpack all metal panels and identify the different types (side, front, back, door panel).
2. Connect the bottom horizontal bars of the panels using the provided tube-insert assembly method and secure with bolts and clamps. Ensure all connections are tight.
3. Attach the vertical support bars and upper horizontal bars, forming the rectangular base structure of the kennel.



Figure 3.2.1: Fully assembled HEASON Outdoor Dog Kennel, illustrating its overall structure and size.



Figure 3.2.2: Detailed view of the kennel's construction, highlighting fully welded joints for stability, secure metal connections, the safety latch mechanism, and an elastic strap for securing the roof cover.

3.3. Install the Door Panel

The door panel can be installed on either the front or side of the kennel, depending on your preference and space requirements.

1. Decide on the desired location for the main access door.
2. Integrate the door panel into the frame using the designated connection points. Ensure the hinges operate smoothly and the safety latch engages securely.

You Can Choose to Install the Door at Any Position

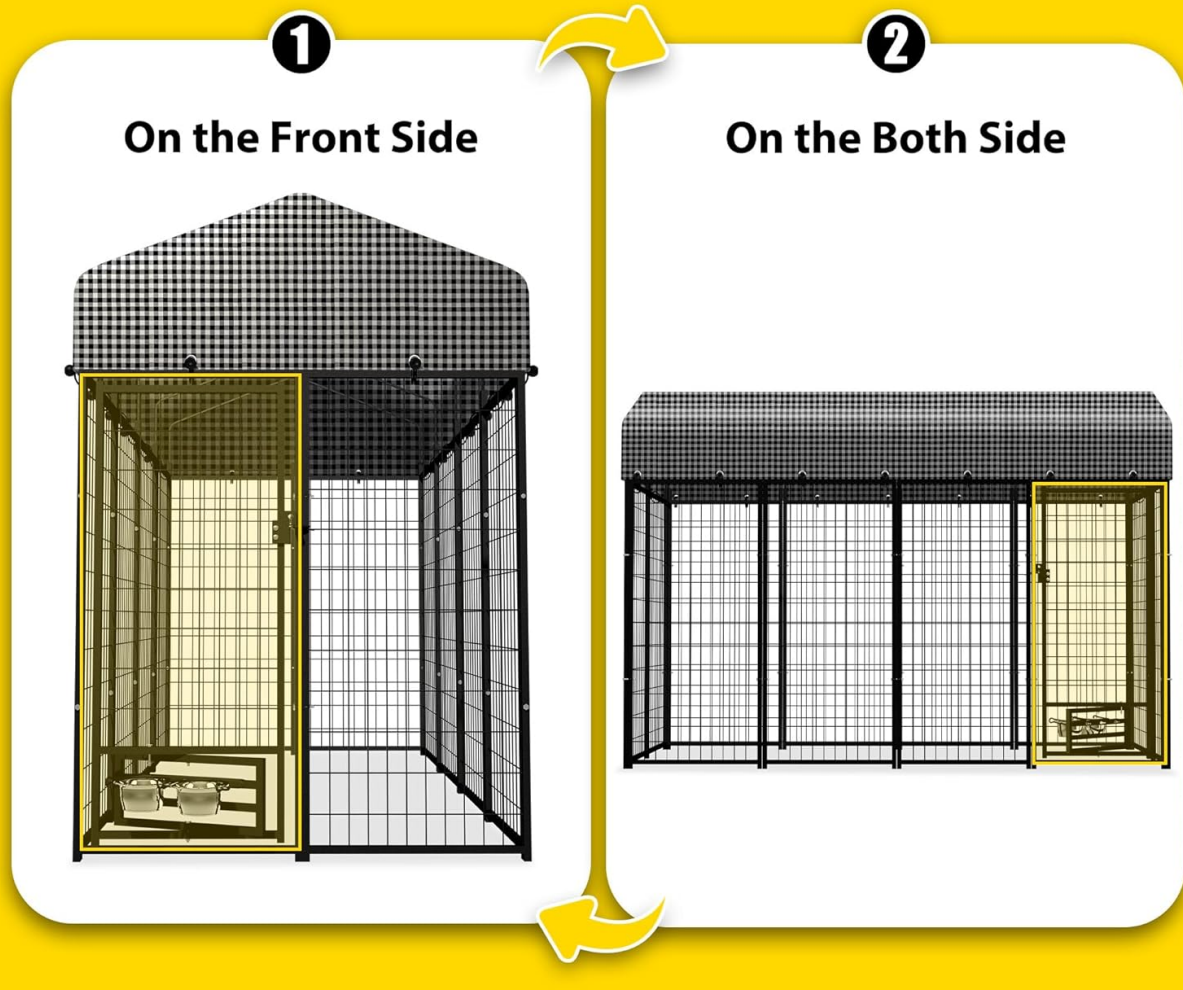


Figure 3.3.1: Illustration of flexible door installation options, allowing the main door to be placed on either the front or a side panel of the kennel.

3.4. Attach the Feeding Door

The feeding door with bowls is designed for convenient access to food and water.

1. Locate the feeding door assembly. This typically attaches to a lower section of a panel.
2. Secure the feeding door frame to the kennel panel. The bowls should rotate freely for easy filling and removal.



Figure 3.4.1: The rotating feeding door with two stainless steel bowls, demonstrating how it allows for convenient feeding without opening the main kennel door.

3.5. Install the Roof Frame and Cover

The roof provides protection from the elements. This step may require extra care and possibly a step stool.

1. Assemble the roof frame components according to the diagrams.
2. Carefully lift and secure the assembled roof frame onto the top of the kennel structure.
3. Drape the waterproof PE cover over the roof frame. Ensure it is centered and covers the entire top area.
4. Secure the cover using the elastic straps, threading them through the grommets on the cover and around the kennel frame. Ensure the cover is taut to prevent water accumulation.



Figure 3.5.1: The kennel with its waterproof roof cover, illustrating its suitability for various weather conditions including sunlight, rain, wind, and snow.

4. OPERATING INSTRUCTIONS

4.1. Main Access Door

To open the main door, disengage the safety latch and pull the door open. Ensure the door is securely latched when your pet is inside.

4.2. Feeding Door

The feeding door allows you to provide food and water without entering the kennel. Simply rotate the bowls outwards, fill them, and rotate them back into position. Ensure the bowls are securely seated to prevent spills.

5. MAINTENANCE

5.1. Cleaning

The kennel can be easily cleaned by hosing it down with water. For deeper cleaning, use a mild pet-safe detergent and rinse thoroughly. Regularly remove pet waste to maintain hygiene.

5.2. Inspection

Periodically inspect all bolts, clamps, and connections to ensure they remain tight. Check the metal frame for any signs of rust or damage. Inspect the roof cover for tears, fading, or other wear, especially after severe weather. Replace any worn or damaged components promptly to maintain the kennel's integrity and safety.



Figure 5.2.1: Visual comparison highlighting the robust 1mm tube thickness and dual rust-resistant coating (galvanized + powder coated) of the HEASON kennel, designed for enhanced durability and longevity compared to standard alternatives.

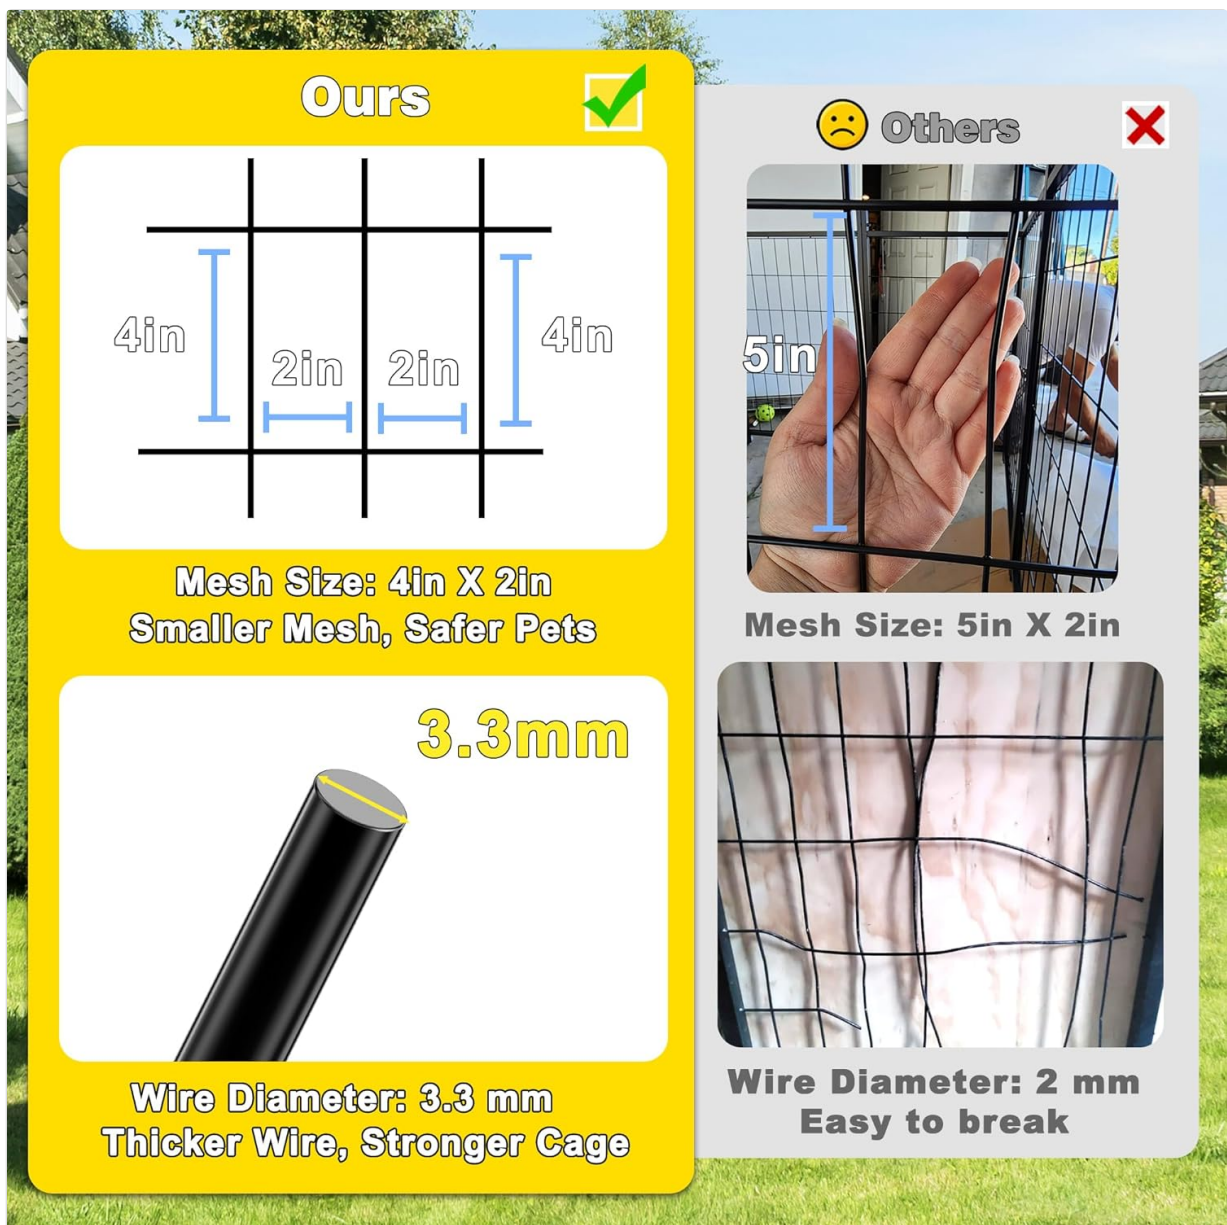


Figure 5.2.2: Comparison of mesh and wire specifications, showing the HEASON kennel's smaller 4x2 inch mesh and thicker 3.3mm wire diameter for increased pet safety and cage strength.

6. TROUBLESHOOTING

- **Kennel feels unstable:** Ensure all bolts and clamps are tightened securely. Verify the kennel is placed on a flat, level surface. Consider anchoring the kennel to the ground for added stability, especially in windy conditions.
- **Roof cover sags or collects water:** Ensure the roof frame is correctly assembled and securely attached. Re-tighten the elastic straps to make the cover taut. The spire design is intended to prevent water accumulation, so check for proper installation.
- **Door does not latch properly:** Check for any obstructions in the latch mechanism. Ensure the door panel is correctly aligned within the frame.
- **Signs of rust:** While the kennel features a dual rust-resistant coating, prolonged exposure to harsh elements can still cause wear. Address any rust spots with appropriate rust-inhibiting paint to prevent further spread.

7. SPECIFICATIONS

Feature	Detail
Brand	HEASON
Model Name	dog001-Update
Dimensions (L x W x H)	96.0" x 48.0" x 72.0" (8'L x 4'W x 6'H)
Item Weight	104.7 pounds
Material	Metal (Frame), PE (Roof Cover)
Frame Tube Thickness	1mm
Wire Diameter	3.3mm
Mesh Size	4" x 2"
Coating	Galvanized + Powder Coated (Rust-resistant)
Special Features	360-degree Rotating Feeding Door with Bowls, 2 Door Installation Options, Waterproof Roof Cover

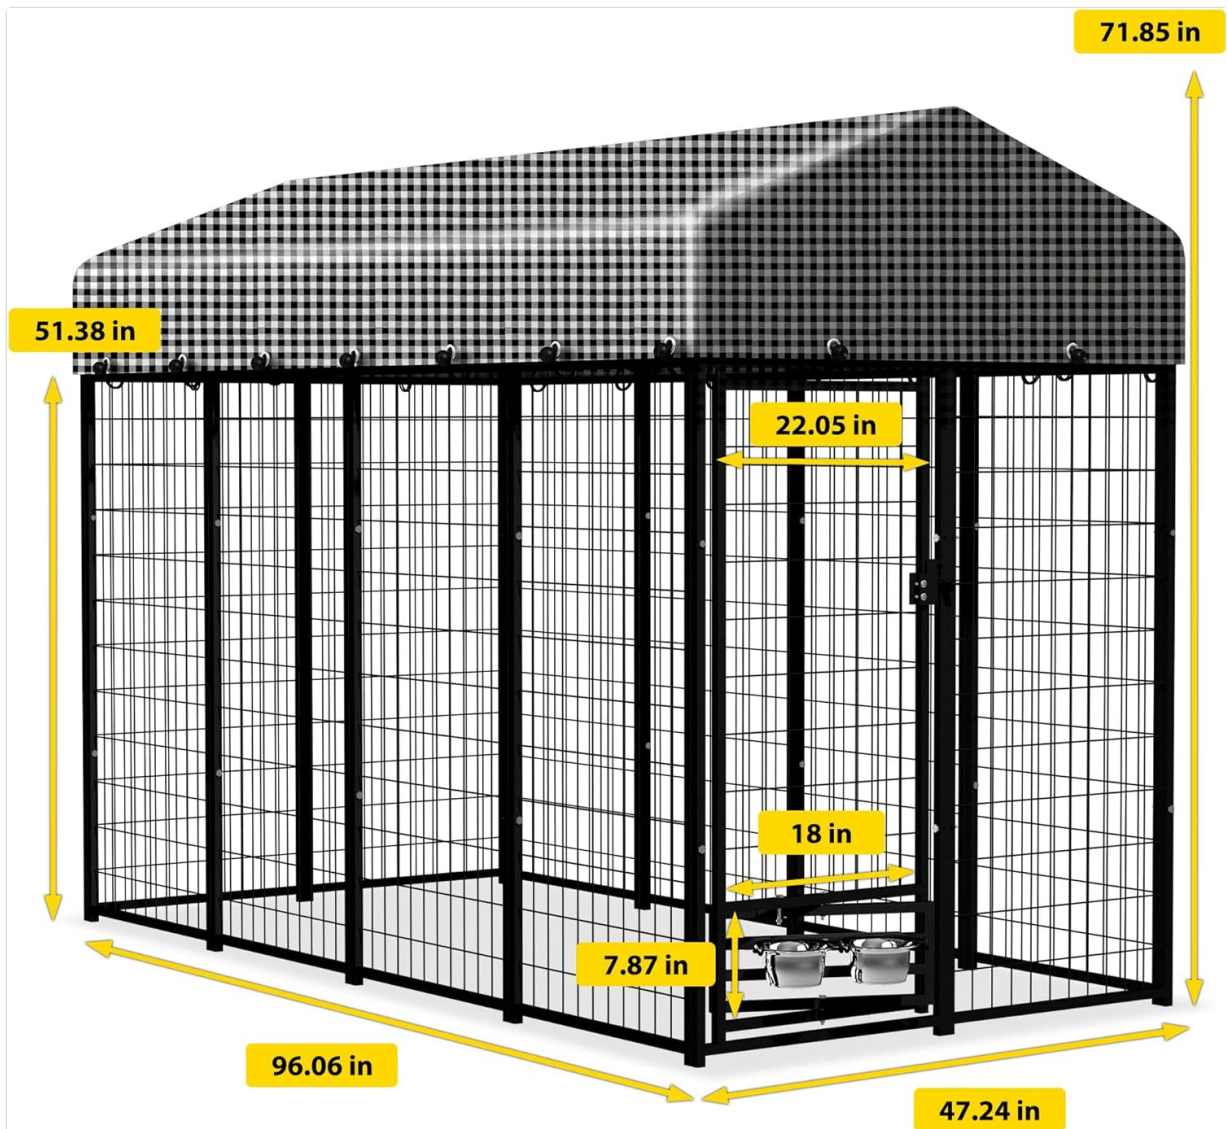 


Figure 7.1: Detailed dimensions of the HEASON Outdoor Dog Kennel, including length, width, and height measurements.

8. WARRANTY AND SUPPORT

For any questions, missing parts, or support needs, please contact HEASON customer service. While specific warranty details are not provided in this manual, please refer to your purchase documentation or contact the seller for warranty information.

You can typically find contact information for customer support on the product packaging or through your retailer.