

Joylike Wooden Coffee Shop Play Set (B0DF7LMQCF)

Joylike Wooden Coffee Shop Play Set Instruction Manual

Model: Wooden Coffee Shop Play Set (B0DF7LMQCF)

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Joylike Wooden Coffee Shop Play Set. This play set is designed to offer an engaging and realistic experience for children aged 3 years and up, encouraging imaginative play and social interaction.

The set includes a complete counter, a realistic coffee machine, various pretend foods, and an assortment of kitchen utensils, totaling 37 high-quality wooden pieces. It features non-toxic, eco-friendly paint and rounded edges for safety.



Figure 1: Joylike Wooden Coffee Shop Play Set assembled with accessories.

2. PACKAGE CONTENTS

Before assembly, please verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Wooden Coffee Shop Counter
- Coffee Machine
- Cash Register with Credit Card
- Blackboard
- Assorted Wooden Pretend Foods (e.g., cakes, pastries, bread, milk carton)
- Kitchen Utensils (e.g., tongs, cups, plates)
- Assembly Hardware (screws, connectors)



Figure 2: All 37 wooden accessories included with the play set.

3. ASSEMBLY INSTRUCTIONS

Assembly is required for this play set. Please follow these steps carefully. It is recommended to have an adult perform the assembly.

1. Unpack all components and lay them out on a clean, flat surface. Verify all parts against the package contents list.
2. Identify the main counter panels. Attach the side panels to the base using the provided screws. Ensure all connections are secure.
3. Install the internal shelves and partitions.
4. Attach the top canopy structure and the display shelves.
5. Secure the blackboard panel to the front of the counter.
6. Place the coffee machine, cash register, and other accessories in their designated areas or as desired.
7. Ensure all screws are tightened and the structure is stable before allowing children to play.

Note: Some pieces may not be explicitly labeled. Refer to the product images for visual guidance during assembly. If you encounter difficulty or believe parts are misaligned, re-examine the connections.



Figure 3: Dimensions of the assembled play set.

4. OPERATING INSTRUCTIONS

The Joylike Wooden Coffee Shop Play Set is designed for imaginative role-playing. Here are some ways to interact with its features:

4.1. Coffee Machine Operation

The coffee machine features movable knobs and a dispenser for realistic play. Children can pretend to brew coffee and serve it in the included cups.

Become a Coffee Shop Manager Now!



Figure 4: Detail of the coffee machine with interactive knobs.

4.2. Cash Register and Payment

The cash register includes buttons and a slot for the wooden credit card, simulating transaction processes. This encourages basic counting and social interaction.

4.3. Serving Desserts and Foods

The various wooden food items, such as cakes and pastries, can be arranged on the display shelves. The cake slices are connected by Velcro, allowing children to 'cut' and serve individual portions.

4.4. Blackboard Functionality

The front blackboard allows children to write menus, specials, or their cafe's name using chalk (not included), fostering creativity and literacy skills.

5. MAINTENANCE AND CARE

To ensure the longevity and cleanliness of your Joylike Wooden Coffee Shop Play Set, follow these maintenance guidelines:

- **Cleaning:** Wipe down all wooden surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the non-toxic paint and wood finish.

- **Storage:** Utilize the 6 built-in cabinets for storing the play food and accessories when not in use. This helps keep the play area tidy and teaches children organizational habits.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight and secure. Tighten any loose fasteners to maintain structural integrity.
- **Wood Care:** Keep the play set away from excessive moisture or direct sunlight to prevent warping or fading of the wood.



Figure 5: The play set features multiple storage cabinets for accessories.

6. TROUBLESHOOTING

If you encounter any issues with your play set, please refer to the following common solutions:

- **Loose Components:** If any parts feel wobbly or detach easily (e.g., oven door), check the corresponding screws and tighten them firmly. Avoid over-tightening to prevent stripping the wood.
- **Missing or Damaged Parts:** If you find any parts missing from the package or damaged upon arrival, please contact Joylike customer support for assistance and potential replacement parts.
- **Assembly Difficulties:** If assembly is challenging due to unclear instructions or unlabeled pieces, refer to the product images provided in this manual and on the product listing for visual guidance. Ensure all pieces are oriented correctly before fastening.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	23.6 x 11 x 40.15 inches
Item Weight	30.1 pounds
Recommended Age	3 years and up
Material	Premium Solid Wood, Non-toxic Paint
Number of Pieces	37 (including main counter and accessories)

8. SAFETY INFORMATION

The Joylike Wooden Coffee Shop Play Set is manufactured with child safety as a priority:

- Made from premium solid wood with non-toxic, eco-friendly paint.
- Features rounded edges to minimize risk of injury.
- Recommended for children aged 3 years and up. Adult supervision is advised during play.
- Keep small parts away from children under 3 years to prevent choking hazards.

9. CUSTOMER SUPPORT

For any questions, concerns, or assistance with your Joylike Wooden Coffee Shop Play Set, please contact Joylike customer support through your purchase platform or the official Joylike website. Please have your model number (B0DF7LMQCF) available when contacting support.