

MONODEAL YJ105

MONODEAL K105 Under Cabinet Kitchen CD Player Instruction Manual

Model: YJ105

1. PRODUCT OVERVIEW

The MONODEAL K105 is a versatile under-cabinet music system designed for kitchen environments, offering multiple audio playback options and convenient features. It integrates a CD player, FM radio, Bluetooth connectivity, and practical additions like an LED kitchen light, kitchen timer, and dual alarm clock.



Figure 1: MONODEAL K105 Under Cabinet CD Player with included accessories.

Your browser does not support the video tag.

Video 1: Official product overview of the MONODEAL K105 Under Cabinet CD Player, highlighting its features and design.

2. KEY FEATURES

- Radio/CD Player with Bluetooth:** Supports wireless Bluetooth for connecting with mobile devices, FM radio with 30 preset stations, and playback of CD, CD-R, CD-RW, and MP3 formats.



Wireless Bluetooth 5.0 connection Enjoy free music

*Unique Time Update:
Clock be synchronized automatically when Bluetooth paired

Figure 2: Wireless Bluetooth 5.0 connection for streaming music from mobile devices.

FM91.7

FM100.8

FM80.9

20:00 12:28

Multi-functional cabinet music CD player

Supports FM radio, CD, MP3 playback

FM

CD

CDR

CD-RW

MP3

Figure 3: Multi-functional cabinet music CD player supporting FM radio, CD, and MP3 playback.

- **Stylish Look and Practical LED Kitchen Lights:** Features a sleek black finish and a built-in energy-saving LED light for illuminating the counter space.



Train to cook with the help of timer function



Figure 4: Energy-saving LED light to enhance the kitchen workspace.


- **Timer and Remote Control:** Includes a cooking timer for time management and a remote control for convenient operation.



Figure 5: Remote control operation for easy command of the unit.

Dual alarm settings to fit your lifestyle

Alarm 1.

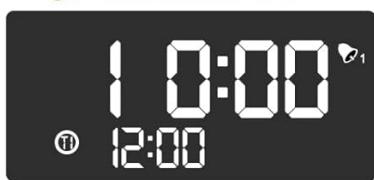

Alarm 2.

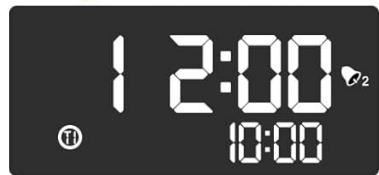


Figure 6: Timer function assists with cooking and other timed activities.

- **Dual Alarm Clock and High Sound:** Features dual alarm settings and 2*5W speakers for high-fidelity sound quality.



Figure 7: Dual alarm settings to fit various lifestyle needs.

- **2*16 Display and Easy Installation:** Large display for clear playback information, time, and timer status. Designed for easy installation.



Energy-Saving LED light to Enhance the kitchen

Figure 8: The 2*16 large screen display provides information at a glance.

3. SETUP

3.1 What's in the Box

- KR105 Under Cabinet CD Player (x1)
- Mounting Plate (x1)
- Remote Control (x1)
- Screws (x4)
- Power Plug (x1)



Figure 9: All components included in the product packaging.

3.2 Installation Steps

- 1. Attach Mounting Plate to Unit:** Secure the mounting plate to the top of the CD player using the provided screws.



Figure 10: Step 1 - Attaching the mounting plate to the top of the CD player.

- 2. Secure Mounting Plate to Cabinet:** Position the mounting plate under your desired cabinet location. Use the remaining screws to firmly attach the plate to the underside of the cabinet. Ensure the plate is level and securely fastened.



Figure 11: Step 2 - Securing the mounting plate to the cabinet.

- 3. Slide CD Player onto Mounting Plate:** Align the CD player with the attached mounting plate and slide it into place until it clicks securely.



Figure 12: Step 3 - Sliding the CD player onto the mounting plate.

- 4. Connect Power:** Plug the power adapter into the DC 5.0V input on the back of the CD player and then into a standard wall outlet.



Figure 13: Step 4 - Connecting the power adapter.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press the **Power** button on the unit or the remote control to turn the device on or off.

4.2 Mode Selection

Press the **SOURCE** button on the unit or remote control to cycle through available modes: CD, FM Radio, and Bluetooth (BT).

4.3 CD Playback

1. Select CD mode using the **SOURCE** button.
2. Press the **OPEN/CLOSE** button to open the CD tray.
3. Place a CD (CD, CD-R, CD-RW, MP3 format) onto the tray with the label side facing up.
4. Press the **OPEN/CLOSE** button again to close the tray. Playback will begin automatically.
5. Use **PLAY/PAUSE**, **SKIP FORWARD**, and **SKIP BACKWARD** buttons for control.
6. Press **PROGRAM** to program tracks, **REPEAT** for repeat options, and **RANDOM** for shuffled playback.

4.4 FM Radio Operation

1. Select FM mode using the **SOURCE** button.
2. Use the **TUNER +** or **TUNER -** buttons to manually tune to a station.
3. To auto-scan and save stations, press and hold the **SCAN** button (on remote) or **PRESET + / PRESET -** buttons (on unit).
4. Use **PRESET +** or **PRESET -** to navigate through saved stations.

4.5 Bluetooth Pairing

1. Select Bluetooth mode using the **SOURCE** button. The display will show "BT" and flash, indicating it's ready for pairing.
2. On your mobile device, enable Bluetooth and search for "MONODEAL K105".
3. Select the device to pair. Once connected, "BT" will stop flashing and remain solid.

4.6 Timer Function

Press the **TIMER/SNOOZE** button on the unit or **TIMER** button on the remote to set a cooking timer. Follow the on-screen prompts to adjust the time.

4.7 Alarm Clock Setting

The unit supports dual alarm settings. Press the **ALARM** button on the unit or remote to access alarm settings. Follow the display instructions to set alarm times and sources.

4.8 LED Light Operation

Press the **LIGHT** button on the unit or remote control to turn the under-cabinet LED light on or off.

5. MAINTENANCE

5.1 Cleaning

- Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- For the CD tray, use a soft, lint-free cloth to gently wipe away dust. Avoid touching the lens.

5.2 CD Care

- Handle CDs by their edges to prevent fingerprints and scratches.
- Store CDs in their cases when not in use.
- Clean dirty CDs with a soft, damp cloth, wiping from the center outwards.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not working	Ensure power cord is securely plugged in; Try a different outlet
No sound	Volume too low; Incorrect mode selected	Increase volume; Select correct source mode (CD, FM, BT)
CD skipping/not playing	Dirty or scratched CD; CD inserted incorrectly	Clean or replace CD; Reinsert CD correctly with label side up
Bluetooth not connecting	Device not in pairing mode; Bluetooth disabled on mobile device	Ensure unit is in BT pairing mode; Enable Bluetooth on your device and re-scan
Poor FM reception	Antenna not extended/positioned correctly; Interference	Adjust antenna position; Move unit away from other electronic devices

7. SPECIFICATIONS

- **Model Name:** YJ105
- **Product Dimensions:** 11.6 x 7.4 x 3 inches
- **Item Weight:** 4 pounds
- **Connectivity Technology:** Bluetooth
- **Special Features:** Bluetooth, Built-In Radio, Kitchen Timer, Dual Alarm Clock, LED Light
- **Audio Output:** 2*5W Speakers
- **Power Source:** AC Powered

8. WARRANTY AND SUPPORT

Your MONODEAL K105 Under Cabinet Kitchen CD Player comes with a 12-month replacement warranty. MONODEAL is committed to providing lifetime support for its products.

For any questions, problems, or support needs, please refer to the contact information provided in your product

packaging or visit the official MONODEAL website.



Figure 14: Dedicated customer support is available for assistance.