

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NEWISION](#) /

› [NEWISION 7 Inch Android 13 Tablet User Manual](#)

NEWISION K7

NEWISION 7 Inch Android 13 Tablet User Manual

Model: K7

INTRODUCTION

This manual provides comprehensive instructions for the NEWISION 7 Inch Android 13 Tablet, Model K7. This tablet is designed for daily use, offering a portable and lightweight solution for entertainment, communication, and productivity. It features the latest Android 13 operating system, GMS certification for Google Play access, and a vibrant 1024x600 IPS HD display.

Please read this manual carefully before using your new tablet to ensure proper operation and to maximize its lifespan.

PACKAGE CONTENTS

Upon opening the package, please verify that all items listed below are present and in good condition.

- 1 x NEWISION 7 Inch Android Tablet
- 1 x Tablet Protective Case
- 1 x USB Type-C Cable
- 1 x User Manual (this document)



Image: The NEWISION 7 Inch Android 13 Tablet shown with its included black protective case.

SETUP

Initial Charge

Before first use, it is recommended to fully charge your tablet.

1. Connect the USB Type-C cable to the tablet's charging port.
2. Connect the other end of the USB Type-C cable to a compatible USB power adapter (not included) and plug it into a wall outlet.
3. The charging indicator will illuminate. Allow the tablet to charge until the battery icon shows full.

Powering On/Off

- To power on: Press and hold the Power button located on the side of the tablet until the screen lights up.
- To power off: Press and hold the Power button until a power-off menu appears. Select "Power off" and confirm.

Initial Setup Wizard

The first time you power on the tablet, you will be guided through an initial setup wizard. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Set up your Google account (recommended for full access to Google Play Store and services).
- Set date and time.
- Configure screen lock and other security features.

Android 13 Tablet 7 Inch

GMS Certification-Easy to Download Different Social App



Image: The tablet display showing the Android 13 interface with various pre-installed and downloadable applications, highlighting GMS certification.

OPERATING INSTRUCTIONS

Navigation and Gestures

- **Tap:** Touch the screen once to open an app, select an item, or press a button.
- **Touch and Hold:** Press and hold an item to access context menus or move icons.
- **Swipe:** Drag your finger across the screen to scroll through pages or lists.

- **Pinch-to-Zoom:** Place two fingers on the screen and move them apart to zoom in, or together to zoom out.

Connecting to Wi-Fi

1. Go to **Settings** > **Network & Internet** > **Internet**.
2. Turn on Wi-Fi.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted and tap **Connect**.

Installing Applications

The tablet supports a wide range of Android applications available through the Google Play Store.

1. Ensure you are connected to the internet.
2. Open the **Play Store** app.
3. Search for the desired application.
4. Tap **Install** and follow the on-screen instructions.

Using the Cameras

The tablet is equipped with dual cameras for capturing photos and videos.

- Open the **Camera** app.
- Tap the camera switch icon to toggle between front and rear cameras.
- Tap the shutter button to take a photo or start/stop video recording.

7 Inch HD Screen

Dual Cameras Allow You to Capture Important Moment of Your Life

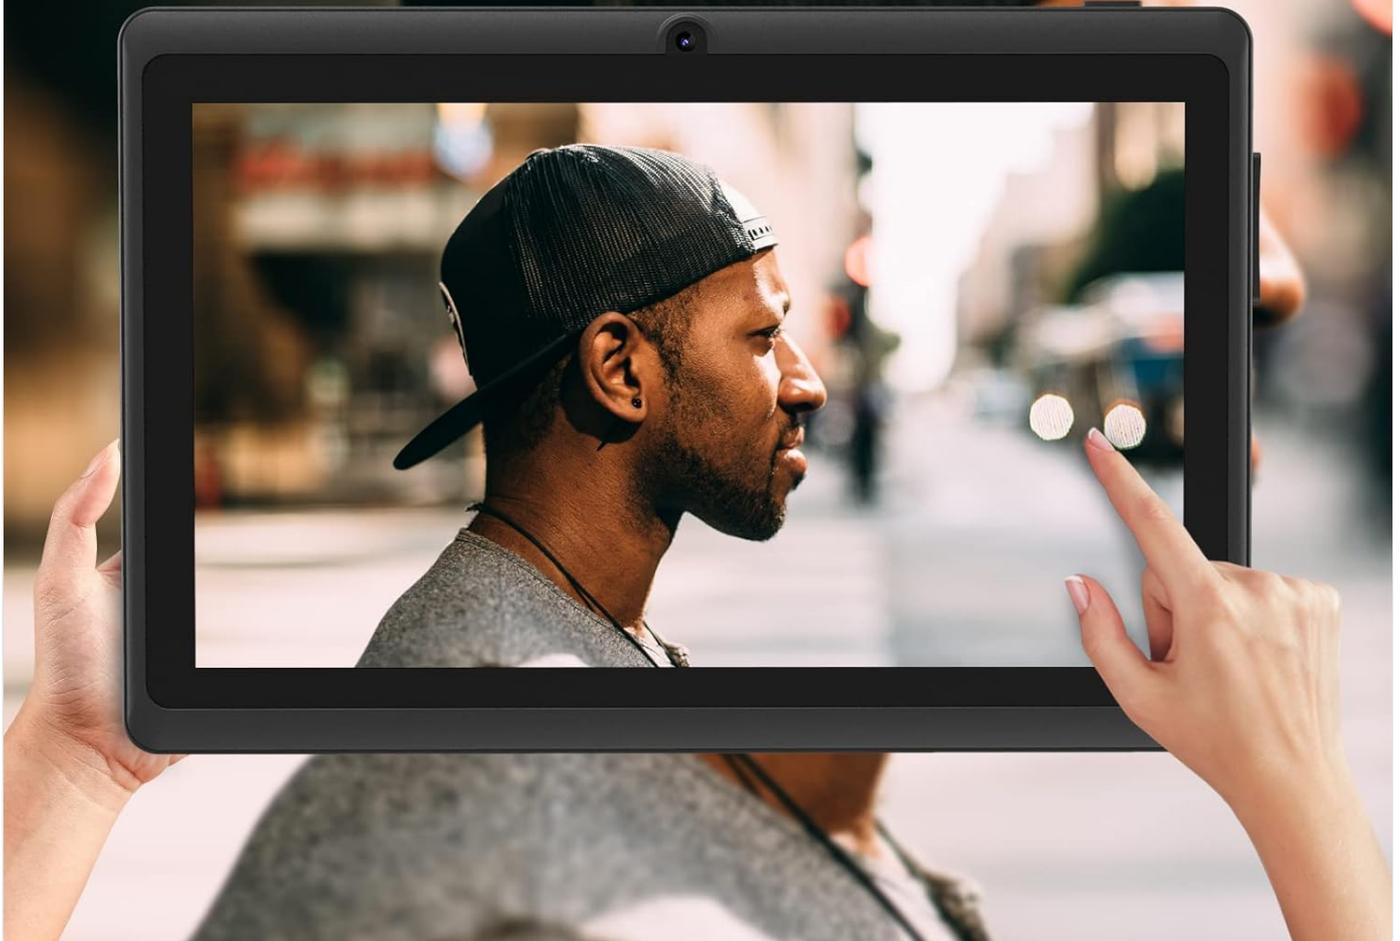


Image: A user holding the 7-inch tablet, demonstrating its clear HD screen and the functionality of its dual cameras for capturing moments.

Expanding Storage

The tablet's internal 32GB ROM can be expanded up to 512GB using a Micro SD card (not included).

1. Locate the Micro SD card slot on the side of the tablet.
2. Gently insert the Micro SD card into the slot until it clicks into place.
3. The tablet will recognize the new storage. You may be prompted to format the card for optimal use.



Image: The tablet's display showcasing its high performance capabilities, including 4GB RAM, 32GB internal storage, and the option to expand storage up to 512GB with a Micro SD card.

Daily Usage Scenarios

The NEWISION tablet is versatile for various daily activities:

- **Entertainment:** Enjoy movies, TV shows, and music with its HD display and long-lasting battery.
- **Reading:** Perfect for eBooks and digital magazines.
- **Social Media & Communication:** Stay connected with friends and family through various social apps.
- **Portability:** Its slim and lightweight design, along with the protective case, makes it easy to carry anywhere.

Enjoy Your Daily Life with the Tablet

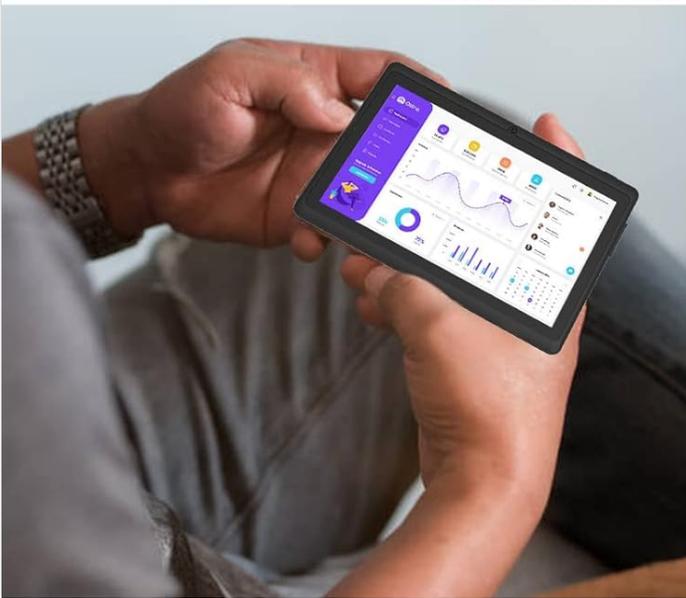


Image: A visual representation of the tablet's versatility, showing different individuals enjoying it for media consumption, portability, and general use.

Small Tablet Easy to Hold and Carry

Lightweight Design Slim and Portable



Image: A close-up view of the tablet being held, illustrating its compact size and lightweight design for easy handling and portability.

MAINTENANCE

Cleaning the Tablet

- Use a soft, lint-free cloth to wipe the screen and body of the tablet.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.
- Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays directly on the tablet.

Battery Care

- Avoid exposing the tablet to extreme temperatures (hot or cold), as this can affect battery life.
- Do not leave the tablet fully discharged for extended periods.
- For optimal battery health, try to keep the charge level between 20% and 80%.

Your browser does not support the video tag.

Video: An overview of the 7 Inch Tablet with Case, demonstrating its features and design. This video is provided by the seller.

TROUBLESHOOTING

Tablet Not Turning On

- Ensure the tablet is sufficiently charged. Connect it to a power source and wait a few minutes before attempting to power on again.
- Press and hold the Power button for at least 10-15 seconds to perform a forced restart.

Wi-Fi Connectivity Issues

- Check if Wi-Fi is enabled in Settings.
- Restart your Wi-Fi router.
- Forget the network in tablet settings and reconnect.
- Ensure you are within range of the Wi-Fi signal.

Apps Crashing or Freezing

- Close and reopen the app.
- Clear the app's cache and data in **Settings > Apps > [App Name] > Storage & cache**.
- Uninstall and reinstall the app.
- Ensure the tablet's software is up to date.

Slow Performance

- Close unused background applications.
- Clear cached data regularly.
- Consider uninstalling apps you no longer use to free up storage.
- Perform a factory reset as a last resort (this will erase all data, back up important files first).

SPECIFICATIONS

Feature	Detail
Model	K7
Operating System	Android 13
Screen Size	7 Inches
Screen Resolution	1024x600 IPS HD
Processor	1.5 GHz Quad-Core (Allwinner)
RAM	4GB (2GB + 2GB Expandable)
Internal Storage	32GB ROM
Expandable Storage	Up to 512GB (Micro SD, not included)
Cameras	Dual Camera (Rear Webcam Resolution: 13 MP)

Feature	Detail
Battery	3500mAh Lithium Polymer
Average Battery Life	Up to 6 hours (web browsing), 4 hours (video playback)
Wireless Connectivity	802.11n Wi-Fi
Dimensions (LxWxH)	7.08 x 4.72 x 0.19 inches
Item Weight	1.32 pounds
Color	Black

NEWISION Toddler Tablet



 7 Inch Display	 Android 13	 Quad Core CPU	 Battery 3500MAH
 2.4G Wifi	 Dual Camera	 4GB RAM (2+2GB Expandable)	 32GB ROM

Image: The tablet highlighting its core specifications such as display size, operating system, processor, battery capacity, and memory.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided on the product packaging or visit the official NEWISION website. Keep your purchase receipt as proof of purchase for any warranty claims. You can also visit the [NEWISION Store on Amazon](#) for additional product information and support resources.