

[Manuals.plus](#) /

> [Gotopceed](#) /

> Rechargeable Motion Sensor Ceiling Light with Remote - Magnetic Wireless Ceiling Light Battery Powered for Closet Shower Stairs Shed Hallway Porch Patio ect 1 Pack 3 Colour Temperatures

Gotopceed T070

Rechargeable Motion Sensor Ceiling Light with Remote

Brand: Gotopceed | Model: T070

WHAT'S IN THE BOX

- 1 x Rechargeable Motion Sensor Light
- 1 x Remote Control
- 1 x USB Cable
- 1 x Magnet Strip
- 4 x Sticky Back Pads
- 1 x Manual

KEY FEATURES

- **USB Rechargeable & Long Lasting:** Built-in 8000mAh high capacity battery. One charge lasts 7-10 hours in 'Stay On' mode and 30-60 days in 'Motion Sensor' mode, depending on usage frequency and brightness.
- **Magnetic Installation & Widely Used:** Features a magnetic base for easy installation without drilling, preventing wall damage. Ideal for dark areas lacking electricity, such as closets, sheds, lofts, hallways, and garages.
- **Motion Sensor Auto ON & Remote Control Manually ON:** Offers two working modes. In Sensor Mode, the light automatically activates within 9-16 feet and turns off after 20 seconds of no movement. In 'Stay On' mode, it can be manually controlled with the remote.
- **3 Color Temperatures & Dimmable:** Choose from 3000K warm white, 4000K natural light, or 6000K cool white. Features 10 levels of adjustable brightness and a timer function for automatic shut-off after 15, 30, or 60 minutes.

SETUP AND INSTALLATION

The Gotopceed Motion Sensor Ceiling Light offers a simple and versatile installation process, requiring no complex wiring or drilling.

Magnetic Mounting

The primary installation method utilizes a magnetic base, allowing for quick and easy attachment to any clean, dry surface. This eliminates the need for tools and prevents damage to walls or ceilings.



Image: Magnetic base design for easy, non-destructive installation.

Installation Steps:

1. Identify a suitable clean and dry surface for installation.
2. Peel the protective backing from the adhesive side of the provided metal strip.
3. Firmly press the metal strip onto the desired surface (e.g., ceiling, wall).
4. Align the magnetic points on the back of the light with the installed metal strip. The light will securely attach magnetically.



Image: Visual guide for both stick-on and optional drill mounting methods.

For more permanent or heavy-duty installations, the light also supports sturdy drill mounting using the provided sticky back pads and screws (not explicitly mentioned in parts list, but implied by '4 x Sticky Back Pads' and common practice for such mounts).

OPERATING INSTRUCTIONS

The ceiling light can be operated using its integrated controls or the included remote control for enhanced convenience.

Powering On/Off and Mode Selection

- **Sensor Mode:** The light automatically turns on when motion is detected within 9-16 feet and turns off after 20 seconds of no movement. This mode is ideal for areas like hallways, closets, or stairwells.
- **Stay On Mode:** For continuous illumination, set the light to 'ON' mode. It can then be turned off manually using the remote control.

3 Working Mode



Day Mode
Sensor always working



Night Mode
Sensor works only in darkness



ON Mode
Stay on

Image: Illustration of the three operational modes: Day Sensor, Night Sensor, and Always On.

Remote Control Functions

The remote control provides full command over the light's settings:

- **Switch Modes:** Easily toggle between Sensor Mode and Stay On Mode.
- **Change Color Temperature:** Select from 3000K (warm white), 4000K (natural light), or 6000K (cool white) to suit your preference.
- **Dimmable:** Adjust the brightness across 10 levels to achieve the desired illumination.
- **Timer Function:** Set the light to automatically turn off after 15, 30, or 60 minutes.

Easy Remote Control

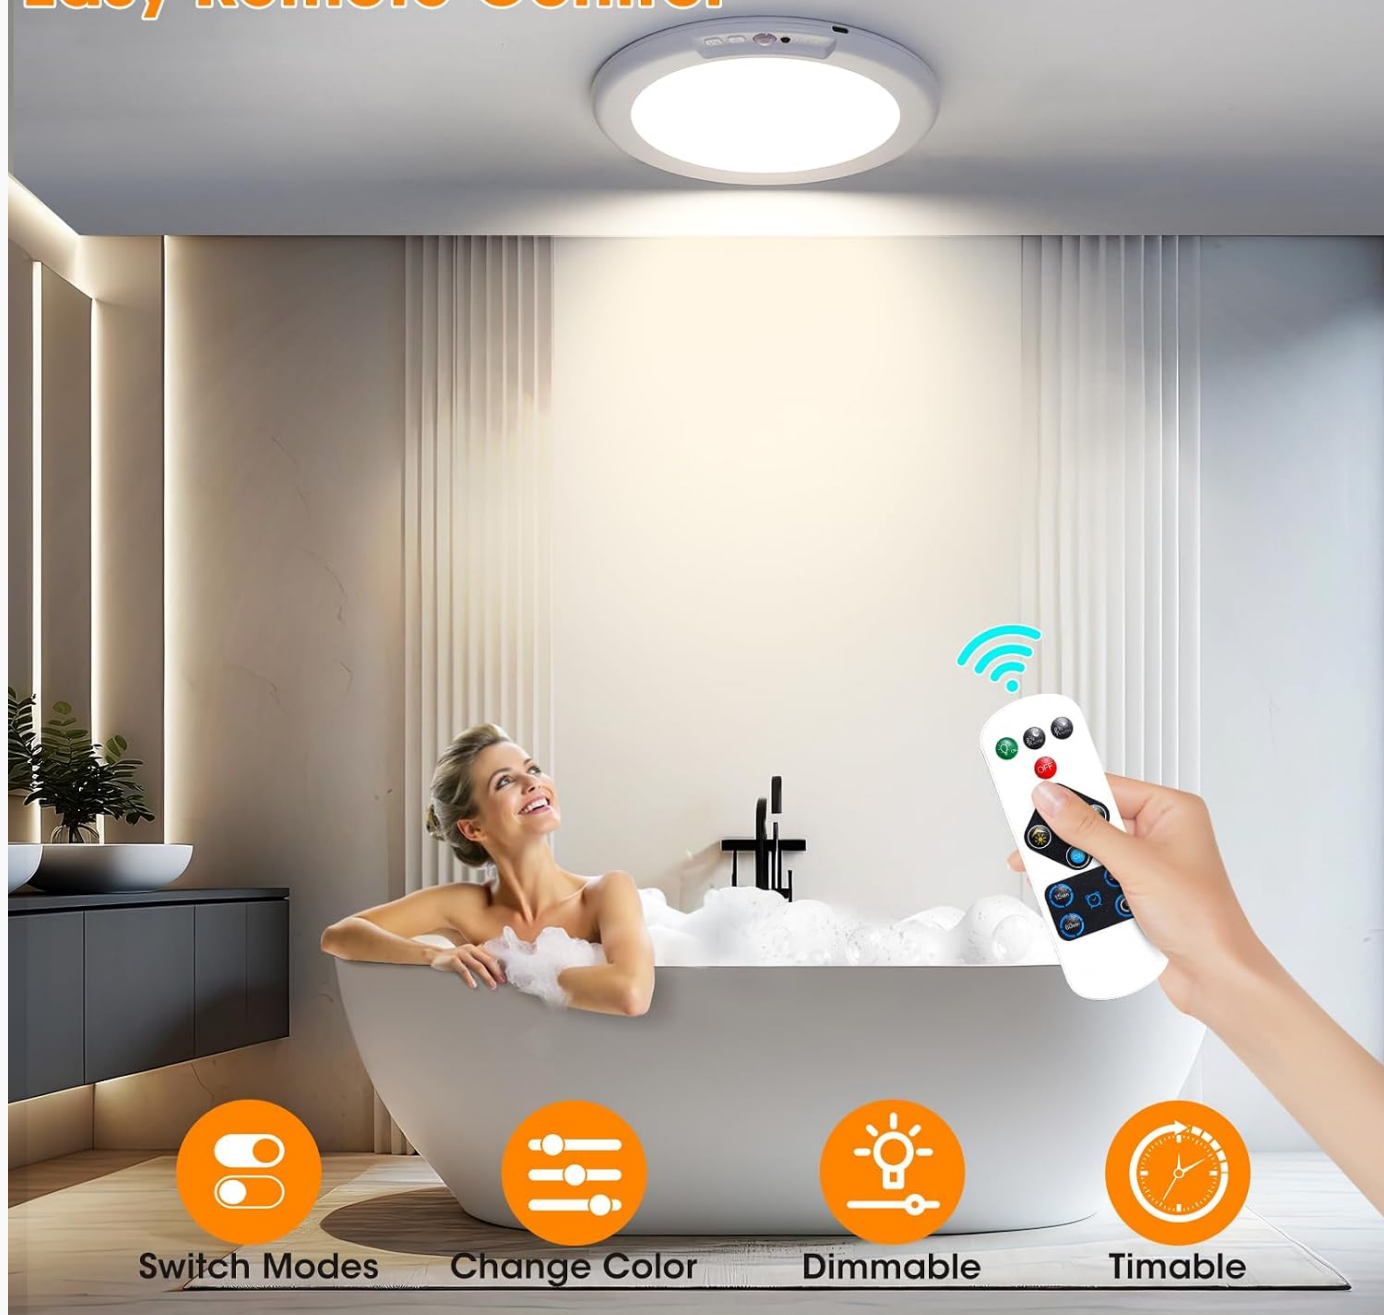


Image: Remote control demonstrating ease of use for various light settings.



Image: Visual representation of the three color temperatures and dimmable options.

MAINTENANCE

To ensure optimal performance and longevity of your Gotopceed Motion Sensor Ceiling Light, follow these simple maintenance guidelines:

- **Charging:** Recharge the light using the provided USB-C cable when the battery is low. A full charge typically takes 4-5 hours. The magnetic mounting allows for easy removal for charging.



Image: The light connected to a USB-C cable for charging.

- **Cleaning:** Gently wipe the light's surface with a soft, dry cloth to remove dust or smudges. Avoid using abrasive cleaners or solvents.
- **Storage:** If storing the light for an extended period, ensure it is fully charged and stored in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your motion sensor ceiling light, please refer to the following common solutions:

- **Light not turning on:** Ensure the battery is charged. Check the selected mode (Sensor or Stay On) and verify the remote control battery if using 'Stay On' mode.
- **Motion sensor not working:** Confirm the light is in Sensor Mode. Ensure there are no obstructions blocking the sensor. Test in different lighting conditions (Day Mode vs. Night Mode).
- **Remote control not responding:** Check the battery in the remote control. Ensure there is a clear line of sight between the remote and the light.
- **Light flickering or dim:** Recharge the battery. If the issue persists, contact customer support.

For further assistance, please refer to the Warranty & Support section.

SPECIFICATIONS

Attribute	Detail
Brand	Gotopceed
Model Name	Rechargeable Motion Sensor Ceiling Light
Model Number	T070
Color	3 Colour Temperatures (3000K Warm White/4000K Natural White/6000K Cool White)
Material	LED, Plastic

Product Dimensions	7.5"L x 7.5"W x 0.55"H
Item Weight	1.01 pounds
Power Source	Battery Powered (1 Lithium Polymer battery included)
Battery Capacity	8000mAh
Brightness	400 lumen
Special Features	USB Rechargeable, Motion Sensor, Remote Control, Dimmable, Timer
Installation Type	Magnetic Mounting
Indoor/Outdoor Usage	Outdoor (suitable for covered outdoor areas like patios)
Water Resistance Level	Not Water Resistant

WARRANTY & SUPPORT

Gotopceed is committed to providing excellent customer service and product reliability.

- **24-Month Warranty:** Your rechargeable motion sensor light is covered by a 24-month after-sales service warranty.
- **24/7 Customer Support:** Customer service is available 7 days a week, 24 hours a day, to assist you with any inquiries or issues.
- **Quick Response:** Expect a reply within 12 hours to resolve your problem efficiently.
- **Free Replacement:** In case of confirmed product issues, a free replacement will be provided.



Image: Gotopceed's commitment to customer support and warranty.

For any problems with your rechargeable motion sensor light, please do not hesitate to contact us for support and a free replacement if necessary.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question