

[Manuals.plus](#) /

› [VELATEMOR](#) /

› VELATEMOR 4K Camcorder Video Camera User Manual

VELATEMOR VELATEMORd8up7gc1rq-12

VELATEMOR 4K Camcorder Video Camera User Manual

Model: VELATEMORd8up7gc1rq-12

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your VELATEMOR 4K Camcorder Video Camera. Please read this manual thoroughly before using the device to ensure optimal performance and to prevent damage.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x VELATEMOR 4K Camcorder Video Camera
- 1 x USB Cable
- 1 x User Manual



Image: The VELATEMOR 4K Camcorder displayed with its standard accessories, including a USB cable, a removable battery, and a wrist strap.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your camcorder.



Image: A front-side perspective of the VELATEMOR 4K Camcorder, showing the lens, the main body, and the 2.7-inch TFT flip screen in an open position.

Key Features:

- **2.7-inch TFT Rotatable Screen:** For flexible viewing and self-recording.
- **4K Video Resolution:** Captures high-definition video.
- **48MP Still Image Resolution:** For detailed photographs.
- **16x Digital Zoom:** Allows for closer shots of distant subjects.
- **Built-in Speakers:** For audio playback.
- **LED Fill Light:** Provides additional illumination for photos and videos in low-light conditions.

Suitable for various scenarios:

For baby growth records, travel, marriage, campus records, etc.

Lightweight and multifunctional

Convenient for use in various scenarios.



Image: A detailed view of the camcorder's flip screen, highlighting key specifications such as CMOS Sensor technology, support for up to 32GB storage, and Full HD 1080P video capability.

4. SETUP

4.1. Battery Installation and Charging

The camcorder uses a 1020mAh Lithium battery. Ensure the battery is fully charged before first use.

1. Open the battery compartment cover, typically located on the bottom or side of the camcorder.
2. Insert the Lithium battery, ensuring the contacts align correctly.

3. Close the battery compartment cover securely.
4. Connect the camcorder to a power source using the provided USB cable for charging. The camcorder supports recording while charging.

4.2. Memory Card Installation

A storage card (up to 32GB, not included) is required to save photos and videos.

1. Locate the memory card slot, usually on the side of the camcorder.
2. Insert the memory card gently into the slot until it clicks into place. Ensure the card is inserted in the correct orientation.
3. To remove, press the card inward until it springs out.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

Press and hold the Power button to turn the camcorder on or off.



Image: The camcorder's 2.7-inch TFT screen showing the 'Digital Camcorder' startup display.

5.2. Recording Video

1. After powering on, the camera typically enters recording mode.
2. Press the **Record Key** to start recording.
3. Press the **Record Key** again to stop recording.

5.3. Taking Photos

1. From recording mode, press the **Mode Key** to switch to photography mode.
2. Press the **Photography Key** (shutter button) to take a photo.

5.4. Digital Zoom

Use the **T** (Telephoto) or **W** (Wide-angle) keys to adjust the 16x digital zoom.

5.5. LED Fill Light

Press the **OK** button to turn the LED fill light on or off. Note that the fill light cannot be used in playback mode.

5.6. Self-Timer

The self-timer function allows for a delay of 2 seconds or 10 seconds before a photo is taken.

6. CONNECTING TO A COMPUTER

You can connect the camcorder to a computer using the provided USB cable to transfer files or use it as a PC camera.

1. Ensure the camcorder is powered on.
2. Connect one end of the USB cable to the camcorder's USB port and the other end to your computer's USB port.
3. The camcorder will prompt you to select a mode (e.g., Mass Storage for file transfer or PC Camera for webcam functionality). Select the desired mode.
4. For file transfer, the camcorder will appear as a removable disk drive on your computer, allowing you to access photos and videos.

7. SPECIFICATIONS

Feature	Specification
Item Type	Video Camera
Material	Plastic
Image Resolution	1M, 3M, 5M, 8M, 12M, 16M, 20M, 24M, 36M, 48M
Image Format	JPG
Video Resolution	4K (3840 x 2160), FHD (1920 x 1080), HD (1280 x 720), 640 x 480
Video Format	AVI
Screen Size	2.7 inches (TFT, Rotatable)
Digital Zoom	16x
Shutter	Electronic
Self Timer	2 seconds, 10 seconds

TV OUT Output	NTSC 30fps, PAL 25fps
Storage Support	Maximum 32GB storage card (not included)
Camera Battery	Lithium battery x 1, 1020mAh
Item Weight	7.5 ounces
Package Dimensions	5.51 x 4.33 x 2.76 inches
Model Number	VELATEMORd8up7gc1rq-12

8. TROUBLESHOOTING

If you encounter issues with your camcorder, please refer to the following common solutions:

- **Camera does not power on:** Ensure the battery is correctly installed and fully charged.
- **Cannot record or take photos:** Check if a memory card is inserted and has sufficient free space. Ensure the camcorder is in the correct mode (recording or photography).
- **Poor image/video quality:** Ensure the lens is clean and free from smudges. Check lighting conditions and use the LED fill light if necessary.
- **Camcorder not recognized by computer:** Verify the USB cable connection. Ensure the camcorder is powered on and the correct USB mode is selected.
- **Screen is blank or frozen:** Try turning the camcorder off and on again. If the issue persists, remove and reinsert the battery.

9. MAINTENANCE

To ensure the longevity and optimal performance of your camcorder, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens and screen, use a specialized lens cleaning cloth and solution to avoid scratches.
- **Storage:** Store the camcorder in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Battery Care:** If storing for an extended period, remove the battery. Recharge the battery periodically to maintain its health.
- **Avoid Impacts:** Protect the camcorder from drops and impacts, which can damage internal components.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official VELATEMOR website. Keep your proof of purchase for any warranty claims.