

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rowenta](#) /

› [Rowenta Tefal X-Nano Essential RH1128 RH1129 Vacuum Cleaner Brush Roller Replacement Manual](#)

Rowenta RH1128 RH1129

Rowenta Tefal X-Nano Essential RH1128 RH1129 Vacuum Cleaner Brush Roller Replacement Manual

Original Replacement Part: Model SS-7222066729

INTRODUCTION

This manual provides essential instructions for the installation, operation, and maintenance of your new Rowenta Tefal X-Nano Essential RH1128 RH1129 vacuum cleaner brush roller. This is an original replacement part designed to restore optimal cleaning performance to your appliance. Please read these instructions carefully before proceeding.

Compatible Models:

- Rowenta X-Nano Essential: RH1128, RH1129, RH1128WO/870, RH1129WO/870
- Tefal X-Nano Essential: TY1129, TY1129WO/870

The product identification plate, usually located on the underside of your appliance, contains specific model data.

SAFETY INFORMATION

- Always disconnect the vacuum cleaner from the power supply before installing, cleaning, or performing any maintenance on the brush roller.
- Ensure the replacement part is compatible with your specific vacuum cleaner model to prevent damage or malfunction.
- Keep fingers, hair, and loose clothing away from the brush roller during operation.
- Do not operate the vacuum cleaner without the brush roller properly installed.

SETUP AND INSTALLATION

This section guides you through the process of replacing the brush roller on your Rowenta Tefal X-Nano Essential vacuum cleaner.

1. **Prepare the Vacuum Cleaner:** Ensure the vacuum cleaner is turned off and unplugged from the electrical outlet.
2. **Access the Brush Head:** Place the vacuum cleaner's brush head upside down on a clean, flat

surface.

3. Remove the Old Brush Roller:

Locate the locking mechanism or release tabs on the brush head that secure the brush roller. Depending on your specific model, this may involve sliding a latch or pressing a button. Carefully remove the worn or damaged brush roller.



Image: Underside of the brush head, illustrating the location of the brush rollers. Note the red and blue brush elements.

4. Install the New Brush Roller:

Align the new brush roller (Model SS-7222066729) with the slots in the brush head. Ensure it sits correctly and the ends engage with the drive mechanism. Gently push until it clicks into place or the locking mechanism secures it.



Image: Top view of the brush head, showing the connection point for the vacuum cleaner handle and the 'LOCK SYSTEM' indicator.

5. **Secure the Brush Head Cover (if applicable):** If your model has a removable cover for the brush roller compartment, reattach it and ensure it is securely fastened.
6. **Test Operation:** Reconnect the vacuum cleaner to the power supply and turn it on briefly to ensure the new brush roller spins freely and operates correctly.

OPERATING INSTRUCTIONS

Once installed, the brush roller operates as an integral part of your Rowenta Tefal X-Nano Essential vacuum cleaner. No special operating procedures are required for the brush roller itself beyond the standard use of your vacuum cleaner.

- Ensure the brush roller is clean and free of obstructions before each use for optimal performance.
- For delicate surfaces, consult your vacuum cleaner's main manual regarding brush roller settings or modes.

MAINTENANCE AND CLEANING

Regular maintenance of the brush roller ensures efficient cleaning and extends its lifespan.

1. **Disconnect Power:** Always unplug the vacuum cleaner before cleaning the brush roller.

2. Remove Debris:

Periodically inspect the brush roller for tangled hair, threads, or other debris. Use scissors or a brush to carefully cut and remove any entangled material. Be careful not to damage the bristles.



Image: Front view of the brush head, highlighting the transparent cover and the red brush roller inside.

3. **Clean the Brush Roller:** If necessary, the brush roller can be gently wiped with a damp cloth. Do not immerse the entire brush head in water. Allow the brush roller to air dry completely before reinstallation or use.
4. **Check for Wear:** Over time, the bristles may wear down. If the cleaning performance significantly decreases, it may be time to replace the brush roller again.

TROUBLESHOOTING

If you encounter issues with your brush roller, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Brush roller not spinning.	<ul style="list-style-type: none">Tangled debris (hair, threads).Brush roller not installed correctly.Vacuum cleaner not powered.	<ul style="list-style-type: none">Unplug the vacuum and remove tangled debris (see Maintenance).Ensure the brush roller is securely clicked into place.Check power connection and vacuum cleaner's main switch.
Reduced cleaning performance.	<ul style="list-style-type: none">Worn bristles.Brush roller clogged with fine dust.	<ul style="list-style-type: none">Consider replacing the brush roller.Clean the brush roller thoroughly (see Maintenance).
Unusual noise from brush head.	<ul style="list-style-type: none">Foreign object caught in brush.Damaged brush roller.	<ul style="list-style-type: none">Unplug and inspect for obstructions.If damaged, replace the brush roller.

If the problem persists after attempting these solutions, please refer to the Support section or consult your vacuum cleaner's main instruction manual.

SPECIFICATIONS

- **Product Type:** Replacement Brush Roller
- **Brand:** Rowenta / Tefal
- **Model Number (Part):** SS-7222066729
- **Compatible Vacuum Models:** Rowenta X-Nano Essential RH1128, RH1129; Tefal X-Nano Essential TY1129
- **Dimensions (Package):** 24 x 18 x 6.5 cm
- **Product Weight:** 530 g
- **ASIN:** B0DF85KC28

Note: Specifications are subject to change without prior notice.

WARRANTY INFORMATION

Specific warranty details for this replacement part are not provided in the product information. Please refer to the warranty policy provided with your original Rowenta Tefal X-Nano Essential vacuum cleaner or contact the seller, SAV Expertos, for further information regarding warranty coverage for this replacement brush roller.

SUPPORT AND CONTACT

For additional assistance, technical support, or inquiries regarding this replacement brush roller, please contact the seller:

Seller: SAV Expertos

You can typically find contact information for the seller through your purchase history on Amazon or by visiting their seller page:

[SAV Expertos Seller Page on Amazon.es](#)

Please have your product model number (RH1128, RH1129) and the replacement part number (SS-7222066729) ready when contacting support.

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found for this specific replacement part. Please refer to the images and written instructions provided in this manual for guidance.