

- [Manuals.plus](#) /
- › [Effireli](#) /
 - › Effireli RC802N Series Replacement Remote Control User Manual

Effireli YK-RC802N YAI4

User Manual for Effireli RC802N Series Replacement Remote Control

Model: YK-RC802N YAI4

PRODUCT OVERVIEW

This Effireli RC802N series replacement remote control is designed for various TCL Smart TV models, offering a direct and easy-to-use solution without the need for complex programming or setup. It functions by simply pointing and operating.



Image: Effireli RC802N Series Replacement Remote Control. This image displays the full layout of the Effireli RC802N series

replacement remote control. The remote is black with grey and red buttons. At the top left is a mute button, and at the top right is the power button. Below these are the numeric keypad (0-9) and a "LIST" button. Further down are volume and channel controls, along with a settings/gear icon button and an information button. The central navigation cluster includes a home button, up/down/left/right arrows, and an "OK" button. Below the navigation are "EXIT", "GUIDE", "TEXT", "LANG", and "SUBT." buttons. Media playback controls (rewind, play/pause, fast forward, stop) are located in the lower middle section, along with a "ZOOM" button. At the bottom, a prominent red button with "NETFLIX" is visible.

SETUP

This replacement remote control is designed for immediate use with compatible TCL Smart TV models. No programming or complex setup is required.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover open.
3. Insert two AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery cover securely.

Once batteries are installed, the remote is ready for operation.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control to navigate and control your TCL Smart TV.

- **Power Button ():** Turns the TV on or off.
- **Mute Button ():** Mutes or unmutes the TV audio.
- **Numeric Keypad (0-9):** Directly enter channel numbers or other numerical inputs.
- **LIST Button:** Accesses the channel list or other listed options.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down (^ / v):** Changes the TV channel.
- **Home Button (⬆):** Returns to the TV's home screen or main menu.
- **Navigation Arrows (Up, Down, Left, Right):** Navigate through menus and options.
- **OK Button:** Confirms selections or enters sub-menus.
- **Back Button (⬅):** Returns to the previous screen or menu.
- **EXIT Button:** Exits the current menu or application.
- **GUIDE Button:** Opens the electronic program guide (EPG).
- **TEXT Button:** Accesses teletext services.
- **LANG Button:** Changes audio language options.
- **SUBT. Button:** Toggles subtitles on or off.
- **Media Playback Controls (Rewind, Play/Pause, Fast Forward, Stop):** Control media playback for compatible content.
- **ZOOM Button:** Adjusts the screen zoom level.
- **NETFLIX Button:** Provides direct access to the Netflix application.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Avoid Damage:** Do not drop the remote, expose it to extreme temperatures, or immerse it in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and TV.	Replace batteries with new ones, ensuring correct polarity. Remove any objects blocking the signal path. Ensure you are pointing the remote directly at the TV's IR receiver.
Some buttons not working.	Specific button malfunction or TV not recognizing command.	Try replacing batteries. If the issue persists for specific buttons, the remote may be faulty.
Remote works intermittently.	Low battery power. Interference.	Replace batteries. Ensure no strong light sources (like direct sunlight) are interfering with the IR signal.
Remote does not control my TV model.	Incompatible TV model.	Verify your TV model is listed in the compatible models section. If your model is not listed or your original remote looks different, contact the manufacturer for compatibility confirmation.

SPECIFICATIONS

- Brand:** Effireli
- Model Number:** YK-RC802N YAI4
- Product Dimensions:** 9.06 x 1.38 x 0.59 inches
- Item Weight:** 2.47 ounces
- Color:** Black
- Special Feature:** No Programming Required
- Max Number of Supported Devices:** 1
- Compatible Devices:** Television

WARRANTY AND SUPPORT

Warranty Information

This product comes with a **12-month warranty** covering manufacturing defects from the date of purchase. Additionally, a **30-day money-back guarantee** is offered. Returns and exchanges are accepted within the warranty period for eligible issues.

Customer Support

For questions regarding compatibility, troubleshooting, or warranty claims, please contact the seller or manufacturer directly. It is recommended to have your product model number (YK-RC802N YAI4) and purchase details ready when contacting support. If your specific TV model number is not listed in the product description or if your original remote control appears significantly different, please reach out to confirm compatibility before use.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DF86RJX4>

More documents and user manuals: <https://manuals.plus/>