

[Manuals.plus](#) /

> [Xiaomi](#) /

> [Xiaomi 33W Power Bank with Integrated Cable - 20000mAh User Manual](#)

Xiaomi PB2030MI

Xiaomi 33W Power Bank with Integrated Cable - 20000mAh User Manual

Model: PB2030MI

INTRODUCTION

Thank you for choosing the Xiaomi 33W Power Bank with Integrated Cable. This high-capacity 20000mAh power bank is designed for convenient and fast charging of your devices on the go. It features two-way fast charging, multiple output ports, and a built-in USB-C cable for ultimate portability. Please read this manual carefully before use to ensure proper operation and maintenance.

PRODUCT OVERVIEW



Figure 1: Front view of the Xiaomi 33W Power Bank, highlighting its compact design and the integrated USB-C cable.

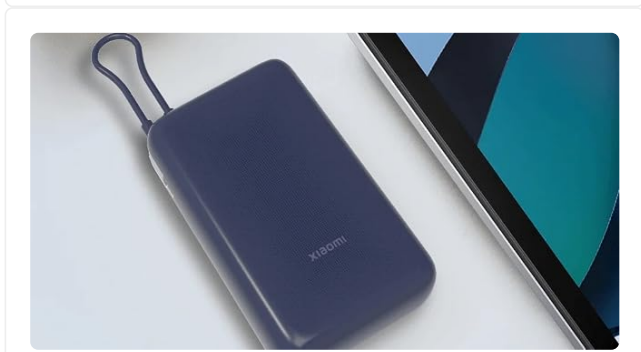


Figure 2: Close-up of the integrated USB-C cable, ready

for use. This cable eliminates the need to carry extra charging cables.

Package Contents:

- Xiaomi 33W Power Bank (Model: PB2030MI)
- User Manual
- (Note: Charging cable for the power bank itself is integrated, no separate cable is included for charging the power bank.)

SETUP

Initial Charging of the Power Bank:

1. Connect the integrated USB-C cable or a separate USB-C cable to the power bank's input port.
2. Connect the other end of the cable to a compatible USB power adapter (not included).
3. The indicator lights on the power bank will illuminate to show charging progress.
4. For optimal performance, fully charge the power bank before first use. A full charge takes approximately 5.5 hours with a 30W USB-C input.



Figure 3: Illustrates the power bank being charged. Ensure a compatible power adapter is used for fast charging.

OPERATING INSTRUCTIONS

Charging Devices:

The Xiaomi 33W Power Bank supports charging up to three devices simultaneously using its integrated USB-C cable, USB-A port, and USB-C port.

1. **Using the Integrated USB-C Cable:** Pull out the integrated USB-C cable and connect it directly to your USB-C compatible device.
2. **Using the USB-A Port:** Connect your device's USB-A charging cable to the power bank's USB-A output port.
3. **Using the USB-C Port:** Connect your device's USB-C charging cable to the power bank's USB-C output port.
4. The power bank will automatically begin charging the connected device(s). The indicator lights will show the remaining battery level.



Figure 4: A smartphone connected to the power bank, demonstrating the fast charging capability.



Figure 5: The power bank charging multiple devices concurrently, showcasing its versatility.

Checking Battery Level:

Press the power button once to check the remaining battery level indicated by the LED lights.

Low Current Charging Mode:

For charging low-current devices such as Bluetooth earbuds or smartwatches, double-press the power button to enter low-current charging mode. The indicator lights will flash sequentially. To exit this mode, double-press the power button again or wait for 2 hours, after which it will automatically exit.

MAINTENANCE

- Keep the power bank dry and away from moisture.
- Do not expose the power bank to extreme temperatures (hot or cold).
- Avoid dropping or subjecting the power bank to strong impacts.
- Clean the power bank with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the power bank in a cool, dry place when not in use for extended periods.
- Charge the power bank at least once every three months to maintain battery health if not used regularly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Power bank not charging	Cable not connected properly; faulty adapter; power bank battery depleted.	Ensure all connections are secure. Try a different USB power adapter. Allow sufficient time for initial charge.
Device not charging from power bank	Cable not connected properly; device not compatible; power bank battery depleted; low current mode not activated for small devices.	Check cable connections. Ensure power bank is charged. Activate low current mode for small devices (double-press power button). Try a different charging cable.
Slow charging	Non-fast charging cable/adapter; multiple devices charging simultaneously; device not supporting fast charge.	Use a fast-charging compatible cable and adapter. Charge fewer devices at once for faster individual charging. Ensure your device supports 33W fast charging.

SPECIFICATIONS

Model: PB2030MI

Battery Type: Lithium-Polymer

Battery Capacity: 20000mAh (74Wh)

Input (USB-C): Up to 30W

Output (USB-A, USB-C, Integrated USB-C Cable): Up to 33W (total max)

Dimensions: 7.5 x 22.3 x 3.85 cm

Weight: 400 grams

Charging Time: Approximately 5.5 hours (with 30W input)

Operating Temperature: 5°C to 35°C

WARRANTY AND SUPPORT

Xiaomi products are covered by a limited warranty. For detailed warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Xiaomi website. Keep your purchase receipt as proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or service inquiries, please contact Xiaomi customer service through their official website or the contact information provided in your product packaging.

Official Xiaomi Website: www.mi.com

SAFETY INFORMATION

- Do not disassemble, repair, or modify the power bank yourself.
- Do not expose the power bank to fire or immerse it in water.
- Keep out of reach of children.
- Dispose of the power bank responsibly according to local regulations. Do not dispose of it with household waste.
- This power bank is flight-friendly (74Wh), but always check with your airline's regulations before traveling.

