

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [MAGOLFIN](#) /

› [MAGOLFIN Golf Cart Speaker X10 User Manual](#)

MAGOLFIN X10

MAGOLFIN Golf Cart Speaker X10 User Manual

Model: X10 | Brand: MAGOLFIN

1. INTRODUCTION

Thank you for choosing the MAGOLFIN Golf Cart Speaker X10. This portable Bluetooth speaker is designed for outdoor use, particularly for golf enthusiasts, offering powerful sound, robust magnetic attachment, and excellent durability. With its IPX7 waterproof rating and long battery life, it ensures your music accompanies you through every round, rain or shine.



Image: The MAGOLFİN Golf Cart Speaker X10, highlighting its compact design and included storage case, set against a golf course backdrop.

2. PACKAGE CONTENTS

Please check the box for the following items:

- Magnetic Golf Speaker (X10)
- Storage Case & Manual
- Charging Cable & AUX-in Cable
- Hang Hook & Strap

3. KEY FEATURES

- **Ultimate Convenience:** Built-in super strong magnet and detachable lanyard for easy attachment to golf carts, bikes, or bags.
- **Powerful and Punchy Sound:** 18W high-power stereo audio driver with metal bass diaphragm for distortion-free sound and deep bass.

- **Extended Playtime:** Built-in 2500mAh high-capacity battery provides up to 24 hours of continuous music playback.
- **Durable and Resilient:** IPX7 waterproof and shockproof design with a tough rubberized coating, suitable for all outdoor adventures.
- **Immersive Surround Sound:** Supports TF cards and TWS functionality for pairing two speakers for a 360° stereo sound experience.



Image: Demonstrates the speaker's strong magnetic attachment to a golf cart, ensuring stability during use.

24H PLAYTIME

You can easily get 3-5 rounds out of a single charge, depending on how loud you listen to your music



Image: The speaker positioned on a golf course, emphasizing its long battery life suitable for multiple rounds of golf.

BASS SPEAKER WITH GREAT SOUND

The Sound has Bass and Loud Enough to Hear From
the Other Side of The Fairway



Image: An exploded view diagram illustrating the speaker's internal audio components and connectivity features like 18W loudspeaker, 3.5mm AUX, Wireless 5.3, and TWS connection.

4. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	X10
Mounting Type	Magnetic, Portable
Material	Metal
Speaker Type	Outdoor
Special Feature	Portable, Waterproof, Stereo Pairing
Recommended Uses	Golf

Feature	Specification
Compatible Devices	Smartphone
Controller Type	Button
Surround Sound Channel	2.0
Color	Blue
Battery Life	24 Hours (up to)
Product Dimensions	3.94"D x 2.28"W x 3.94"H
Item Weight	1.1 Pounds
Water Resistance Level	IPX7 Waterproof
Maximum Range	60 Feet (Bluetooth)
Wireless Technology	Bluetooth 5.3
Speaker Size	57 Millimeters
Power Source	Battery Powered (1 Lithium Ion battery included)
Speaker Output Power	18 Watts
Audio Output Mode	Stereo

5. SETUP GUIDE

5.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB charging cable to the speaker's charging port and a compatible USB power adapter (not included). The charging indicator light will show charging status and turn off when fully charged. A full charge typically takes approximately 3-4 hours.

5.2 Powering On/Off

- **To Power On:** Press and hold the Power button for 2-3 seconds until you hear an audible prompt and the LED indicator lights up.
- **To Power Off:** Press and hold the Power button for 2-3 seconds until you hear an audible prompt and the LED indicator turns off.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (the LED indicator will flash blue).
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "MAGOLFIN X10" from the list of devices.
4. Once connected, you will hear a confirmation sound, and the LED indicator will turn solid blue.

6.2 True Wireless Stereo (TWS) Pairing

For an immersive stereo experience, you can pair two MAGOLFIN X10 speakers together.

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Power button. It will enter TWS pairing mode.
3. The two speakers will automatically search for and connect to each other. You will hear a confirmation sound once paired.
4. Once TWS paired, connect your mobile device to the primary speaker via Bluetooth as described in Section 6.1.



Image: Illustrates two speakers paired for stereo sound, enhancing the audio experience within a golf cart.

6.3 Button Functions

- **Power Button:** Press and hold to power on/off. Double-press for TWS pairing.
- **Play/Pause Button:** Press to play or pause music.
- **Volume Up (+):** Press to increase volume. Press and hold for next track.
- **Volume Down (-):** Press to decrease volume. Press and hold for previous track.

7. CARE AND MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Waterproofing:** The speaker is IPX7 waterproof, meaning it can be submerged in up to 1 meter of water for 30 minutes. Ensure the charging port cover is securely closed before exposure to water.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for extended periods.

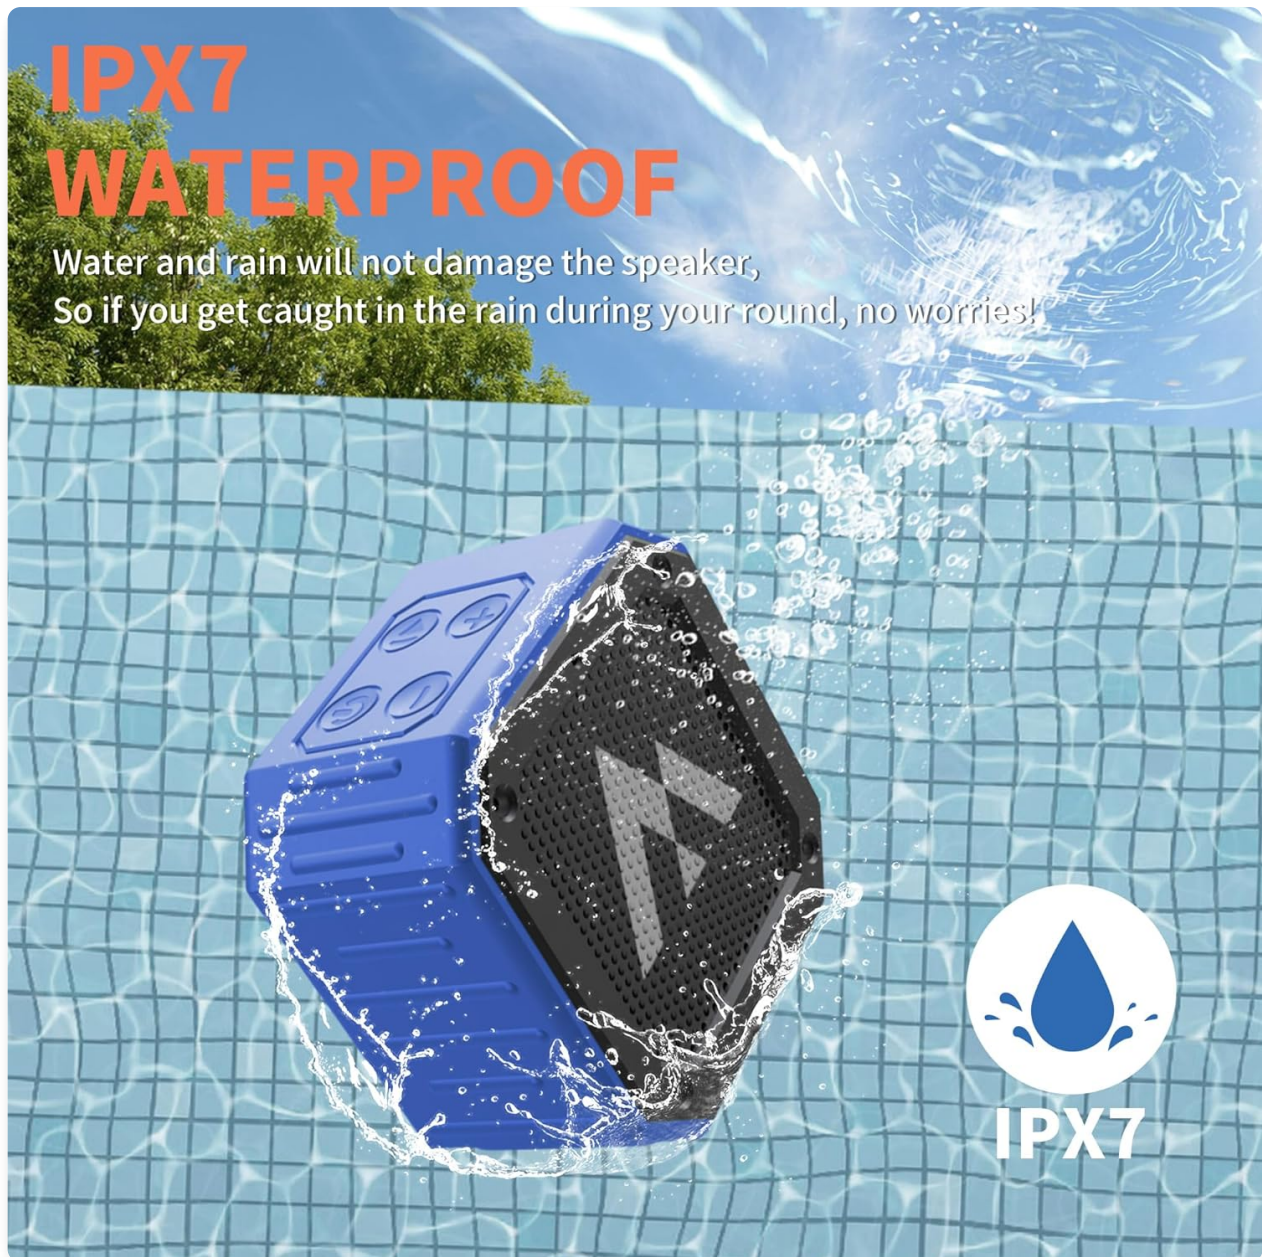


Image: The speaker demonstrating its IPX7 waterproof capability by being partially submerged in water, highlighting its resilience to rain and splashes.

8. TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Speaker does not power on.	Ensure the battery is charged. Connect to a power source and try again.
Cannot pair with Bluetooth device.	Make sure the speaker is in pairing mode (flashing blue LED). Ensure your device's Bluetooth is on and within range. Forget previous connections on your device and try pairing again.
No sound or low volume.	Increase volume on both the speaker and your connected device. Ensure the speaker is not muted.
TWS pairing fails.	Ensure both speakers are fully charged and not connected to any other Bluetooth device. Place them close to each other and try TWS pairing again.
Sound distortion.	Reduce the volume on both the speaker and your device. Ensure there are no obstructions between the speaker and your device.

9. WARRANTY AND SUPPORT

The MAGOLFIN Golf Cart Speaker X10 comes with a limited warranty. For detailed warranty information, please refer to the warranty card included in your package or visit the official MAGOLFIN website. If you encounter any issues or require technical assistance, please contact MAGOLFIN customer support through the contact information provided on our website or through your purchase platform.

MAGOLFIN Customer Support:

Website: [Visit the MAGOLFIN Store on Amazon](#)

Email: (Refer to product packaging or official website for email contact)