

Hisense 58R6E5

Hisense 58-inch Class R6 Series 4K UHD LED LCD HDR Roku TV User Manual

Model: 58R6E5

1. INTRODUCTION

Thank you for purchasing the Hisense 58-inch Class R6 Series 4K UHD LED LCD HDR Roku TV. This television is designed to provide an immersive entertainment experience with its advanced features and user-friendly interface. This manual will guide you through the setup, operation, and maintenance of your new TV.

The Hisense 58R6E5 features a stunning 4K UHD resolution (3840 x 2160 pixels) for incredible clarity and detail, complemented by HDR technology for vivid colors and impressive contrast. With the integrated Roku TV platform, you gain access to a vast library of streaming services and applications, including popular options like Netflix, Hulu, and Amazon Prime Video. The Motion Rate 120 technology minimizes motion blur, making it ideal for fast-paced action and sports. Enjoy rich, enveloping sound with the Dolby Digital Plus audio system. Powered by a Quad-Core processor and equipped with Wi-Fi connectivity, this TV ensures fast and efficient performance for all your favorite content.

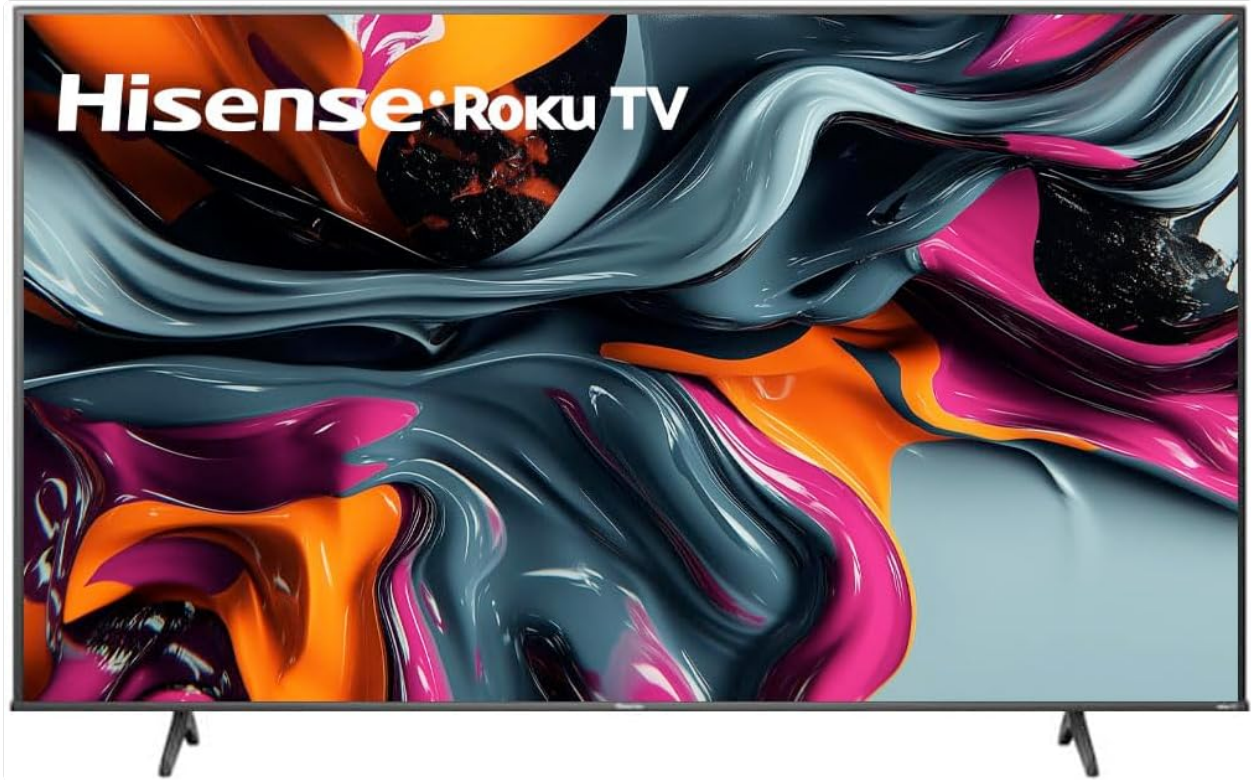


Figure 1.1: Front view of the Hisense 58-inch Class R6 Series Roku TV.



Figure 1.2: Visual representation of 4K Resolution, UHD Upscaler, and Noise Reduction technologies.

2. SETUP

2.1 Unboxing and Package Contents

Carefully remove the TV from its packaging. Ensure all components are present:

- Hisense 58-inch Roku TV
- Remote Control
- TV Stands (2)
- Screws for TV Stands
- Power Cable
- Quick Start Guide (if included)

2.2 Attaching the TV Stands

Place the TV face down on a soft, clean surface to prevent screen damage. Align each stand with the corresponding slots on the bottom of the TV. Secure the stands using the provided screws.



Figure 2.1: Illustration of TV stand attachment.

2.3 Connecting Power

Once the stands are securely attached, place the TV in its desired location. Connect the power cable to the TV's power input and then plug it into a wall outlet.

2.4 Initial Setup and Roku TV Activation

Upon first power-on, the TV will guide you through the initial setup process. This includes selecting your language, connecting to your Wi-Fi network, and activating your Roku account. Follow the on-screen instructions to complete the setup.

3. OPERATING YOUR TV

3.1 Remote Control Overview

The included remote control allows you to navigate the Roku TV interface and control your television's functions. It connects via Bluetooth for reliable operation.



Figure 3.1: Hisense Roku TV Remote Control.

3.2 Basic Functions

- **Power:** Press the power button on the remote to turn the TV on or off.
- **Volume:** Use the volume up/down buttons to adjust the sound level.
- **Input:** Press the input button to switch between connected devices (HDMI, Antenna, etc.).
- **Home:** Returns you to the Roku TV home screen.
- **Navigation:** Use the directional pad and OK button to navigate menus and select items.

3.3 Roku TV Interface and Streaming

The Roku TV home screen provides easy access to your streaming channels, connected devices, and TV settings. You can add new channels from the Roku Channel Store. Enjoy thousands of free and paid channels, including movies, TV shows, live news, and sports.

3.4 Game Mode

The Hisense R6 Series features a dedicated Game Mode to enhance your gaming experience. This mode reduces input lag, providing a smoother and more responsive gameplay. To activate Game Mode, navigate to

the picture settings while a game console is connected via HDMI.



Figure 3.2: Game Mode for smooth, ultra-responsive gaming.

3.5 Connecting External Devices

Your TV is equipped with multiple ports for connecting external devices:

- **HDMI Ports (3):** For connecting Blu-ray players, game consoles, cable boxes, etc.
- **USB Ports (1):** For connecting USB drives to view photos, videos, or listen to music.
- **Ethernet Port (1):** For a wired internet connection.
- **Optical Audio Output (1):** For connecting to a soundbar or audio receiver.

4. MAINTENANCE

4.1 Cleaning Your TV

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials. For the TV body, use a soft, dry cloth.

4.2 Software Updates

Your Roku TV will automatically check for and install software updates when connected to the internet. This ensures you have the latest features and performance improvements. You can also manually check for updates in the TV's settings menu.

5. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common troubleshooting steps:

- **No Power:** Ensure the power cable is securely plugged into both the TV and the wall outlet. Try a different outlet.
- **No Picture/Sound:** Check that the correct input source is selected. Verify all cables (HDMI, etc.) are securely connected.
- **Remote Not Working:** Ensure the remote's batteries are fresh and correctly inserted. Try re-pairing the Bluetooth remote if necessary (refer to Roku TV support for specific steps).
- **Network Connection Issues:** Restart your Wi-Fi router. Check TV network settings to ensure it's connected to the correct network.
- **Picture Quality Issues:** Adjust picture settings (brightness, contrast, color) in the TV menu. Ensure the content source is high quality.

For more detailed troubleshooting, visit the Hisense support website or the Roku TV support page.

6. SPECIFICATIONS

Below are the key specifications for the Hisense 58R6E5 TV:

Feature	Specification
Brand	Hisense
Model	58R6E5
Screen Size	58 Inches (147.3 cm visible diagonal)
Display Technology	LED
Resolution	4K UHD (3840 x 2160 Pixels)
Refresh Rate	60 Hz (Motion Rate 120)
Operating System	Roku OS
Special Features	Multi-voice assistance, Game Mode
Connectivity	Wi-Fi, Bluetooth, 3 HDMI Ports, 1 USB Port, 1 Ethernet Port, 1 Optical Port
Audio Technology	Dolby Digital Plus
Aspect Ratio	16:9
Dimensions (with stand)	127 x 23 x 73 cm (50.9 x 8.9 x 29.6 inches)
Weight	20.4 kg



Figure 6.1: TV dimensions and remote control.

7. WARRANTY AND SUPPORT

For information regarding your product's warranty, please refer to the warranty card included with your TV or visit the official Hisense website. For technical support, troubleshooting assistance, or service inquiries, please contact Hisense customer support through their official channels.

You can also find additional support and FAQs on the Roku TV support website.