

Northpoint 190485

NORTHPOINT 190485 12-LED Lantern with 4-LED Flashlight & AM/FM Radio

Model: 190485 | Brand: Northpoint

1. INTRODUCTION

The Northpoint 190485 LED Lantern is a versatile, multi-purpose product designed for various occasions and emergencies. Its built-in features make it suitable for camping, power outages, storms, and other situations requiring a reliable light source and communication. Constructed from durable yet lightweight materials, this lantern is easy to pack, carry, and ensures high safety standards. Its traditional gas lamp design incorporates 12 LED lights arranged cylindrically, providing 360-degree illumination through a transparent cover. A curved top handle offers both a comfortable grip and hanging capability, allowing for flexible placement in diverse environments like campsites.



Image: Northpoint Multifunctional Radio Lantern highlighting its features.

2. PRODUCT FEATURES

- **Multi-functional Design:** Combines a 12-LED lantern, a 4-LED flashlight, and an AM/FM radio.
- **Bright Illumination:** Features 12 high-intensity LEDs for wide-area lighting and 4 LEDs for focused flashlight use.
- **AM/FM Radio:** Built-in radio for news, weather, and entertainment during emergencies or outdoor activities.
- **Battery Operated:** Requires 3 'D' batteries (not included) for portable and cord-free operation.
- **Hanging Ring:** Integrated handle allows for easy carrying and hanging in tents or other locations.
- **Durable Construction:** Made from robust yet lightweight materials for longevity and ease of transport.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover at the bottom of the lantern.
2. Twist the cover counter-clockwise to unlock and remove it.
3. Insert 3 'D' size batteries into the compartment, ensuring correct polarity (+/-) as indicated inside.
4. Replace the battery compartment cover and twist it clockwise until securely locked.



Image: Diagram of the lantern with key components labeled, including the battery compartment.

4. OPERATING INSTRUCTIONS

4.1 Lantern Operation

1. Locate the ON/OFF & Volume Knob on the front panel of the lantern.
2. Rotate the knob clockwise to turn on the 12-LED lantern.
3. Continue rotating the knob to adjust the brightness level of the lantern.
4. Rotate the knob counter-clockwise until it clicks to turn off the lantern.



Image: The Northpoint Lantern providing illumination in a dark outdoor setting.

4.2 Flashlight Operation

1. Locate the Lantern & Flashlight ON/OFF Button on the side of the lantern.
2. Press the button once to activate the 4-LED flashlight.
3. Press the button again to turn off the flashlight.



Image: Detailed view of the integrated 4-LED flashlight.

4.3 AM/FM Radio Operation

1. Locate the AM/FM Switch on the front panel. Slide it to either 'AM' or 'FM' to select your desired band.
2. Extend the Antenna for better reception.
3. Rotate the ON/OFF & Volume Knob clockwise to turn on the radio and adjust the volume.
4. Use the AM/FM Tuner Knob to scan for radio stations.
5. Rotate the ON/OFF & Volume Knob counter-clockwise until it clicks to turn off the radio.



Image: Close-up of the radio speaker on the Northpoint Lantern.

Official Product Video: LED Camping Lantern

Video: A seller-provided video demonstrating the features and use of an LED camping lantern.

5. MAINTENANCE

- **Cleaning:** Wipe the lantern with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Battery Care:** Remove batteries if the lantern will not be used for an extended period to prevent leakage and damage.
- **Storage:** Store the lantern in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **Lantern/Flashlight Not Turning On:**
 - Check if the batteries are inserted correctly with the proper polarity.
 - Replace old or depleted batteries with new 'D' size batteries.

- **Poor Radio Reception:**

- Fully extend the antenna.
- Try repositioning the lantern to find a clearer signal.

- **Dim Light Output:**

- Ensure the brightness knob is turned to the maximum setting.
- Replace batteries if they are low.

7. SPECIFICATIONS

Feature	Specification
Model Number	190485
Light Source Type	Light Emitting Diode (LED)
Number of LEDs	12 (Lantern) + 4 (Flashlight)
Power Source	Battery Powered
Battery Type	3 'D' batteries (Alkaline recommended)
Voltage	4.5 Volts
Wattage	18 watts
Product Dimensions	5.25"L x 4"W x 10.4"H
Item Weight	1.05 Pounds
Material	Glass, Plastic
Water Resistance Level	Not Water Resistant

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Northpoint customer service directly. Keep your purchase receipt for any warranty claims.