



[Manuals.plus](#) /

> [VEVOR](#) /

> VEVOR Convection Toaster Oven User Manual

VEVOR TE283-C

VEVOR Convection Toaster Oven User Manual

Model: TE283-C

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not touch hot surfaces. Always use oven mitts or potholders when handling hot items.
- To protect against electrical shock, do not immerse cord, plug, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any other materials not specifically designed for oven use.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.

- Do not place cooking utensils or baking dishes on the glass door.

PRODUCT OVERVIEW

The VEVOR Convection Toaster Oven is a versatile 10-in-1 multifunctional appliance designed for various cooking needs. It features efficient heating and a large capacity, making it suitable for daily cooking and family gatherings.

Key Features

- ✓ **10-in-1 Multifunction:** Offers versatile cooking settings including baking, roasting, broiling, toasting, and more.
- ✓ **Efficient Heating:** Equipped with 1800W power, 6 heating elements, and a high-speed fan for 360° hot air circulation.
- ✓ **Easy Temperature Adjustment:** LCD touchscreen allows temperature adjustment from 150°F to 450°F and a timer up to 10 hours.
- ✓ **28L/29.6QT Large Capacity:** Accommodates 6 slices of toast, 8 chicken wings, a 12-inch pizza, or a 2.56lbs chicken.
- ✓ **Complete Accessories:** Includes wire rack, baking tray, pizza tray, chip tray, rotisserie spit, and gloves.

Included Components

- 1 x VEVOR Convection Toaster Oven (Model TE283-C)
- 1 x Electroplated Wire Rack
- 1 x Aluminum Baking Tray
- 1 x Non-stick Pizza Tray
- 1 x Galvanized Chip Tray
- 1 x Full Set of Rotisserie Spit
- 1 x Pair of Anti-Scald Gloves
- 1 x User Manual (this document)



Front view of the VEVOR Convection Toaster Oven, showcasing its sleek silver design and digital display.

SETUP AND INSTALLATION

- Unpacking:** Carefully remove the oven and all accessories from the packaging. Retain packaging for future storage or transport if needed.
- Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth. Wash all removable accessories (wire rack, trays, rotisserie spit) with warm, soapy water. Rinse thoroughly and dry completely.
- Placement:** Place the oven on a stable, flat, heat-resistant surface. Ensure there is adequate clearance (at least 4 inches) on all sides and above the oven for proper ventilation. Do not place the oven near flammable materials such as curtains or walls.
- Power Connection:** Ensure the power outlet matches the voltage requirements of the oven (AC120V/60Hz). Plug the power cord into a grounded electrical outlet.
- First Use Burn-Off:** It is recommended to run the oven empty for about 15 minutes at 400°F (200°C) before first use. This helps to burn off any manufacturing residues and odors. Ensure the area is well-ventilated during this process.

OPERATING INSTRUCTIONS

The VEVOR Convection Toaster Oven features an intuitive LCD touchscreen and control knobs for precise cooking. Familiarize yourself with the controls before operation.

Control Panel Overview

- LCD Display:** Shows current function, temperature, and time settings.
- Function Knob:** Used to select from the 10 cooking functions.
- Temperature Knob:** Adjusts temperature from 150°F to 450°F in 25°F increments.

- **Time Knob:** Sets cooking time from 1 minute up to 10 hours. Adjusts in 1-minute increments for settings under 30 minutes, and 5-minute increments for settings over 30 minutes.
- **Start/Cancel Button:** Initiates or stops the cooking process.
- **Turbo Convection Button:** Activates or deactivates the convection fan for faster, more even cooking.

Cooking Functions

The oven offers 10 preset cooking functions for convenience:

Visual representation of the 10 cooking functions available on the VEVOR Convection Toaster Oven.

- **Toast:** Ideal for bread and pastries.
- **Bagel:** Specifically designed for toasting bagels.
- **Bake:** For general baking, such as cakes, muffins, and casseroles.
- **Roast (Rotisserie):** Perfect for roasting meats like chicken or turkey using the rotisserie spit.
- **Broil:** For grilling and browning the top of dishes.

- **Pizza:** Optimized setting for cooking pizzas.
- **Cookies:** For baking various types of cookies.
- **Reheat:** For warming up leftovers.
- **WarmProof:** For keeping food warm or proofing dough.
- **Slow Cook:** For slow cooking dishes over an extended period.

General Operation Steps

1. **Prepare Food:** Place food on the appropriate tray or rack. For rotisserie cooking, secure the food onto the rotisserie spit.
2. **Insert Tray/Rack:** Slide the tray or rack into the desired rack position inside the oven. The oven has 4 shelf positions for flexibility.
3. **Select Function:** Turn the Function Knob to select your desired cooking mode (e.g., Bake, Roast, Pizza). The selected function will appear on the LCD display.
4. **Set Temperature:** Turn the Temperature Knob to set the desired cooking temperature. The temperature range is 150°F to 450°F.
5. **Set Time:** Turn the Time Knob to set the desired cooking duration. The timer can be set from 1 minute to 10 hours.
6. **Activate Convection (Optional):** Press the Turbo Convection Button if you wish to use the convection fan for faster and more even cooking. This is recommended for most baking and roasting tasks.
7. **Start Cooking:** Press the Start/Cancel button to begin the cooking process. The oven will preheat if necessary, and the timer will begin counting down.
8. **Monitor Progress:** You can monitor the cooking progress through the glass door. Avoid opening the door frequently to maintain internal temperature.
9. **End of Cooking:** Once the timer reaches zero, the oven will beep and automatically shut off. Carefully remove the cooked food using the provided anti-scald gloves.
10. **Cancel Operation:** To stop cooking at any time, press the Start/Cancel button.

150-450°F ADJUSTABLE TEMPERATURE

Controllable even heat distribution for successful cooking

300-400°F 10-20Min



Small Cakes/Pastry

350-450°F 20-30Min



Potato/Corn

400-450°F 15-20Min



Pizza

400-450°F 60-80Min



Whole Chicken



Adjustable every 25°F



10H Timer

Adjusting temperature and time settings using the control knobs and LCD display.

1800W HIGH POWER

360° Hot air circulation heating



6 Heating Elements



1 High Speed Fan

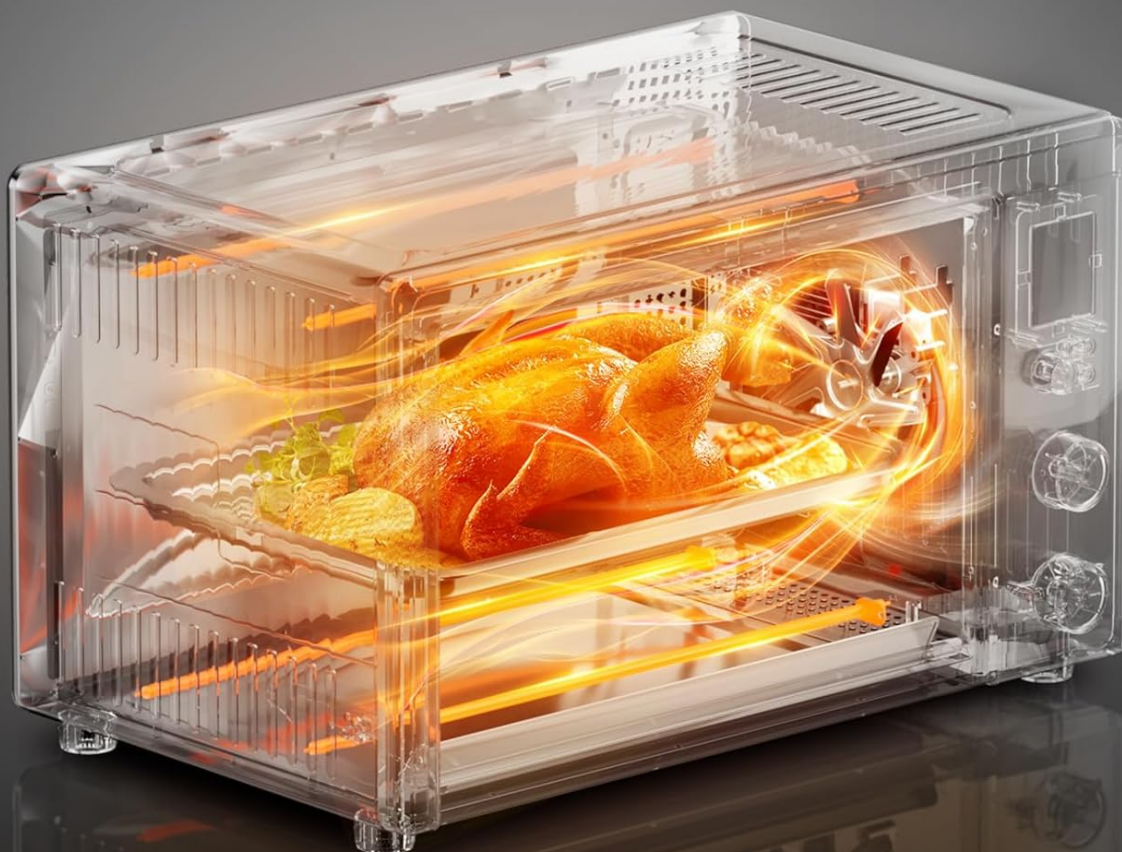


Illustration of the 360° hot air circulation heating system with 6 heating elements and a high-speed fan.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your VEVOR Convection Toaster Oven.

1. **Always Unplug:** Before cleaning, always unplug the oven from the power outlet and allow it to cool completely.
2. **Interior Cleaning:** The oven features a non-stick interior for easy cleaning. Wipe the interior surfaces with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner can be used. Avoid using steel wool, scouring pads, or abrasive cleaners as they may damage the non-stick coating.
3. **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or polishes that may scratch the finish.
4. **Accessory Cleaning:** Wash the wire rack, baking tray, pizza tray, chip tray, and rotisserie spit in warm, soapy water. Rinse thoroughly and dry completely before storing or re-inserting into the oven. These accessories are

generally not dishwasher safe unless specified.

5. **Crumb Tray:** The galvanized chip tray (crumb tray) should be removed and cleaned regularly to prevent grease buildup and potential fire hazards. Slide it out from the bottom front of the oven, empty crumbs, and wash as needed.
6. **Glass Door:** Clean the glass door with a glass cleaner or a damp cloth. For baked-on food, a non-abrasive scrub pad can be used carefully.
7. **Storage:** When not in use, ensure the oven is clean and dry. Store it in a cool, dry place.



Demonstration of cleaning the non-stick interior for easy maintenance.

TROUBLESHOOTING GUIDE

If you encounter any issues with your VEVOR Convection Toaster Oven, please refer to the following common problems and solutions before contacting customer support.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet malfunction; circuit breaker tripped.	Ensure the power cord is securely plugged into a working outlet. Check your household circuit breaker.
Food not cooking evenly.	Improper rack position; convection fan off; overcrowding.	Adjust rack position for optimal heat distribution. Ensure Turbo Convection is activated. Avoid overcrowding the oven; cook in batches if necessary.
Smoke or unusual odor during operation.	Food residue buildup; first-time use burn-off.	For first use, this is normal. For subsequent uses, unplug and allow to cool, then clean the interior and crumb tray thoroughly. Ensure no food is touching heating elements.
Temperature or timer not responding.	Control panel issue; temporary glitch.	Unplug the oven for 5 minutes, then plug it back in and try again. If the issue persists, contact customer support.
Rotisserie spit not rotating.	Improper installation; food too heavy or unbalanced.	Ensure the rotisserie spit is correctly inserted into the motor drive and support. Distribute food evenly on the spit.

PRODUCT SPECIFICATIONS

Detailed technical specifications for the VEVOR Convection Toaster Oven, Model TE283-C.

Specification	Detail
Brand	VEVOR
Model Name	Convection Oven
Item Model Number	TE283-C
Color	Silver
Capacity	28 Liters / 29.6 Quarts
Power	1800W
Voltage	AC120V/60Hz
Temperature Range	150°F - 450°F (65°C - 232°C)
Timer Range	1 minute - 10 hours
Control Type	Knob Control with LCD Display
Number of Heating Elements	6

Specification	Detail
Special Features	Timer, Steam Feature, Rust Resistant, Rotisserie Feature, Easy Temperature Adjustment, Automatic Shut-Off, Large Capacity, LED Display, Programmable
Product Dimensions (L x W x H)	19.7" x 15.4" x 12" (500 x 390 x 305 mm)
Item Weight	17.4 pounds (7.9 kg)
Door Style	Side Swing
Door Material Type	Stainless Steel
UPC	840349961057
Country of Origin	China



Item Model Number: **TE283-C**

Heating Temp Range: **150-450°F / 65-232°C**

Voltage: **AC120V/60Hz**

Timer Range: **1min-10h**

Power: **1800W**

Product Weight: **16.5 lbs / 7.5 kg**

Capacity: **28L**

Product Dimensions:

Control + Display Mode: **LCD + 3 Knobs**

19.7" x 15.4" x 12" / 500 x 390 x 305 mm

Detailed dimensions and key specifications of the VEVOR Convection Toaster Oven.

28L LARGE CAPACITY

Suitable for 6-7 people



6 Slices of Toast



8 Chicken Wings



12 inch Pizza



2.55 lbs Chicken

Visual representation of the 28L capacity, illustrating it can hold 6 slices of toast, 8 chicken wings, a 12-inch pizza, or a 2.55 lbs chicken.

WARRANTY AND CUSTOMER SUPPORT

VEVOR is committed to providing high-quality products and excellent customer service. While specific warranty details are typically provided with your purchase documentation, VEVOR generally stands behind its products.

For any questions, technical assistance, or warranty claims, please contact VEVOR customer support through their official website or the contact information provided with your product packaging.

[Visit VEVOR Store on Amazon](#)

© 2025 VEVOR. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

