



Manuals.plus /

› HOMEE /

› HOMEE Armless Home Office Chair (Model XY-C-2776-DKGY) Instruction Manual

HOMEE XY-C-2776-DKGY

HOMEE Armless Home Office Chair (Model XY-C-2776-DKGY) Instruction Manual

Your guide to assembly, operation, and maintenance.

INTRODUCTION

Thank you for choosing the HOMEE Armless Home Office Chair. This versatile chair is designed for various uses, including home office, study, work, and makeup areas. It features adjustable height, 360-degree swivel, and comfortable lumbar support to enhance your experience. This manual provides detailed instructions for assembly, operation, and maintenance to ensure safe and optimal use of your chair.

SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Keep this manual for future reference.

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the chair on a soft, clean surface to prevent scratches.
- Tighten all screws firmly, but do not overtighten. Recheck tightness periodically.
- Do not stand on the chair or use it as a step stool.
- Do not exceed the maximum weight capacity of 250 pounds (113 kg).
- Keep children away from the assembly area. Small parts can be a choking hazard.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are included in your package:

- Chair Seat
- Backrest
- Gas Lift Cylinder
- Base (5-star)
- Casters (5 pieces)
- Hardware Pack (Screws, Allen Wrench)

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly is quick and straightforward. Follow these steps carefully:

1. **Attach Casters to Base:** Insert each of the five casters into the holes at the end of each leg of the 5-star base. Push firmly until they click into place.



Figure 1: Illustration of casters being inserted into the chair base, part of the multi-functional features image.

2. **Insert Gas Lift:** Place the gas lift cylinder into the center hole of the assembled 5-star base. Ensure it sits securely.
3. **Attach Seat to Gas Lift:** Carefully align the center hole on the underside of the chair seat with the top of the gas lift cylinder. Press the seat down firmly onto the gas lift.
4. **Secure Backrest:** Attach the backrest to the seat using the provided screws and Allen wrench. Ensure the backrest is properly aligned and all screws are tightened.

An assembly video may also be available to guide you through the process. Refer to the product page for video resources.

OPERATING INSTRUCTIONS

Your HOMEE Armless Home Office Chair offers several adjustable features for personalized comfort:

- **Adjustable Height:** To adjust the seat height, locate the lever under the right side of the seat.
 - To raise the seat: While seated, pull the lever up and lift your weight slightly off the seat. The seat will rise. Release the lever at the desired height.
 - To lower the seat: While seated, pull the lever up. The seat will lower under your weight. Release the lever at the desired height.

The seat height can be adjusted from approximately 14.57 inches to 18.51 inches.



Figure 2: Illustration of the adjustable height mechanism, part of the multi-functional features image.

- **360° Swivel:** The chair is designed to rotate 360 degrees, allowing for easy movement and access to different areas of your workspace without needing to reposition the entire chair.
- **Smooth Casters:** The five silent PU casters allow for smooth and quiet movement across various floor surfaces, including hardwood floors and carpets.

MAINTENANCE

Proper care and maintenance will extend the life of your chair:

- **Cleaning:** For fabric surfaces, gently spot clean with a mild detergent and a damp cloth. Avoid harsh chemicals. For the

metal base and casters, wipe with a soft, dry cloth.

- **Tightening Screws:** Periodically check all screws and bolts to ensure they are tight. Retighten as necessary to maintain stability.
- **Caster Care:** Keep casters free of hair, dust, and debris to ensure smooth rolling.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fabric fading.

TROUBLESHOOTING

If you encounter any issues with your chair, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chair does not adjust height.	Gas lift not properly installed or faulty; lever mechanism stuck.	Ensure gas lift is fully inserted into the base and seat. Check if the lever moves freely. If issues persist, contact customer support.
Chair wobbles or feels unstable.	Screws are loose; base or casters not fully attached.	Check and tighten all assembly screws. Ensure casters are fully inserted into the base.
Casters do not roll smoothly.	Debris caught in casters; casters damaged.	Clean any hair, dust, or debris from the caster wheels. If damaged, consider replacing casters.
Squeaking noises.	Loose connections; friction between parts.	Tighten all screws. Apply a small amount of silicone lubricant to moving parts if necessary, avoiding fabric.

SPECIFICATIONS

Brand	HOMEE
Model Name	XY-C-2776-DKGY
Color	Dark Grey
Product Dimensions	25.5"D x 33.5"W x 25.5"H (Overall)
Seat Height Adjustment	14.57" to 18.51"
Back Style	Mid Back
Special Feature	Adjustable Height, 360° Swivel, Armless Design
Maximum Weight Recommendation	250 Pounds (113 kg)
Material	Fabric (High-density sponge fill), Metal Base, PU Casters
Item Weight	16 pounds (7.26 kg)
ASIN	B0DFBLN9MW



Figure 3: Detailed dimensions of the chair, including width, depth, and height ranges.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer's policy or contact HOMEE customer service directly.

Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the HOMEE Store on Amazon.

