

[Manuals.plus](#) /

› [bonsaii](#) /

› bonsaii Laminator L318-A User Manual

bonsaii L318-A

bonsaii Laminator L318-A User Manual

Model: L318-A

1. INTRODUCTION

Thank you for choosing the bonsaii L318-A Laminator. This device is designed to protect and preserve your important documents, photos, and other materials with a clear, durable finish. It supports up to A3 size documents and features multiple lamination modes for various film thicknesses. Please read this manual thoroughly before use to ensure safe and optimal operation.



家



レストラン



学校



会社

The bonsai L318-A laminator is versatile for use in various environments, including home, restaurant, school, and office settings.

2. SAFETY INSTRUCTIONS

To prevent damage to the laminator or your documents, and to ensure safe operation, please observe the following precautions:

- Always place the original document in the center of the laminating film, ensuring one side is flush against the film's sealed edge.
- Do not attempt to laminate empty film pouches. This can cause jams and damage the machine.
- Always insert the laminating film into the machine with the sealed edge first.
- Ensure the film is inserted straight and parallel to the feed slot to prevent skewed lamination or jams.
- Do not connect multiple films together or attempt to laminate them as a single unit.
- Do not cut the laminating film before processing.
- Avoid using deformed, wrinkled, or damaged laminating film.
- Do not insert two or more sheets of film simultaneously.

- After 2 hours of continuous use, it is recommended to allow the laminator to rest for 30 minutes to prevent overheating.



家庭での思い出づくりから、オフィスの書類整理、レストランのメニュー保護まで、あらゆるシーンで大活躍！

Illustrations of correct and incorrect laminating practices to avoid common errors and ensure safety.

3. PRODUCT OVERVIEW AND FEATURES


The bonsaii L318-A Laminator is designed for ease of use and high-quality results. Key features include:

- **Three Lamination Modes:** Select from 100mic (thin), 100mic (thick), or Photo mode to achieve optimal results based on your document type and film thickness.
- **Advanced Anti-Jam System:** Equipped with a newly developed anti-jam mechanism that prevents documents from being damaged by bubbles or waves during lamination.
- **Compact and A3 Compatible:** Despite supporting documents up to A3 size, the laminator features a compact design for easy storage and use in various spaces.
- **High Efficiency:** A quick warm-up time of 3-4 minutes and a laminating speed of 300mm/minute significantly reduce processing time.
- **Quiet Operation:** Engineered for low noise, making it suitable for use in quiet office environments or at home without disturbing others.
- **ABS Function (Anti-Blocking System):** In case of a jam, simply press the "Laminate Stop Button" to easily release the document, minimizing the risk of damage.
- **NTC Temperature Sensor:** Ensures stable and consistent lamination temperature for beautiful, professional-grade results.

100%詰まり防止



新開発の詰まり防止構造で、よりスムーズで
手間のかからないラミネート加工する

bonsaii

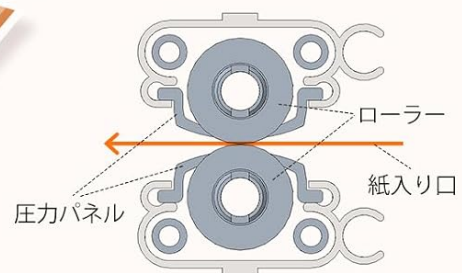

圧力パネル設計し、フィルムがローラーに巻き込まれるのを防ぐ

  旧型

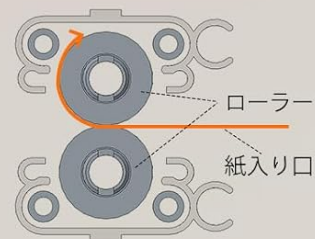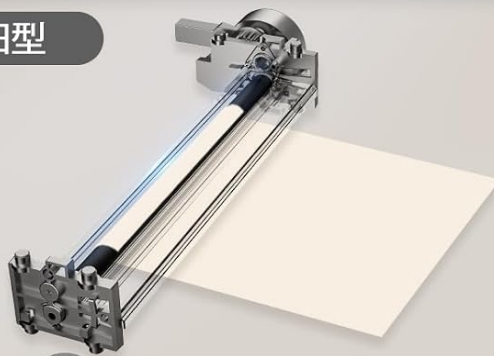

圧力パネル設計なし、フィルムがローラーに巻き込まみやすい

The control panel clearly indicates the three available lamination modes.

NTC温度センサー

安定した温度を保ちながらラミネートできるので、美しい仕上がりになる



bonsaii



旧型



The anti-jam mechanism ensures smooth film feeding and prevents document damage.

同機能よりコンパクトサイズ

bonsaii



**A4*5PCS
付属**



The NTC temperature sensor provides stable heat for consistent lamination quality.

4. SETUP

Follow these steps to set up your bonsaii L318-A Laminator:

1. **Unpack:** Carefully remove the laminator from its packaging. Retain the packaging for future storage or transport.
2. **Placement:** Place the laminator on a stable, flat, and heat-resistant surface. Ensure there is enough space behind the machine for laminated documents to exit freely.
3. **Power Connection:** Plug the power cord into a suitable electrical outlet.
4. **Included Films:** The laminator comes with 5 A4 laminating films to get you started immediately.



The compact design of the laminator allows for easy placement on various desks and surfaces.

5. OPERATING INSTRUCTIONS

Operating your bonsai L318-A Laminator is straightforward:

1. **Power On:** Turn on the laminator using the ON-OFF switch. All three indicator lamps will flash simultaneously.
2. **Select Mode:** Choose the appropriate lamination mode (100mic thin, 100mic thick, or Photo) based on your film and document.
3. **Warm-up:** Allow the machine to warm up for approximately 3.5-4 minutes. The indicator lamp for the selected mode will stop flashing and remain steadily lit when ready.
4. **Insert Document:** Place your document inside a laminating film pouch, ensuring it is centered and the sealed edge is aligned. Insert the sealed edge of the film into the laminator's feed slot.
5. **Lamination:** The laminator will automatically feed and process the document. Once it exits the machine, the lamination process is complete.
6. **Power Off:** If not laminating further, turn off the power switch.

簡単操作



1

電源をONにして、3つのインジケータ
ーランプが同時に点滅する



2

モードを選択して、3.5-4分の予熱
時間を待つ



3

対応モードのランプが常に点灯したら、
ラミネート始める



4

ラミネート完成
(使用しない場合は電源を切る)

A visual guide to the simple four-step operation process.

6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your laminator:

- **Cleaning:** Regularly wipe the exterior of the laminator with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Roller Cleaning:** If you notice residue on the rollers, run a cleaning sheet (available separately) through the machine to remove adhesive buildup.
- **Cool Down:** After approximately 2 hours of continuous operation, allow the laminator to cool down for at least 30 minutes to prevent overheating and extend its lifespan.
- **Storage:** When not in use, store the laminator in a dry, dust-free environment.



Lamination protects documents from tears, oxidation, dust, and water, preserving them for years.

7. TROUBLESHOOTING

If you encounter issues with your laminator, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Film jam	Incorrect film insertion, deformed film, or multiple films inserted.	Press the "Laminate Stop Button" (ABS function) to release the film. Ensure film is inserted straight and sealed edge first. Use only one film at a time.
Poor lamination quality (bubbles, waves)	Incorrect temperature setting, old film, or improper film insertion.	Ensure the correct mode is selected for your film thickness. Use fresh, high-quality laminating film. Ensure film is inserted straight.
Laminator not heating up	Power issue, or machine malfunction.	Check power connection. Ensure the ON-OFF switch is in the ON position. If the issue persists, contact customer support.
Laminator is noisy	Normal operation sound, or internal issue.	The bonsaii L318-A is designed for quiet operation. If the noise is excessive or unusual, discontinue use and contact customer support.

If you experience any issues not covered here, or if troubleshooting steps do not resolve the problem, please contact bonsaii customer support.

8. SPECIFICATIONS

Feature	Detail
Model	L318-A
Brand	bonsaii
Max Lamination Size	A3
Product Dimensions (L x W x H)	42.5 cm x 13.4 cm x 8.3 cm
Number of Rollers	2
Supported Film Thickness	100µm (microns)
Warm-up Time	Approx. 3-4 minutes
Laminating Speed	300 mm/minute
Lamination Modes	3 (100mic thin, 100mic thick, Photo)

A3サイズまで幅広く対応



The laminator supports a wide range of document sizes, from business cards to A3.

9. WARRANTY AND SUPPORT

The bonsai L318-A Laminator comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims, technical assistance, or any questions regarding your product, please contact bonsai customer support. Have your model number (L318-A) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question