

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SUSTEAS](#) /

› [SUSTEAS WT-8530DC 4-Slice Toaster User Manual](#)

SUSTEAS WT-8530DC

SUSTEAS WT-8530DC 4-Slice Toaster User Manual

Model: WT-8530DC

1. INTRODUCTION

Thank you for purchasing the SUSTEAS WT-8530DC 4-Slice Toaster. This appliance is designed for toasting various types of bread products efficiently and conveniently. Please read this manual thoroughly before use to ensure safe operation and optimal performance.



Image 1.1: The SUSTEAS WT-8530DC 4-Slice Toaster, showcasing its retro green design and wide slots accommodating both bread and bagels.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.

- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, press the CANCEL button, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

3. PRODUCT OVERVIEW

The SUSTEAS WT-8530DC toaster features a retro design with modern functionalities. Familiarize yourself with its components:

3 MODES

To suit your needs

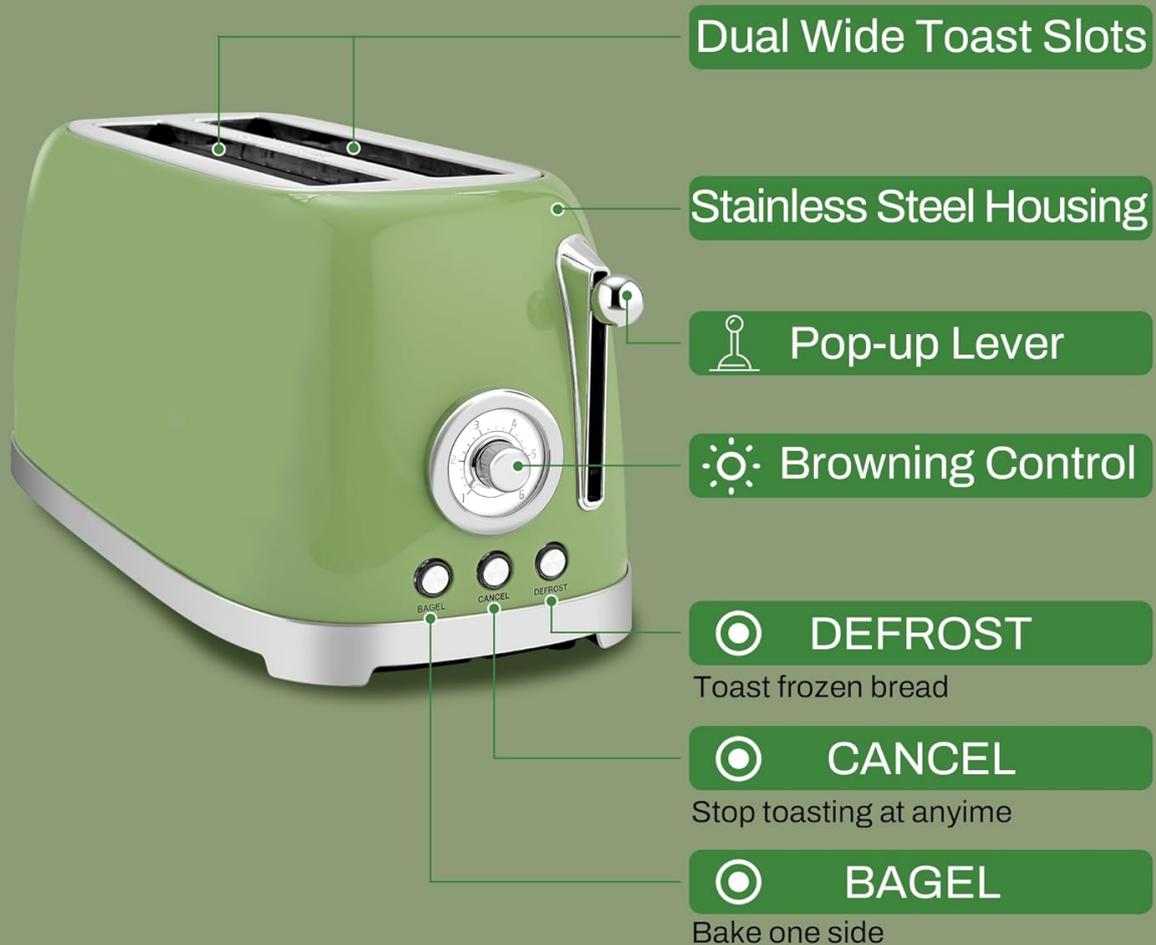


Image 3.1: Labeled diagram of the toaster's main components and function buttons.

- **Dual Wide Toast Slots:** Accommodate various bread types, including bagels and thick slices.
- **Stainless Steel Housing:** Durable and easy to clean exterior.
- **Pop-up Lever:** Initiates toasting and raises toast for easy retrieval.
- **Browning Control Dial:** Adjusts toast shade from 1 (lightest) to 6 (darkest).
- **BAGEL Button:** Toasts the cut side of bagels while warming the other.
- **CANCEL Button:** Stops the toasting cycle at any time.
- **DEFROST Button:** Thaws and toasts frozen bread.
- **Removable Crumb Tray:** Collects crumbs for easy cleaning.

4. SETUP

1. **Unpacking:** Carefully remove the toaster from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the appliance.

3. **First Use:** Before first use, operate the toaster without bread on the highest browning setting (6) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate. Allow the toaster to cool completely.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Basic Toasting

1. **Insert Bread:** Place up to four slices of bread, bagels, or other items into the wide toast slots.
2. **Select Browning Level:** Turn the browning control dial to your desired setting, from 1 (lightest) to 6 (darkest). Refer to Image 5.2 for guidance on browning levels.
3. **Start Toasting:** Press the pop-up lever down until it locks into place. The blue LED indicator for the CANCEL button will illuminate. The toasting cycle will begin.
4. **Automatic Pop-up:** Once the selected browning level is reached, the toast will automatically pop up, and the toaster will turn off.
5. **Retrieve Toast:** Carefully remove the toasted items. The high-lift lever allows for easier retrieval of smaller items.

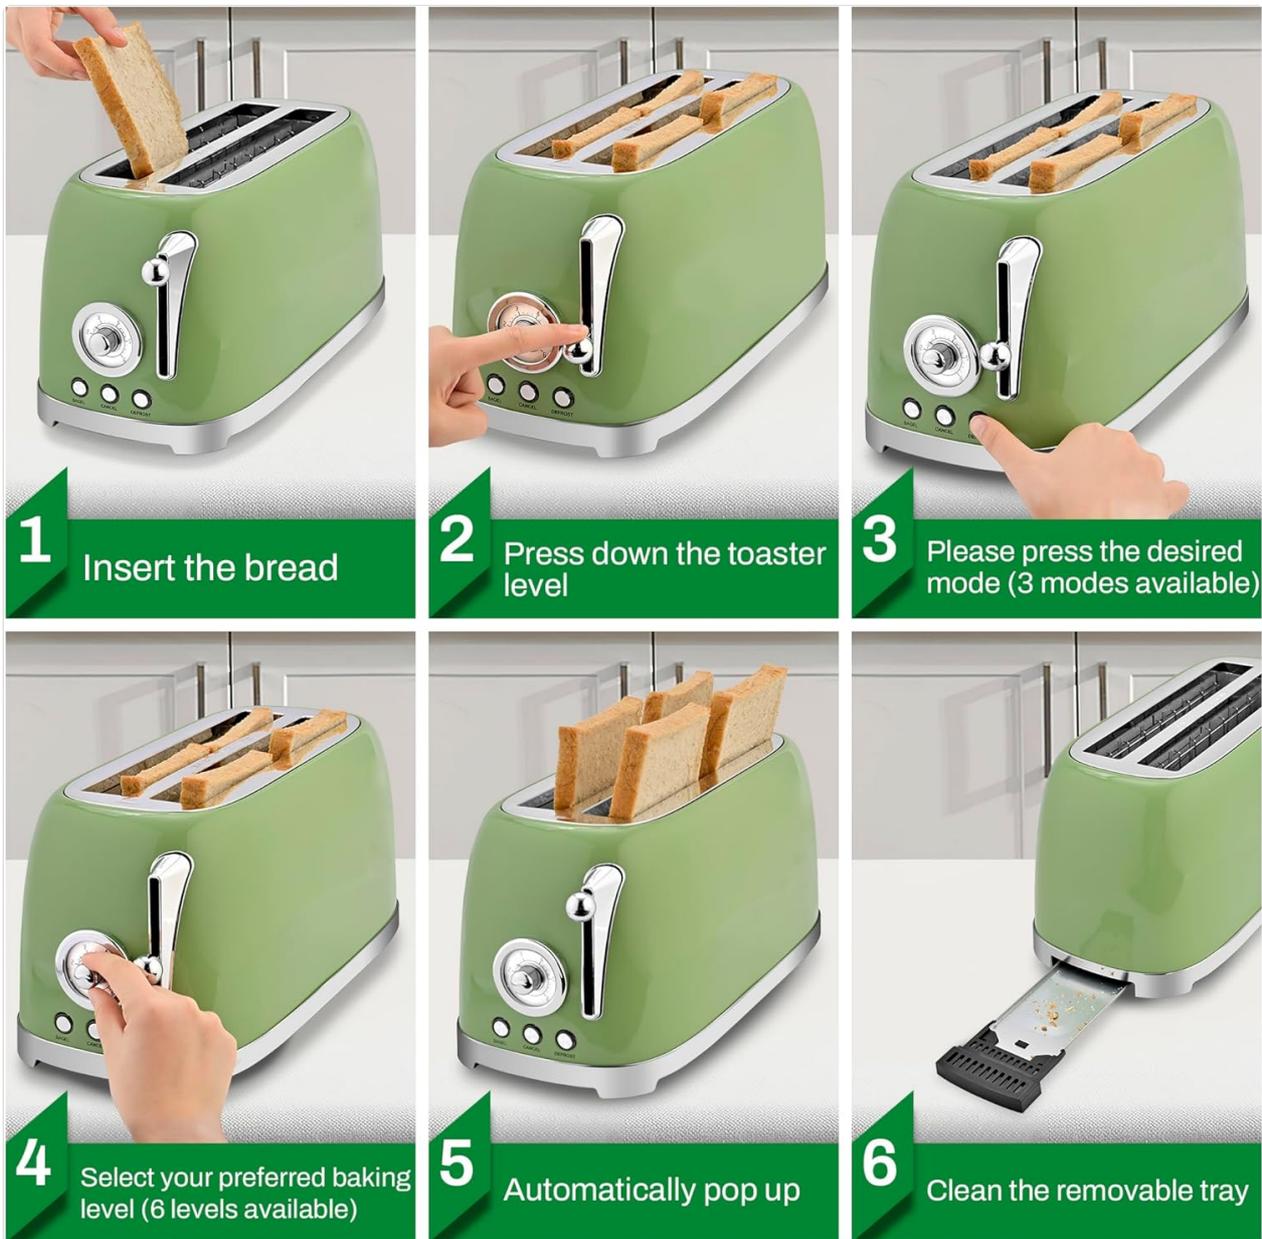


Image 5.1: Step-by-step guide for using the toaster.

5.2 Browning Settings

The toaster offers 6 browning levels to suit individual preferences:

- **Setting 1 (70 seconds):** Very light toast.
- **Setting 2 (100 seconds):** Light golden.
- **Setting 3 (120 seconds):** Medium golden.
- **Setting 4 (140 seconds):** Dark golden.
- **Setting 5 (170 seconds):** Dark brown.
- **Setting 6 (210 seconds):** Very dark, crisp.



Image 5.2: Guide to the 6 browning settings for various bread types.

5.3 Special Functions

- **BAGEL Mode:**

After inserting bagels and pressing the lever down, press the **BAGEL** button. The blue LED will illuminate. This mode toasts the cut side of the bagel while gently warming the outer side.

- **DEFROST Mode:**

After inserting frozen bread and pressing the lever down, press the **DEFROST** button. The blue LED will illuminate. This mode thaws and then toasts frozen items to your selected browning level.

- **CANCEL Function:**

To stop the toasting cycle at any point, press the **CANCEL** button. The lever will pop up, and the toaster will turn off.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before

cleaning.

2. **Crumb Tray:** Pull out the removable crumb tray located at the bottom of the toaster. Discard accumulated crumbs. Wash the tray with warm, soapy water, rinse thoroughly, and dry completely before reinserting.
3. **Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the surface. Ensure the toaster is completely dry before plugging it back in.
4. **Interior:** Do not insert any objects into the toast slots to clean. If food becomes lodged, unplug the toaster and carefully invert it to shake out the food.



Image 6.1: Removing and cleaning the crumb tray.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; circuit breaker tripped.	Ensure the toaster is securely plugged into a working outlet. Check your home's circuit breaker.
Bread does not toast evenly.	Uneven bread thickness; residual crumbs; heating element issue.	Ensure bread slices are of uniform thickness. Clean the crumb tray regularly. If the problem persists, contact customer support.
Smoke coming from toaster.	Food lodged in slots; excessive crumbs; first-time use residue.	Immediately press CANCEL and unplug. Allow to cool, then remove any lodged food or clean crumb tray. (Initial use smoke is normal).
Lever does not stay down.	Toaster not plugged in; internal mechanism issue.	Ensure the toaster is plugged into a live electrical outlet. If it still doesn't engage, contact customer support.

8. SPECIFICATIONS

Brand	SUSTEAS
Model Number	WT-8530DC
Material	Stainless Steel
Color	Retro Green
Product Dimensions (L x W x H)	16.3"D x 7.1"W x 7.4"H
Number of Slices	4
Wattage	1500 watts
Voltage	120V
Browning Settings	6
Special Features	Automatic Shut-Off, Defrost Mode, LED Indicator, Removable Crumb Tray, Rust Proof
Item Weight	5.2 Pounds



Image 8.1: Detailed dimensions of the toaster and its wide slots.

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support, please refer to the warranty card included with your product or contact SUSTEAS customer service directly. You can typically find contact details on the manufacturer's official website or through your purchase platform.

When contacting support, please have your model number (WT-8530DC) and purchase date available.

Related Documents - WT-8530DC



[SUSTEAS SL-107A Electric Grill Instruction Manual](#)

Comprehensive instruction manual for the SUSTEAS SL-107A Electric Grill, covering safety precautions, operating components, handling, usage tips, cleaning, and product specifications.

	<p>Susteas Electric Steamer Instruction Manual</p> <p>This instruction manual provides detailed information on the safe operation, application, cleaning, and maintenance of the Susteas Electric Steamer. It includes technical specifications, product structure diagrams, operation panel guidance, and fault analysis.</p>
	<p>SUSTEAS Vegetable Grater Instruction Manual</p> <p>Comprehensive guide for the SUSTEAS Vegetable Grater, covering product parts, installation, blade changing, materials, and environmental disposal information.</p>
	<p>Keenstone Toaster WT-330 V2 User Manual</p> <p>User manual for the Keenstone Toaster WT-330 V2, detailing product features, specifications, operating instructions, safety warnings, and cleaning maintenance.</p>
	<p>2011 Infiniti QX56 Tire Pressure Monitoring System Service Manual</p> <p>Comprehensive service manual detailing the diagnosis, repair, and maintenance procedures for the Tire Pressure Monitoring System (TPMS) in the 2011 Infiniti QX56, including component descriptions, DTCs, and troubleshooting guides.</p>
	<p>Hitachi WT-P Series Water Pump Operation Manual</p> <p>This manual provides operating instructions, installation guidelines, and troubleshooting tips for the Hitachi WT-P series water pumps, including models WT-P100XX through WT-P400XX. It covers safety precautions, parts identification, and maintenance procedures.</p>