

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TopMade](#) /

› [TopMade MF33 Magnetic Wallet with Apple Find My for iPhone Series User Manual](#)

TopMade MF33

TopMade MF33 Magnetic Wallet with Apple Find My for iPhone Series User Manual

INTRODUCTION

This manual provides detailed instructions for the TopMade MF33 Magnetic Wallet. This product is designed to securely hold up to four cards and integrates with Apple Find My technology, allowing you to locate your wallet if it is misplaced. It features strong magnetic attachment for compatible iPhone models and cases, along with RFID blocking for card security.



Image: The TopMade MF33 Magnetic Wallet shown attached to an iPhone, alongside a display of the Apple Find My application indicating the wallet's location.

SETUP

1. Initial Charging

The TopMade MF33 Magnetic Wallet contains a rechargeable lithium-ion battery. Before first use, or if the battery is low, charge the wallet using a Qi-enabled wireless charger. No special charging cable is required. Place the wallet flat on the wireless charger. A full charge can last up to 6 months.

Best Gift for Men & Women




Birthdays



Valentine's Day



Birthdays

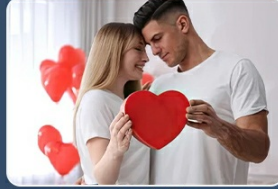

Valentine's Day



Christmas



Father's & Mother's Day



Christmas

Image: The TopMade MF33 Magnetic Wallet positioned on a wireless charging pad, illustrating the charging process. A red light indicates charging, and a green light indicates a complete charge.

2. Pairing with Apple Find My

To utilize the Apple Find My feature, follow these steps:

1. Ensure Two-Factor Authentication is enabled on your iPhone.
2. Press the power button on the wallet once to turn it on.
3. On your iPhone, turn on the 'Find My' app and Bluetooth.
4. In the 'Find My' app, navigate to 'Items' > 'Add New Item' > 'Other Supported Item' > 'Connect'. Follow the on-screen prompts to complete the pairing process.

Pocket Friendly



Image: A visual guide demonstrating the four steps to connect the TopMade MF33 Magnetic Wallet with an iPhone's Find My application.

OPERATING INSTRUCTIONS

1. Attaching to iPhone

The wallet features strong magnets (up to 3800 Gauss) for secure attachment. Simply align the wallet with the back of your MagSafe-compatible iPhone (iPhone 12 series and newer) or a MagSafe-compatible case. The wallet will snap into place.

Strong & Secrue Magnets

 
5X more strength than other magnetic wallets



Magnetic strength



TopMade



Other Wallet



Image: An exploded view diagram showing the magnetic components of the TopMade MF33 Magnetic Wallet and an iPhone, highlighting the strong magnetic attraction.

2. Inserting and Accessing Cards

The wallet is designed to securely hold 1 to 4 cards. Insert cards into the main slot. To access a card, use the thumb slot at the bottom of the wallet to push the cards upwards for easy retrieval.

Quick Access & Smart Card Holder

Tightly holds 1-4 cards equally secure



Image: A hand using the thumb slot to push a credit card out of the TopMade MF33 Magnetic Wallet for quick access.

3. Using Apple Find My Features

- **Locate Wallet:** Open the 'Find My' app on your iPhone. Your wallet's last known location will be displayed on a map.
- **Play Sound:** If your wallet is nearby but out of sight, select 'Play Sound' in the 'Find My' app. The wallet will emit an audible alarm (100dB) to help you locate it.

- **Left Behind Notifications:** Enable 'Notify When Left Behind' in the 'Find My' app to receive an alert on your iPhone if you move away from your wallet.
- **Lost Mode:** If your wallet is lost, activate 'Lost Mode' in the 'Find My' app. This can display a message and contact information to anyone who finds your wallet.



Image: An iPhone screen showing a 'Wallet left behind' notification, with the TopMade MF33 Magnetic Wallet resting on a bench, illustrating the left-behind reminder feature.



Image: The Apple Find My app on an iPhone showing the option to 'Stop Sound', while the TopMade MF33 Magnetic Wallet is depicted emitting sound waves in a room, indicating its location.

4. RFID Blocking

The wallet incorporates RFID blocking technology to protect your credit cards and other sensitive information from unauthorized scanning and demagnetization.

Secure Your Magnetic Cards

Anti-degaussing & RFID Barrier Protect Cards



Anti-degaussing
lining



Image: The TopMade MF33 Magnetic Wallet with cards inserted, illustrating its anti-degaussing and RFID barrier lining, positioned near a point-of-sale terminal.

MAINTENANCE

Cleaning

To clean the PU leather material, gently wipe the surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these may damage the finish. Allow the wallet to air dry completely before use.

Battery Care

To maintain optimal battery life, charge the wallet regularly, especially if it has not been used for an extended period. Avoid exposing the wallet to extreme temperatures.

TROUBLESHOOTING

- **Wallet not connecting to Find My:** Ensure the wallet is charged and turned on. Verify Bluetooth is enabled on your iPhone and the 'Find My' app has necessary permissions. Try restarting both your iPhone and the wallet.
- **Cards feel loose or fall out:** The wallet is designed to hold 1-4 cards securely. If you are only carrying one or two cards, ensure they are positioned correctly within the card clip. If cards consistently fall out, ensure the internal card clip is not damaged.
- **Wallet not charging:** Ensure your wireless charger is functional and the wallet is placed correctly on the charging surface. Check for any obstructions between the wallet and the charger.
- **Wallet not turning on or responding:** If the wallet becomes unresponsive, try performing a factory reset. Short press the power button 4 times, then long press the power button until you hear a BEEP. This indicates the factory reset has been completed.

SPECIFICATIONS

Feature	Detail
Model Number	MF33
Product Dimensions	0.37 x 2.59 x 3.85 inches
Item Weight	2.89 ounces
Material	PU Leather
Card Capacity	1-4 cards
Magnetic Strength	Up to 3800 Gauss
Battery Life	Up to 6 months on a single charge
Charging Method	Wireless (Qi-enabled)
Find My Features	Location Tracking, Sound Alerts, Left Behind Notifications, Lost Mode
Special Features	RFID Blocking, Rechargeable

Compatible Devices

iPhone 12, 13, 14, 15, 16, 17 Series (Pro Max/Pro/Plus/Air/Standard) with MagSafe or MagSafe-compatible cases. Not compatible with non-magnetic cases or Android phones.

Compatibility



iPhone 15/14/13/
12 Series with Magsafe



Magsafe Cases



Normal Case + Magnetic
Metal Ring



Non-magnetic cases



Leather Cases

Image: A compatibility chart indicating which iPhone models and case types are compatible with the TopMade MF33 Magnetic Wallet.

For product support, technical assistance, or warranty inquiries, please contact TopMade customer service through the retailer's platform or the official TopMade website. Please retain your proof of purchase for warranty claims.



© 2025 TopMade. All rights reserved.