

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [CCYLEZ](#) /

› [CCYLEZ Type C Mini Theremin Instruction Manual](#)

## CCYLEZ CCYLEZhgbcgyifn1

# CCYLEZ Type C Mini Theremin Instruction Manual

Model: CCYLEZhgbcgyifn1

## INTRODUCTION

The CCYLEZ Type C Mini Theremin is a portable electronic musical instrument designed for both beginners and experienced musicians. It features a color display, over 70 voices, and assisted pitch correction to enhance your playing experience. This manual provides essential information for setting up, operating, and maintaining your device.

## PACKAGE CONTENTS

Ensure all items are present in the package:

- 1x Mini Theremin Unit
- 1x Type-C USB Cable
- 2x Antennas



Image: The package includes the Mini Theremin unit, a Type-C USB cable, and two antennas.

## SETUP GUIDE

### 1. Connecting the Antennas

Carefully insert the two antennas into their designated ports on the theremin unit. One antenna is for pitch control, and the other is for volume control. Ensure they are securely connected.

Your browser does not support the video tag.

Video: This video demonstrates the process of connecting the antennas to the Mini Theremin unit.

### 2. Powering the Device

Connect the provided Type-C USB cable to the DC IN (Type-C) port on the theremin and to a suitable power source.



Image: The Type-C interface is used for power supply.

### 3. Antenna Calibration

For optimal performance, calibrate the antennas before use. The device features an antenna calibration function. Refer to the video below for a detailed tutorial on how to calibrate your theremin.

Your browser does not support the video tag.

Video: This tutorial demonstrates the antenna calibration process for the theremin.

## OPERATING INSTRUCTIONS

### Basic Operation

The Mini Theremin is designed for ease of use. Its assisted pitch correction feature helps players adjust the instrument's difficulty level and improve pitch accuracy. Control pitch by moving your hand near the pitch antenna and volume by moving your hand near the volume antenna.



Image: The Mini Theremin offers an easy-to-use interface with assisted pitch correction.

### Color Display Features

The integrated color display provides real-time visual feedback. It shows the waveform, time frequency, and current volume levels. Additionally, it displays a tone indicator and a corresponding piano tone display to help with pitch accuracy.



Image: The color display provides visual feedback on waveform, frequency, pitch, volume, and piano notes.

### Function Settings

Various device functions can be adjusted using the four control buttons on the panel. These buttons allow you to modify volumes, tones, and ringtones. Note that device configuration information will be lost after restarting unless saved through the settings interface.

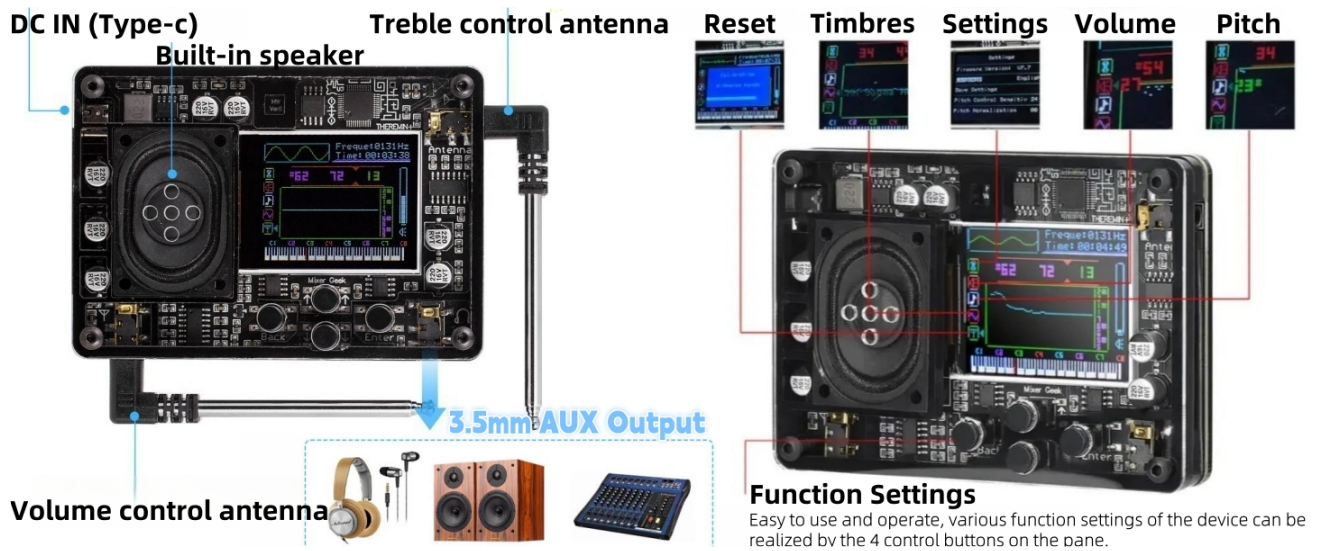


Image: Overview of the Mini Theremin's controls and ports.

## Adjustable Voices

The theremin offers over 70 types of voices, including more than 20 traditional Chinese folk instruments. Explore these options to find the perfect sound for your musical creations.

## Audio Output

The device includes self-contained speakers for direct sound output. For private practice or connecting to external audio systems, use the 3.5mm AUX output. When an external sound device like headphones or speakers is connected, the internal speakers will automatically turn off.

## MAINTENANCE

To ensure the longevity and optimal performance of your Mini Theremin, follow these maintenance guidelines:

- Keep the device clean by wiping it with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Store the theremin in a cool, dry place away from direct sunlight and extreme temperatures.
- When not in use, the antennas can be unplugged, extended, and retracted for convenient storage.
- Avoid dropping the device or subjecting it to strong impacts.

## TROUBLESHOOTING

### No Sound Output

If you experience no sound from either the built-in speaker or external devices, check the following:

- Ensure the device is properly powered on.
- Verify that the antennas are correctly plugged into their respective ports. A common user error is plugging an antenna into the headphone jack by mistake.
- Check the volume settings on the device and any connected external audio equipment.
- If using external speakers or headphones, ensure they are functioning correctly.

## Difficulty with Pitch Accuracy

If you find it challenging to achieve accurate pitch, ensure the antenna calibration process has been completed correctly. Re-calibrating the device can often resolve this issue.

## SPECIFICATIONS

Feature	Detail
Item Weight	7 ounces
Package Dimensions	7.76 x 4.49 x 1.14 inches
Item Model Number	CCYLEZhgbcgyifn1
Compatible Devices	Headphone, Speaker
Operating System	Linux, Windows, macOS
Brand	CCYLEZ
Connectivity Technology	USB
Number of Channels	1

## WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation provided with your purchase or visit the official CCYLEZ website. For technical support or inquiries, please contact CCYLEZ customer service through their official channels.

Optional protection plans are available for extended coverage:

- 3-Year Protection Plan: \$8.99
- 4-Year Protection Plan: \$11.99
- Complete Protect: \$16.99/month (covers all eligible past and future purchases)