

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ZIOVO](#) /

› [ZIOVO Z168 Android 14 Tablet User Manual](#)

ZIOVO Z168

ZIOVO Z168 Android 14 Tablet User Manual

Model: Z168

1. PRODUCT OVERVIEW

The ZIOVO Z168 is a 10.1-inch Android 14 tablet designed for versatile use, featuring an octa-core processor, ample memory, and a high-definition IPS display. It comes bundled with essential accessories to enhance productivity and entertainment.

What's in the Box

- 1 x ZIOVO Z168 10.1-inch Tablet
- 1 x Tablet Case
- 1 x Screen Protector
- 1 x Charging Adapter with Type-C Cable
- 1 x Bluetooth Keyboard
- 1 x Wireless Mouse
- 1 x Card Pin
- 1 x User Manual



Figure 1: ZIOVO Z168 Tablet and included accessories.



Figure 2: Tablet components and package contents.

2. SETUP

2.1 Initial Power On and Basic Configuration

1. **Charge the Tablet:** Before first use, connect the tablet to the charging adapter and Type-C cable to fully

charge the 8000mAh battery.

2. **Power On:** Press and hold the Power On/Off button (refer to Figure 2 for location) until the ZIOVO logo appears.
3. **Language Selection:** Follow the on-screen prompts to select your preferred language (e.g., English (United States)).
4. **Wi-Fi Connection:** Select your Wi-Fi network and enter the password to connect to the internet.
5. **Google Account Setup:** Sign in with your Google account or create a new one. This is essential for downloading apps from the Play Store.
6. **Screen Lock:** Set up a PIN, pattern, or password for added security.

2.2 Connecting Accessories (Keyboard and Mouse)

The ZIOVO Z168 tablet comes with a Bluetooth keyboard and a wireless mouse for enhanced usability.

Connecting the Bluetooth Keyboard:

1. Turn on the keyboard by sliding the ON/OFF switch.
2. Press the "Connect" button on the keyboard.
3. On your tablet, go to **Settings > Connected devices > Pair new device**.
4. Select "Bluetooth 3.0 Keyboard" from the list and tap **PAIR**.

Connecting the Wireless Mouse:

1. Open the battery back cover of the mouse and insert an AAA battery (not included).
2. Take out the USB signal receiver from the mouse's battery compartment.
3. Connect the adapter (included) to the Type-C port of the tablet.
4. Insert the USB signal receiver into the female end of the adapter.
5. Turn on the mouse using the ON/OFF switch. The mouse should now be connected.



Figure 3: Instructions for connecting the keyboard and mouse.

3. OPERATING INSTRUCTIONS

3.1 Navigating the Android 14 Interface

- **Touchscreen Navigation:** Swipe up, down, left, or right to navigate through menus, home screens, and applications. Tap to select items.
- **Home Screen:** Access frequently used apps and widgets. Swipe left or right to view additional home screens.
- **App Drawer:** Swipe up from the bottom of the home screen to access all installed applications.
- **Notifications and Quick Settings:** Swipe down from the top of the screen to view notifications and access quick settings like Wi-Fi, Bluetooth, and brightness.

3.2 Key Features and Functions

- **Split Screen:** To use split-screen mode, click the square button (overview button) at the bottom of the screen. Then, click on the app icon above the desired app and select "Split screen." This allows for multitasking, such as taking notes during a meeting or watching a movie while chatting.



Figure 4: Split-screen functionality for enhanced productivity.

- **Face Recognition:** Unlock your tablet securely using face recognition. Configure this feature in the tablet's security settings.
- **Screen Project:** Cast your tablet's display to compatible external screens.
- **Parental Control:** Utilize pre-installed parental control features to manage screen time, filter content, and monitor usage for children.
- **GPS Functionality:** The tablet includes GPS, allowing you to use navigation apps like Google Maps. Offline maps can be downloaded for use without an internet connection.
- **Cameras:** The tablet features a 5MP front camera for video chats and an 8MP rear camera with flash for capturing photos and videos.

4. MAINTENANCE

4.1 Battery Care

- The tablet is equipped with an 8000mAh battery. For optimal battery life, avoid fully discharging the battery frequently.
- Use the provided charging adapter and Type-C cable for charging.
- Avoid exposing the tablet to extreme temperatures, as this can affect battery performance and lifespan.
- If the tablet will not be used for an extended period, charge it to approximately 50-60% before storing.



Figure 5: Battery specifications and charging port.

5. TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your ZIOVO Z168 tablet.

5.1 Connectivity Issues

- **Wi-Fi Not Connecting:**

- Ensure your Wi-Fi router is on and within range.
- Restart the tablet and your Wi-Fi router.
- Verify the Wi-Fi password is entered correctly.
- Go to **Settings > Network & internet > Internet** and try forgetting the network, then reconnecting.

- **Bluetooth Device Pairing Problems:**

- Ensure the Bluetooth device (e.g., keyboard) is in pairing mode.
- Check that the tablet's Bluetooth is enabled (**Settings > Connected devices > Connection**

preferences > Bluetooth).

- Restart both the tablet and the Bluetooth device.
- For the wireless mouse, ensure the USB receiver is correctly plugged into the adapter and the adapter into the tablet's Type-C port.

5.2 Performance Issues

• Tablet is Slow or Unresponsive:

- Close unnecessary background applications.
- Clear cached data for apps (**Settings > Apps > Select App > Storage & cache > Clear cache**).
- Restart the tablet.
- Ensure sufficient storage space is available (**Settings > Storage**). Consider uninstalling unused apps or moving files to expandable storage.

• Battery Drains Quickly:

- Reduce screen brightness.
- Disable Wi-Fi, Bluetooth, and GPS when not in use.
- Limit background app refresh.
- Check for apps consuming excessive battery (**Settings > Battery**).

6. SPECIFICATIONS

Detailed technical specifications for the ZIOVO Z168 tablet.

Feature	Specification
Brand	ZIOVO
Model Name	Z168
Operating System	Android 14
Processor	Unisoc T606 Octa-Core, 2 GHz
RAM	22GB (6GB Physical + 16GB Virtual)
Internal Storage (ROM)	128GB
Expandable Storage	Up to 1TB via SD card (not included)
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 Pixels (HD IPS)
Wireless Connectivity	2.4/5G Dual Band Wi-Fi (802.11a/b/g/n/ac), Bluetooth 5.0
Rear Camera	8 MP with Flash
Front Camera	5 MP
Battery Capacity	8000mAh Lithium Polymer
Average Battery Life	8 Hours
Dimensions (LxWxH)	9.6 x 6.6 x 0.5 inches

Feature	Specification
Item Weight	3.1 pounds
Special Features	Widevine L1, GPS, Split Screen, Face Recognition, Parental Control

Your browser does not support the video tag.

Video 1: Official ZIOVO overview of the Android 14 Tablet features.

Your browser does not support the video tag.

Video 2: Detailed demonstration and review of the ZIOVO Android 14 Tablet by the seller.

7. WARRANTY AND SUPPORT

ZIOVO is committed to providing high-quality products and customer satisfaction. For product support, please refer to the included manual or the product details page on the retailer's website.

Some purchases may include a 2-year warranty with technical support. Please check your purchase documentation for specific warranty details.

For further assistance, you may visit the official ZIOVO store online or contact customer service through your purchase platform.