

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BRO A SIS](#) /

› [BRO A SIS Rustic TV Stand with 9 Drawers for 65-70 Inch TVs, Model MDF](#)

BRO A SIS MDF

BRO A SIS Rustic TV Stand with 9 Drawers

Model: MDF

Brand: BRO A SIS

Contents	Assembly	Introduction	Safety Information	Package			
		Operation	Maintenance	Troubleshooting	Specifications	Warranty &	
				Support			

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your BRO A SIS Rustic TV Stand. Designed to accommodate 65 to 70-inch televisions, this versatile furniture piece features 9 fabric drawers for ample storage, combining rustic aesthetics with modern functionality. Please read this manual thoroughly before assembly and use to ensure proper setup and safe operation.

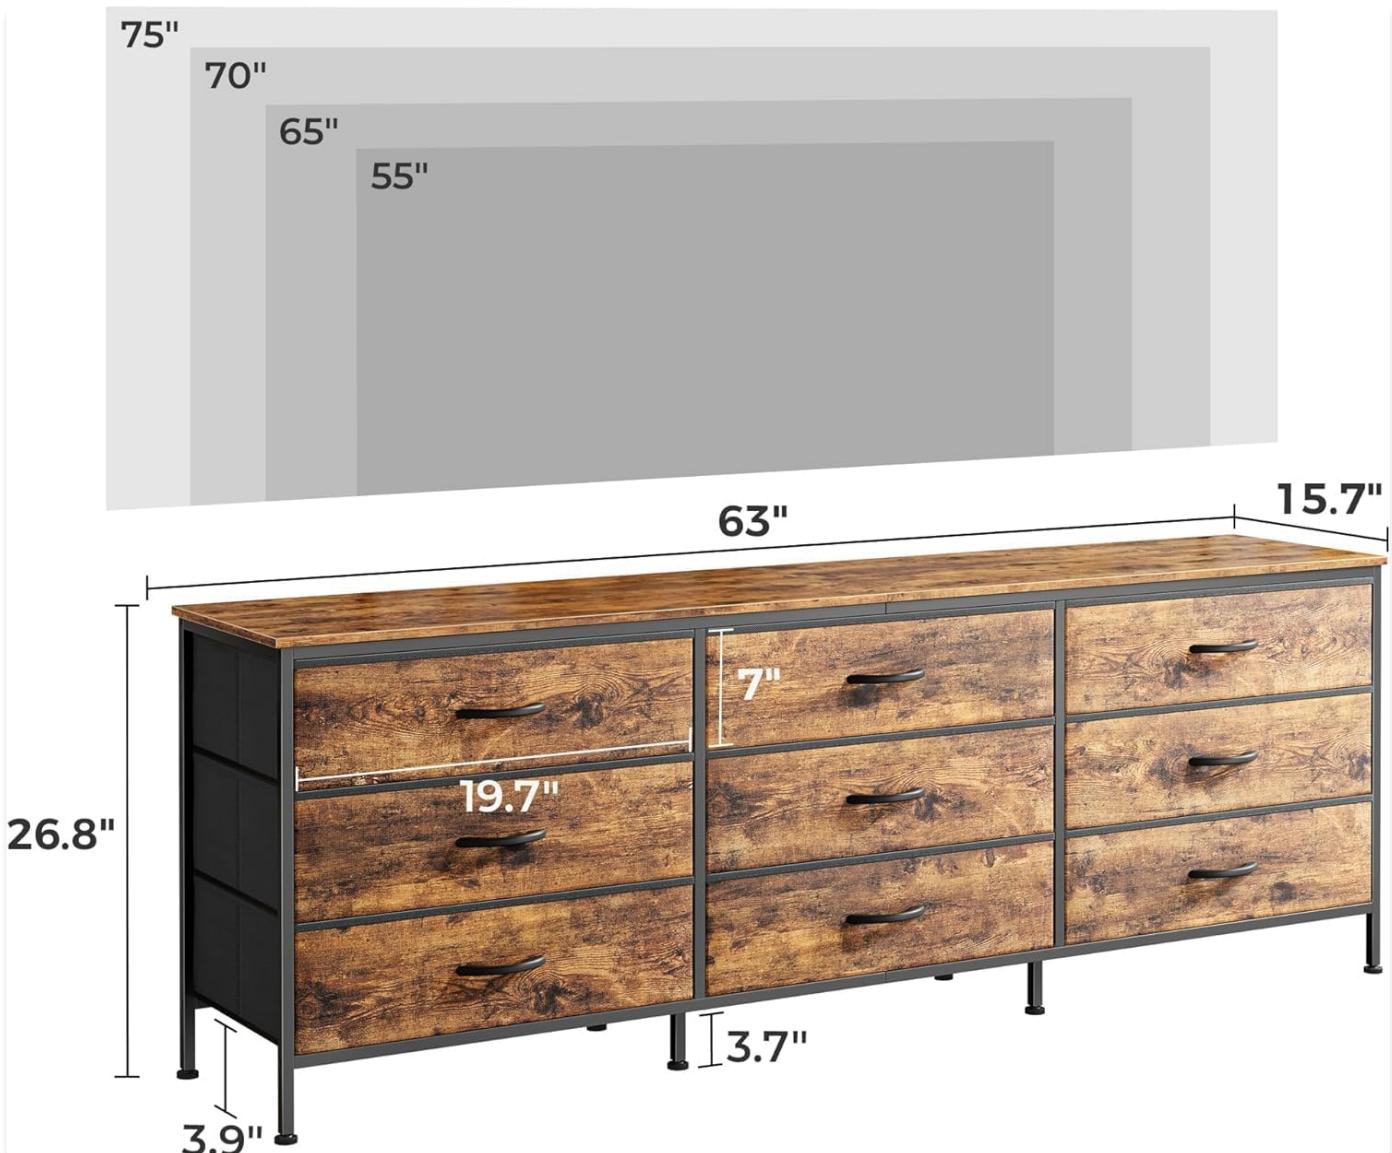


Image: The BRO A SIS Rustic TV Stand, featuring a brown finish and nine drawers, positioned at the foot of a bed in a bedroom setting.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Anti-Tip Kit:** Always install the included anti-tip kit to secure the TV stand to the wall. This prevents accidental tipping, especially important in households with children or pets.
- Weight Capacity:** Do not exceed the maximum weight capacity of the top surface or drawers. Refer to the Specifications section for details.
- Stable Placement:** Place the TV stand on a flat, level, and stable surface. Uneven surfaces can compromise stability.
- Assembly:** Assemble the product according to the instructions provided. Do not skip steps or use unauthorized parts. Two people are recommended for assembly.
- Children Safety:** Keep small parts and packaging materials away from children during assembly.
- Maintenance:** Regularly check all fasteners to ensure they remain tight. Loose fasteners can lead to instability.



Image: A diagram illustrating the anti-tip kit for wall attachment, support bars for structural integrity, and adjustable feet for leveling the TV stand.

3. PACKAGE CONTENTS

Before beginning assembly, ensure all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Metal Frame Components
- MDF Boards (Top, Middle, Bottom shelves)
- 9 Fabric Drawers with Handles
- Assembly Hardware (Screws, bolts, etc.)
- Anti-Tip Kit
- Assembly Instructions Manual

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your TV stand. It is recommended to have two people for assembly.

- 1. Unpack and Identify Parts:** Lay out all components on a clean, soft surface to prevent scratches. Verify all parts against the package contents list.
- 2. Assemble the Metal Frame:** Connect the metal frame pieces using the provided screws. Ensure all connections are secure but do not overtighten initially.
- 3. Attach MDF Shelves:** Secure the MDF shelves to the metal frame. The top, middle, and bottom shelves should be placed in their designated positions.
- 4. Install Power Outlet (if applicable):** If your model includes a power outlet, install it into the designated cutout on the top shelf and secure it.
- 5. Prepare Fabric Drawers:** Fold and assemble each fabric drawer. Insert the bottom panel and attach the handle.
- 6. Insert Drawers:** Slide the assembled fabric drawers into their respective compartments in the frame.
- 7. Install Anti-Tip Kit:** Securely attach the anti-tip kit to the back of the TV stand and to a wall stud using the provided hardware. This is a critical safety step.
- 8. Final Adjustments:** Adjust the leveling feet at the bottom of the stand to ensure it is stable and level on your floor.

Assembly Video Guide

Your browser does not support the video tag.

Video: A step-by-step demonstration of how to assemble the TV stand, including attaching the frame, shelves, and drawers. This video also shows the installation of the power outlet and the final appearance with LED lighting.

5. OPERATING INSTRUCTIONS

Placing Your Television

The top surface of this TV stand is designed to support televisions ranging from 65 to 70 inches. Ensure the television's base fits entirely within the top surface dimensions and that its weight does not exceed the stand's capacity.

TRANSPIRABLE MEJORADO

Material de tela de 3 capas



Tela

Tablero de MDF

Cuero de PU

Manija en forma
de arco

Image: A visual guide indicating the TV stand's dimensions and illustrating how various TV sizes (55, 65, 70, 75 inches) fit on the top surface, with a 55-inch TV shown as a reference.

Using the Drawers

The 9 fabric drawers provide ample storage for various items. Each drawer has a capacity of approximately 12 lbs (5.4 kg). Organize clothing, accessories, media, or other household items. Avoid overloading drawers to ensure smooth operation and longevity.



Kit antivuelco



Barras de apoyo



Patas regulables



Image: A close-up view of the TV stand's nine fabric drawers, demonstrating their capacity by showing them filled with neatly folded clothes and accessories.

Cable Management

Utilize the cable management cutout on the top shelf and the open compartments to route and organize power cords and media cables, maintaining a tidy appearance.

6. MAINTENANCE

- Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- Dusting:** Regularly dust the surfaces to prevent buildup.
- Drawer Care:** The fabric drawers can be spot cleaned with a mild detergent and water. Allow them to air dry completely before reinserting.

- **Fasteners:** Periodically check all screws and bolts to ensure they are tight. Retighten if necessary.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or damage to the finish.
- **Avoid Moisture:** Protect the unit from excessive moisture and spills. Wipe up any liquids immediately.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Uneven floor surface; loose fasteners; anti-tip kit not installed.	Adjust the leveling feet at the bottom. Check and tighten all screws and bolts. Ensure the anti-tip kit is properly installed and secured to the wall.
Drawers do not slide smoothly.	Drawer overloaded; fabric drawer not assembled correctly; obstruction in compartment.	Reduce the weight in the drawer. Reassemble the fabric drawer, ensuring the bottom panel is fully inserted. Check the compartment for any obstructions.
Missing parts or damaged components.	Manufacturing defect; shipping damage.	Do not proceed with assembly. Contact BRO A SIS customer support immediately for replacement parts.

8. SPECIFICATIONS

Brand: BRO A SIS

Model Number: MDF

Color: Marron (Brown)

Material: Engineered Wood (MDF), Metal Frame, Fabric Drawers

Product Dimensions: 160 cm (Width) x 40 cm (Depth) x 68 cm (Height) / 63 inches (Width) x 15.7 inches (Depth) x 26.8 inches (Height)

Product Weight: 18 kg (Approximately 39.7 lbs)

TV Compatibility: Up to 70 inches

Number of Drawers: 9

Drawer Capacity: Approximately 12 lbs (5.4 kg) per drawer

Style: Modern Rustic / Industrial



Tamaño de TV de referencia: 55"

Image: A detailed diagram illustrating the overall dimensions of the TV stand, including its width (63 inches), depth (15.7 inches), and height (26.8 inches), along with individual drawer dimensions.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to order replacement parts, please contact BRO A SIS customer service. Keep your purchase receipt and model number (MDF) handy for faster service.

Contact Information: Refer to the contact details provided on your purchase documentation or the official BRO A SIS website.

Return Policy: This product is eligible for a 30-day free return policy from the date of purchase. Please refer to the retailer's return policy for full details.

