

[Manuals.plus](#) /

› [Naturehike](#) /

› Naturehike One-Pole Tent 2.1m (Model: Fire) Instruction Manual

Naturehike fire

Naturehike One-Pole Tent 2.1m (Model: Fire) Instruction Manual

Model: Fire | Brand: Naturehike

INTRODUCTION

Thank you for choosing the Naturehike One-Pole Tent 2.1m. This tent is designed for 1-2 person use across four seasons, featuring a fire-resistant fabric, a dedicated chimney hole for stove use, and a skirt for enhanced weather protection. Its lightweight and easy-to-set-up design makes it ideal for various outdoor activities.

Important Safety Information:

- The tent fabric is fire-resistant, but not completely non-flammable. Always exercise extreme caution when using a wood stove or open flame inside or near the tent.
- Ensure proper ventilation when using a stove to prevent carbon monoxide buildup.
- Be aware of flying sparks, as they can still create small holes in the fabric.
- Always secure the tent properly with pegs and guy ropes, especially in windy conditions.

SETUP INSTRUCTIONS

This one-pole tent is designed for quick and easy assembly. Follow these steps for a secure setup:

1. **Prepare the Area:** Choose a flat, clear spot for your tent. Lay out the flysheet on the ground.
2. **Stake the Corners:** Secure the four corners of the flysheet to the ground using the provided pegs. Ensure the tent is stretched taut.
3. **Insert the Main Pole:** Assemble the aluminum alloy main pole. Insert the pole into the designated sleeve at the center of the tent.
4. **Raise the Tent:** Lift the tent by the main pole, ensuring it stands upright. Adjust the tension of the corner pegs

as needed.

5. **Attach Guy Ropes:** Attach and stake out all guy ropes to provide additional stability, especially in windy conditions.
6. **Install Inner Tent (Optional):** If using the inner tent, attach it to the buckles inside the flysheet. Ensure it is securely fastened. The inner tent can be removed for separate use of the flysheet.

2024 年の新しいアップグレード



収納袋の中に日本語の説明書が縫い付けられます。



収納バッグは2通りの持ち運び方法になる



スカートはロールアップ可能



ジッパー



煙突口



Image: Tent components including the main pole, flysheet, inner tent, and pegs, laid out for assembly.

インナーテントは取り外し可能



フライシートのみ

ダブルドア付きで
通気性が良い

インナーテントのみ

構造が簡単で、
換気と防虫効果がある



Image: Close-up of the inner tent showing the buckle attachment points, a lantern hook for hanging lights, and the three-way zipper for easy access.



フライシートは自由に変換可能
日除け・開放感が抜群

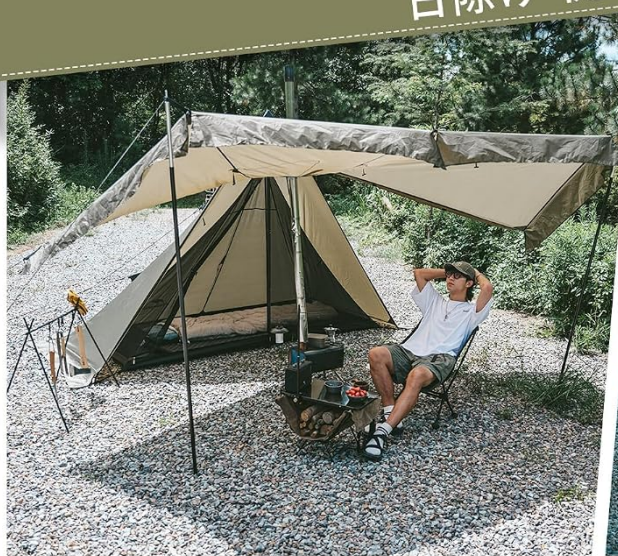 


Image: The tent configured in different ways, including the flysheet used as a standalone shelter, the inner tent used independently, and the flysheet extended with canopy poles (sold separately) to create a large front room.

OPERATING INSTRUCTIONS

Using the Chimney Hole

The tent features a fire-resistant chimney hole, allowing for the safe use of a wood stove inside. Ensure the stove pipe is properly installed and extends well beyond the tent fabric. Always maintain a safe distance between the stove and tent walls. Monitor the stove constantly and never leave it unattended.



Image: The tent set up with a wood stove, showing the stove pipe correctly exiting through the fire-resistant chimney hole.

Ventilation and Access

- **Doors:** The tent has front and rear opening doors for easy entry/exit and cross-ventilation.
- **Skirt:** The tent includes a skirt that can be rolled up or extended to prevent wind and insects from entering, and to provide additional insulation.
- **Lantern Hook:** A hook is provided inside the tent for hanging lanterns or other lightweight items.

Configuring the Flysheet

The flysheet can be used in various configurations:

- **Full Closure:** For maximum wind resistance and privacy.
- **Extended Canopy:** Use optional canopy poles (sold separately) to extend the flysheet, creating a large shaded front room for lounging or cooking.

Unit: cm

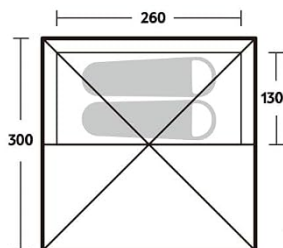 
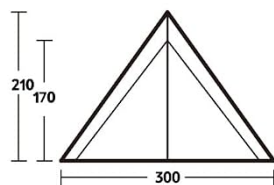 


Image: The tent with its flysheet extended using additional poles to create a spacious, shaded area at the front.

MAINTENANCE

Cleaning

- Clean the tent with a soft brush or sponge and mild soap. Do not use harsh detergents or bleach.
- Rinse thoroughly with water and allow to air dry completely before packing.
- Do not machine wash or tumble dry.

Storage

- Ensure the tent is completely dry before storing to prevent mildew and damage.
- Fold or roll the tent loosely into its storage bag. Avoid tight folding along the same creases repeatedly.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.

Care for Fire-Resistant Fabric

While the fabric is fire-resistant, prolonged exposure to high heat or direct flame can still cause damage. Regularly inspect the chimney hole area for any signs of wear or damage, especially after using a stove.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tent is unstable or sags.	Insufficient tension on pegs/guy ropes, uneven ground.	Re-tension all pegs and guy ropes. Ensure the main pole is centered and fully extended. Choose a flatter pitching area.
Zipper is difficult to open/close.	Fabric caught in zipper, excessive tension on tent fabric.	Carefully pull fabric away from the zipper. Loosen tent tension slightly if the zipper is under strain. Clean zipper teeth if dirty.
Water leakage.	Improper pitching, seam sealant wear, fabric damage.	Ensure tent is pitched tautly to allow water runoff. Inspect seams and apply seam sealant if necessary. Check for small holes and repair with a tent repair kit.
Condensation inside tent.	Lack of ventilation, high humidity.	Increase ventilation by opening doors or vents. Ensure the skirt is not completely sealed to allow some airflow.

PRODUCT SPECIFICATIONS


Feature	Detail
Brand	Naturehike
Model Number	Fire
Usage Size (L x W x H)	300 x 300 x 210 cm
Storage Size	60 x 19 x 14 cm
Product Weight	Approx. 4.8 kg (including accessories)
Occupancy	1-2 Person
Season	4 Season
Flysheet Material	210T Polyester Flame Retardant Fabric
Water Resistance	PU3000 Coating
Pole Material	Aluminum Alloy
Mounting Type	Freestanding

Feature	Detail
Number of Doors	2
Included Components	Inner tent, flysheet, aluminum alloy pole, storage bag, setup tool set


インナーテントの詳細



バックルで固定
組み立て簡単

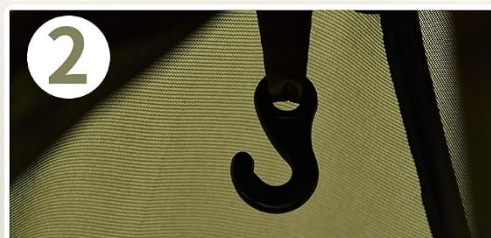

ランタンフック
ランタンを吊り上げる可能

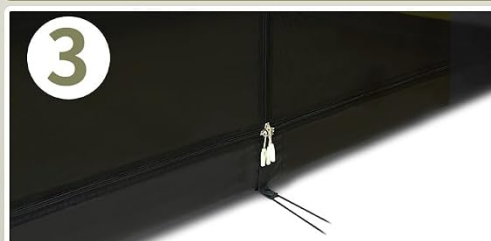 

3方開きのジッパー
出し入れしやすい

Image: Detailed diagram showing the tent's dimensions (300x300x210cm) and a visual list of all included components, such as the tent pole, inner tent, flysheet, pegs, storage bag, and compression strap.

WARRANTY AND SUPPORT

This Naturehike tent comes with a 30-day warranty from the date of purchase. If you encounter any issues or have questions regarding your product, please contact us through your Amazon purchase history. Be sure to include your order number for faster assistance.

For additional support or product information, please visit the official Naturehike store on Amazon [Naturehike Official Store](#)

